



Product Overview

The EtherCAT Slave interface can be top- or bottom-mounted. Both of these options are illustrated below.


Top-mounted Interface

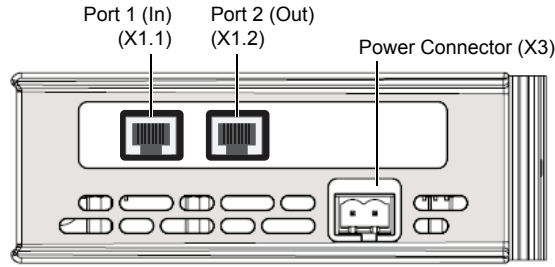

Bottom-mounted Interface

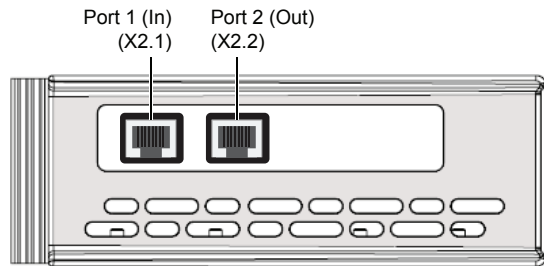

EtherCAT Connector


 


Pin	Signal
1	TD+
2	TD-
3	RD+
4, 5, 7, 8	Termination to PE
6	RD-

LED Indicators

LED	Indication	Meaning
GW Status	See Gateway Installation Sheet	
L/A 1 (X1.1 if top-mounted) (X2.1 if bottom-mounted)	Green	Link established
	Green (flickering)	Transmitting/receiving data
	Off	Link not detected or no power
RUN	Green	Device in OPERATIONAL state
	Green (blinking)	Device in PRE-OPERATIONAL state
	Green (1 flash)	Device in SAFE-OPERATIONAL state
ERR	Off	Device in INIT state
	Red	Application watchdog timeout
	Red (blinking)	General configuration error
	Red (1 flash)	Unsolicited state change
	Red (2 flashes)	Sync manager watchdog timeout
L/A 2 (X1.2 if top-mounted) (X2.2 if bottom-mounted)	Off	Normal operation (no errors)
	Green	Link established
	Green (flickering)	Transmitting/receiving data
	Off	Link not detected or no power

Top-mounted

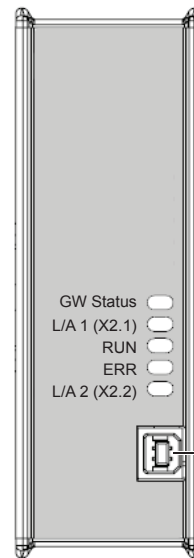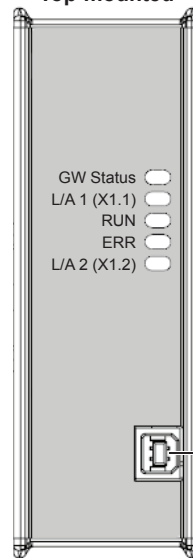

Bottom-mounted

Accessories Checklist

The following items are required for installation:

- EtherCAT configuration tool (not included)
- USB cable (included)
- EtherCAT Slave Information file (ESI file, available at www.anybus.com)
- LAN cable (not included)

Installation and Startup Summary

(Depending on your setup, some steps may not be required.)

1. Connect the gateway to the EtherCAT network
2. Connect a PC to the gateway via USB
3. Power up and configure the gateway
4. Install the ESI file in the EtherCAT configuration tool



EtherCAT[®] is a registered trademark and patented technology licensed by Beckhoff Automation GmbH, Germany.

Technical Support

Technical support, documentation and software downloads are available at www.anybus.com.