

Firmware Download Anybus X-gateway Classic

HMS Firmware Do File Settings Help Control Settings Info	wnload Tp		
Program Mode Instruction I. Connect and power up the module C Configuration S. Load Firmware/Configuration file 6. Press Start			
Auto Download	hen file loaded	File Checksums Checksum:	CRC:
	Start		





SCM-1300-012 Rev. 1.00

History

Revision	Date	Description	Responsible
1.00	2012-05-28	First release	LaV/KaD

Contents

1	Applicable Anybus Products	2
2	Requirements	2
3	Solution Overview	2
4	Step-by-Step Guide	3

1 Applicable Anybus Products

Description	Name / Type
Anybus X-gateway classic	-

2 Requirements

Description	Name / Type	Version
Firmware Download TP	Software	2.15.1.1
Anybus X-gateway classic	-	N/A

3 Solution Overview

This document describes how to download firmware to the Anybus X-gateway classic, using the Firmware Download TP tool from HMS Industrial Networks.



4 Step-by-Step Guide

This guide will provide the necessary information needed to update the firmware in the Anybus X-gateway classic, presented in a step-by-step format.

Prior to setup, please contact HMS support to obtain the appropriate firmware upgrade package for your product.

- Download and install the Firmware Download TP tool. It is available for download at <u>www.anybus.com</u>. To find the latest version, click 'Support'. Then choose 'Support tools' and 'Firmware upgrade tools'.
- **2)** If the X-gateway includes a PROFIBUS master, the PROFIBUS configuration must be valid and the gateway status LEDs shall both be solid green (no addresses above 511 should be used).
- 3) Connect and power up the Anybus X-gateway.
- 4) Start the program.

The main window of the Firmware Download TP tool looks like below. The first time the program is started, the interface (product family) may need to be specified. Choose "Anybus X-gateway".

🛞 HMS Firmware Do	wnload Tp		
File Settings Hel	þ		
Control Settings Info	File Info		
Program Mode	Instruction		
 Firmware 	1. Connect and p 2. Choose Interfa 3. Choose path to	ower up the module ce in "Settings->Chan the module in "Settin	ige Interface" gs->Change Path"
C Configuration	4. Select "Progra 5. Load Firmware 6. Press Start	m Mode" e/Configuration file	
Auto Download	when file loaded	File Checksums Checksum:	CRC:
	Sta	rt	

5) Select the "Settings Info" menu tab.

This tab shows the current settings of the Firmware Download TP. These settings will be remembered by the tool between sessions.

(🛞 HMS Firmware Download Tp - FWP_ABX_1508_V_3_19_0		
	<u>File S</u> ettings <u>H</u> elp		
	Control Settings Info File Info		
	Settings		
	Interface: Anybus X-gateway		
	Path: Serial		
	Path Name: ABX config port		
	Extended Settings		
	Target: Carrierboard		

The screenshot above shows the correct settings for the Anybus X-gateway. If the settings are correct, proceed to step 8. If not, continue with step 6.

6) Click on menu item "Settings" and choose "Change Interface". Select "Anybus X-gateway" in the list.



- 7) Click on menu item "Settings" and choose "Change Path". Select Target "Carrierboard". In the configuration window that appears, click "Create".
 - o Select menu tab "Serial".
 - o Highlight option "COM-Port Transport Provider". Click "Ok".
 - o Name the path (for example, "ABX config port").
 - o Select the COM port number for the physical COM port used to make the download.
 - A fully specified path has been configured. A window similar to the one below will appear.

Transport Paths		x
Path Name ABX config port	Provider Anybus COM-port Transport Provider	Path ID
Create Configure	Delete Ok	Cancel

Click "Ok" to go back to the main window.

- 8) Choose the menu item "File" and then "Load". Find the appropriate firmware file in the browser and click "Open" (The firmware file from HMS support will have the file extension ".fwp").
- 9) In the window that appears, select the correct hardware version and the firmware version as in the file name.

Firmware		
Please select hardware version		
1508-120 💌		
Please select software version		
Version 3.19.01		
OK Cancel		

Click "OK" to go back to the main window.

10) Back in the main window, press the button "Start". The message "Trying to connect to Anybus X-gateway" will appear at the bottom of the window.

HMS Firmware Download Tp - FWP_ABX_1508_V_3_19_0		
File Settings Help)	
Control Settings Info	File Info	
Program Mode Instruction 1. Connect and power up the module 2. Chores Interface in "Sattings Scharge Interface"		
C Configuration C		
Auto Download		
Start download v	when file loaded Checksum: N/A CRC: N/A	
Start		
Trying to connect to Anybus X-gateway		



11) If the connection times out, this window appears:



Click "no" and try again. Power cycle and wait for the gateway status LEDs to go solid green.

In some cases the download will fail, and the following window will appear:



Click "OK" and try again. Power cycle and wait for the gateway status LEDs to go solid green. If trying again does not solve this problem, the module must be restarted manually during download. Start the download and wait 90 seconds. If "Formatting file system" followed by "Download file …" does not appear after "Downloading application software", repower the gateway manually.

Download step by step in normal operation:

HMS Firmware Download Tp - FWP_ABX_1508_V_3_19_0	HMS Firmware Download Tp - FWP_ABX_1508_V_3_19_0
File Settings Help	File Settings Help
Control Settings Info File Info	Control Settings Info File Info
Program Mode Instruction 1. Connect and power up the module 1. Connect and power up the module 2. Choose Interface in "Settings->Change Interface" 3. Choose path to the module in "Settings->Change Path" C. Configuration 5. Load Firmware/Configuration file 6. Press Start	Program Mode Instruction 1. Connect and power up the module 1. Connect and power up the module Image: State of the state of
Auto Download File Checksums Checksum: N/A CRC: N/A	Auto Download File Checksums Checksum: N/A CRC: N/A
Start	Start
Downloading bootloader	Downloading application software

(HMS Firmware Download Tp - FWP_ABX_1508_V_3_19_0	HMS Firmware Download Tp - FWP_ABX_1508_V_3_19_0
File Settings Help	File Settings Help
Control Settings Info File Info	Control Settings Info File Info
Program Mode Instruction • Firmware 1. Connect and power up the module • Firmware 2. Choose Interface in "Settings->Change Interface" • C. Configuration chad Firmware/Configuration file • C. Press Start • Chad Firmware/Configuration file	Program Mode Instruction © Firmware 1. Connect and power up the module © Firmware 2. Choose Interface in "Settings->Change Interface" 3. Choose path to the module in "Settings->Change Path" C. Configuration 5. Load Firmware/Configuration file
Auto Download Start download when file loaded Start download when file loaded Start	Auto Download Start download when file loaded File Checksums Checksum: N/A CRC: N/A Start
Formatting file system	Downloading file: 0x01010010Spec.dat

Over 20 different files are downloaded. Over 20 different files are downloaded.



SCM-1300-012

Rev. 1.00

rite Settings rieip	File Settings Help
Control Settings Info File Info	Control Settings Info File Info
Program Mode Instruction 1. Connect and power up the module 1. Connect and power up the module 2. Choose Interface in "Settings->Change Interface" 3. Choose path to the module in "Settings->Change Path" 4. Select "Program Mode" 5. Load Firmware/Configuration file 6. Press Start 1. Press Start	Program Mode Instruction I. Connect and power up the module C. Choose Interface in "Settings->Change Interface" S. Choose path to the module in "Settings->Change Path A. Select "Program Mode" S. Load Firmware/Configuration file 6. Press Start
Auto Download File Checksums Checksum: N/A CRC: N/A	Auto Download Start download when file loaded File Checksums Checksum: N/A CRC: N/A
Start	Start
booting gateway	Download complete
ansfer OK Transfer OK	

12) After the firmware download is complete, restart the gateway for all changes to take effect.