

## RESI-DMX-MODBUS



Great care has been taken in the creation of the text, illustrations and program examples in this manual. RESI Informatik & Automation GmbH company, the editors and publishers accept no responsibility for any inadvertent omission of entries or for typographical or other errors herein. Nor can they be held responsible or liable for consequences arising from any errors herein.

This manual may not be copied in part or whole in any form including electronic media without the written consent of RESI Informatik & Automation GmbH. Neither may it be transferred in any other language suitable for machines or data processing facilities. Also rights for reproduction through lecture, radio or television transmission are reserved.

This documentation as well as the corresponding software are subject to copyright law and protected by RESI company. All rights reserved.

© Copyright 2009-2015 RESI Informatik & Automation GmbH

RESI Informatik & Automation GmbH	Datum: <b>23.02.2014</b>	Kunde:		Seiten
Version: <b>03.4</b>				
Bearbeitet von: <b>DI HC Sigl, MSc</b>		Titel:	<b>Manual RESI-DMX-MODBUS converter</b>	
Geprüft von: <b>DI HC Sigl, MSc</b>		Projekt:		
Geprüft von: <b>-</b>				<b>17</b>

## 1 History

Date	Editor	Description
08.03.14	DI HC Sigl	First English version
23.02.15	DI HC Sigl	Minor revisions

Weitergabe sowie Vervielfältigung dieser Unterlage, Verwertung und Mitteilung ihres Inhalts nicht gestattet, sofern nicht ausdrücklich zugestanden. Zuwidernandlungen verpflichten zu Schadenersatz. Alle Rechte vorbehalten, insbesondere für den Fall der Patenterteilung oder GM-Ertragung

Proprietary data, company confidential. All rights reserved.  
Confe de secret d'entreprise. Tous droits réservés.  
Comunicado como secreto empresarial. Reservados todos os direitos.  
Confidido como secreto industrial. Nos reservamos todos los derechos.

## 2 Contents

<b>RESI-DMX-MODBUS.....</b>	<b>1</b>
<b>1 HISTORY.....</b>	<b>2</b>
<b>2 CONTENTS .....</b>	<b>3</b>
<b>3 IMPORTANT SECURITY NOTES .....</b>	<b>4</b>
<b>4 GENERAL INFORMATION.....</b>	<b>6</b>
<b>5 MOUNTING AND CONNECTIONS .....</b>	<b>8</b>
5.1 ASSEMBLING .....	8
5.2 CLAMPS AND LEDs .....	9
5.3 DIP SWITCH SETTINGS .....	10
5.4 WIRING DIAGRAM.....	11
<b>6 FUNCTION DESCRIPTION .....</b>	<b>12</b>
<b>7 MODBUS - REGISTERS .....</b>	<b>13</b>
7.1 HINT .....	13
7.2 OVERVIEW.....	13
7.2.1 Read / Write a DMX 8 Bit register in the DMX universe .....	14
7.2.2 DMX Set amount of sending DMX registers to the DMX bus .....	14
7.2.3 DMX start/stop sending DMX bus data .....	15
7.2.4 Fill al DMX registers with same value.....	15
7.2.5 Converter Reset.....	16
7.2.6 MODBUS address.....	16
7.2.7 MODBUS baud rate .....	16
<b>8 SPECIFICATIONS .....</b>	<b>17</b>
8.1 DIMENSIONS .....	17

Weitergabe sowie Vervielfältigung dieser Unterlage, Verwertung und Mitteilung ihres Inhalts nicht gestattet, sofern nicht ausdrücklich zugestanden. Zuwidernandlungen verpflichten zu Schadenersatz. Alle Rechte vorbehalten, insbesondere für den Fall der Patenterteilung oder GM-Ertragung

Proprietary data, company confidential. All rights reserved.  
Confidential à titre de secret d'entreprise. Tous droits réservés.  
Comunicado como secreto empresarial. Reservados todos os direitos.  
Confidencial como secreto industrial. Nos reservamos todos los derechos.

### 3 IMPORTANT SECURITY NOTES



#### Danger to life through electrical current!

Only skilled personal trained in electro-engineering should perform the described steps in the following chapters. Please observe the country specific rules and standards. Do not perform any electrical work while the device is connected to power.

#### Pay attention to the following rules:

1. Disconnect the system from power
2. Secure the system against automatic power on
3. Check that the system is de-energized
4. Cover other energized parts of the system

**IMPORTANT HINT: Before you start with the installation and the initial setup of the device, you have to read this document and the attached installation guide and the actual manual for the device very carefully. You have to follow all the herein given information very accurate!**

- Only authorized and qualified personnel are allowed to install and setup the device!
- The connection of the device must be done in de-energized state!
- Do not perform any electrical work while the device is connected to power!
- Disable and secure the system against any automatic restart or power on procedure!
- The device must be operated with the defined voltage level!
- Supply voltage jitters must not exceed the technical specifications and tolerances given in the technical manuals for the product. If you do not obey this issue, the proper performance of the device cannot be guaranteed. This can lead to fail functions of the device and in worst case to a complete breakdown of the device!
- You have to obey the current EMC regulations for wiring!
- All signal, control and supply voltage cables must be wired in a way, that no inductive or capacitive interference or any other severe electrical noise disturbance may interfere with the device. Wrong wiring can lead to a malfunction of the device!
- For signal or sensor cables you have to use shielded cables, to avoid damages through induction!
- You have to obey and to apply the current safety regulations given by the ÖVE, VDE, the countries, their control authorities, the TÜV or the local energy supply company!
- Obey country-specific laws and standards!
- The device must be used for the intended purpose of the manufacturer!
- No warranties or liabilities will be accepted for defects and damages resulting from improper or incorrect usage of the device!
- Subsequent damages, which results from faults of this device, are excluded from warranty and liability!
- Only the technical data, wiring diagrams and operation instructions, which are part to the product shipment are valid!
- The information on our homepage, in our datasheets, in our manuals, in our catalogues or published by our partners can deviate from the product documentation and is not necessarily always actual, due to constant improvement of our products for technical progress!
- In case of modification of our devices made by the user, all warranty and liability claims are lost!
- The installation has to fulfill the technical conditions and specifications (e.g. operating temperatures, power supply, ...) given in the devices documentation!
- Operating our device close to equipment, which do not comply with EMC directives, can influence the functionality of our device, leading to malfunction or in worst case to a breakdown of our device!

Titel:	Manual RESI-DMX-MODBUS converter	Datum	Seite	Von
		23.02.2015	4	17

- Our devices must not be used for monitoring applications, which solely serve the purpose of protecting persons against hazards or injury, or as an emergency stop switch for systems or machinery, or for any other similar safety-relevant purposes!
- Dimensions of the enclosures or enclosures accessories may show slight tolerances on the specifications provided in these instructions!
- Modifications of this documentation is not allowed!
- In case of a complaint, only complete devices returned in original packing will be accepted!

Weitergabe sowie Vervielfältigung dieser Unterlage, Verwertung und Mitteilung ihres Inhalts nicht gestattet, soweit nicht ausdrücklich zugestanden. Zuwidernandlungen verpflichten zu Schadenersatz. Alle Rechte vorbehalten, insbesondere für den Fall der Patenterteilung oder GM-Ertragung

Proprietary data, company confidential. All rights reserved.  
Confe de secret d'entreprise. Tous droits réservés.  
Comunicado como secreto empresarial. Reservados todos os direitos.  
Confidido como secreto industrial. Nos reservamos todos los derechos.

Titel:	Manual RESI-DMX-MODBUS converter	Datum	Seite	Von
		23.02.2015	5	17

## 4 General Information

Our RESI-DMX-ASCII converter is designed for controlling a DMX light system with a DMX universe of 512 DMX addresses. The control is done with simple ASCII commands or with MODBUS/RTU registers.

Our RESI-DMX-MODBUS converter is designed to control a DMX light system with the MODBUS/RTU protocol.

To control our DMX converter you need a host system with a serial interface (RS232 or RS485), which is able to send ASCII command strings and which can receive ASCII characters. This feature is implemented in almost any media control system like CRESTRON®, AMX® or CONTROL4®. But almost every standard PLC can handle serial ASCII interfaces. Therefore your converter can be integrated everywhere. If the host system offers a MODBUS/RTU master interface, our converter can be controlled via host registers.

- Connection of up to 512 DMX lamps (depending on the extension of the DMX network)
- DMX interface is galvanic insulated from the RS232 and RS485 interface
- ASCII interface: RS232 or RS485, 9600 up to 57600 bps, 8 data bits, no parity, 1 stop bit
- ASCII address is configurable via software
- MODBUS/RTU slave interface: RS232 or RS485, 9600 up to 57600 bps, 8 data bits, no parity, 1 stop bit
- MODBUS unit address is configurable via software
- DMX interface: 250kBaud, refresh rate 1/10s
- Power supply with 24VDC
- Power consumption <0.5W
- Mountable onto a EN50022 DIN rail

Type	Description	Voltage	Power	Weight
<b>RESI-DMX-MODBUS</b>	MODBUS/RTU slave to DMX converter with RS232/RS485 interface, supports up to 512 DMX lamps, DIP switches for configuration	24 V=	<0.5W	55 g
<b>RESI-DMX-ASCII</b>	ASCII and MODBUS/RTU slave to DMX converter with RS232/RS485 interface, supports up to 512 DMX lamps, DIP switches for configuration	24 V=	<0.5W	55 g

<b>Technical data</b>			
<b>Power supply</b>			
Supply voltage	24 V= +/-10%	Storage temperature	-20...85 °C
Power LED indicator	Yes	Operation temperature	0...60°C
Power consumption	<0.5W	Humidity	25...90 % rH not condensing
		Protection class	IP20 (EN 60529)
		Dimensions LxWxH	17,5mm x 90mm x 58mm
		Weight	55g
		Mounting	on DIN EN50022 rail
<b>Modbus interface</b>		<b>Factory settings</b>	
Protocol	Modbus/RTU	ASCII/Modbus address	255
Type	RS232 or RS485	ASCII/Modbus baud rate	9600
Baud rate	9600 to 57600/8/N or E/1	ASCII/Modbus interface	RS232
Cable connection	Via clamps		
LED indicator	Yes		
Galvanic insulation to the DMX interface	Yes		
<b>DMX bus interface</b>			
Protocol	DMX512		
Baud rate	250kBits/s		
Refresh rate	10/Second		
Cable connection	Via clamps		
Galvanic insulation to serial interface	Yes		
LED indicator	Yes		
<b>Clamps</b>			
Clamp wire cross section	Max. 1,5 mm <sup>2</sup>	<b>CE conformity</b>	
Tightening torque	Max. 0.5Nm		Yes

#### IT Accessories

**RESI-MODBUS-Configurator** Free configuration software for RESI Modbus devices. Download this software from [www.RESI.cc](http://www.RESI.cc)


## 5 Mounting and Connections

### 5.1 Assembling


Proprietary data, company confidential. All rights reserved.  
Confidential à titre de secret d'entreprise. Tous droits réservés.  
Comunicado como segredo empresarial. Reservados todos os direitos.  
Confidencial como secreto industrial. Nos reservamos todos los derechos.

Our RESI-DMX-ASCII and RESI-DMX-MODBUS converters are designed for mounting on a 35mm DIN-EN50022 rail. Please note, that there are symbol photos used in the mounting pictures below.


At first, put the converter with the top side on the DIN rail (1).

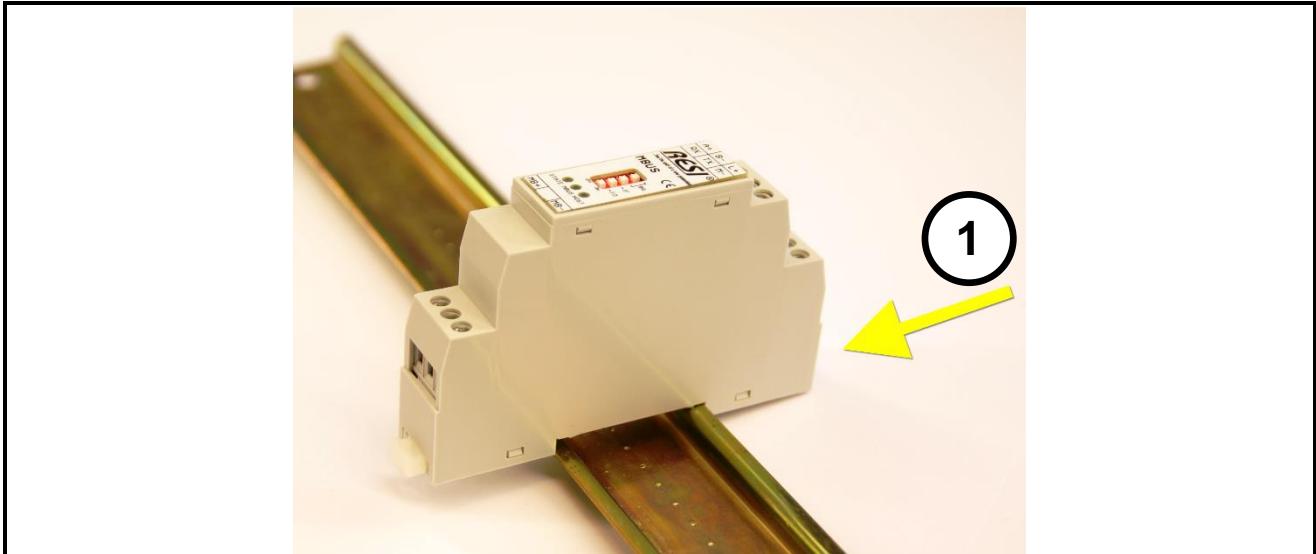

Then open the clamp lever on the bottom side with a screw driver (2) and press the device on the DIN rail (3). Release the clamp lever. The module is now placed correctly on the DIN rail.

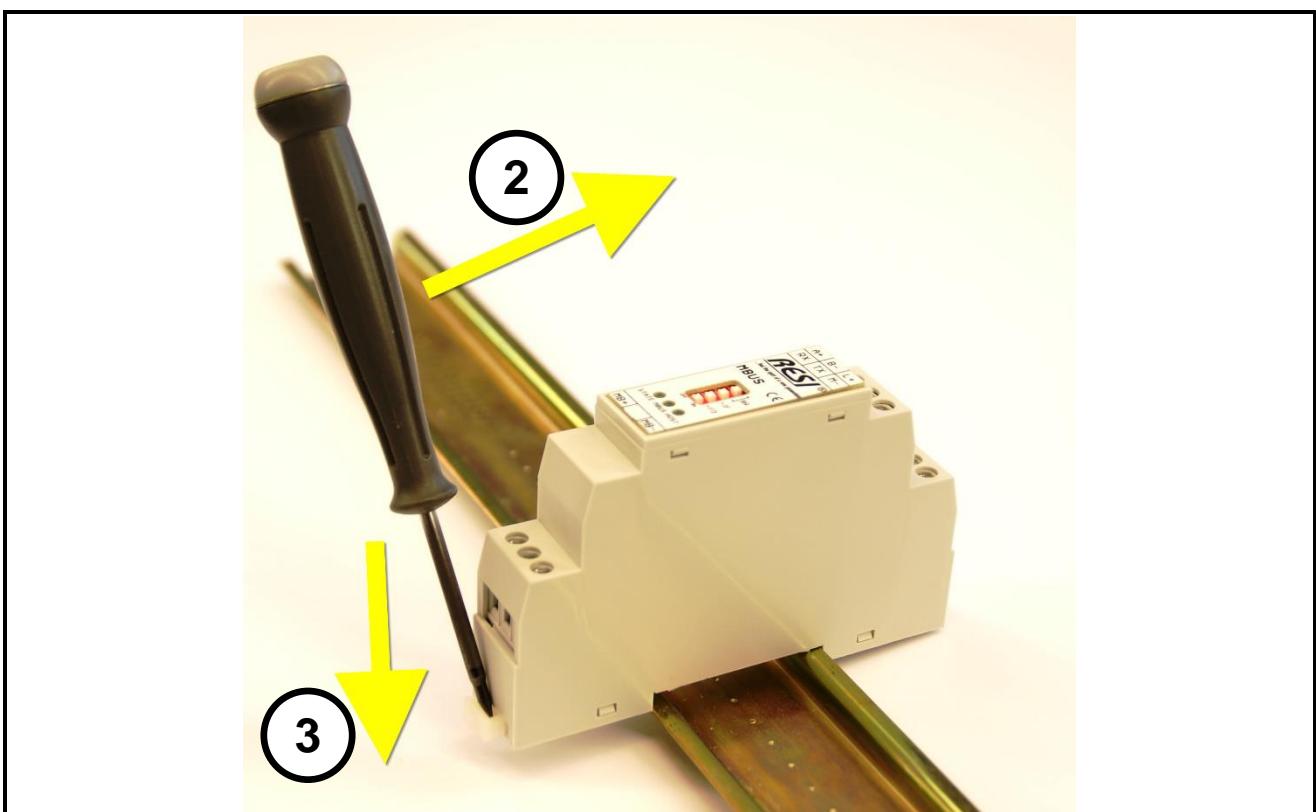

To dismount the module from the DIN rail first open the clamp lever with a screwdriver on the bottom side (4). Hold the clamp lever opened while you lift the module from the DIN rail (5). Then remove the converter from the bar with while pulling it on the top side.

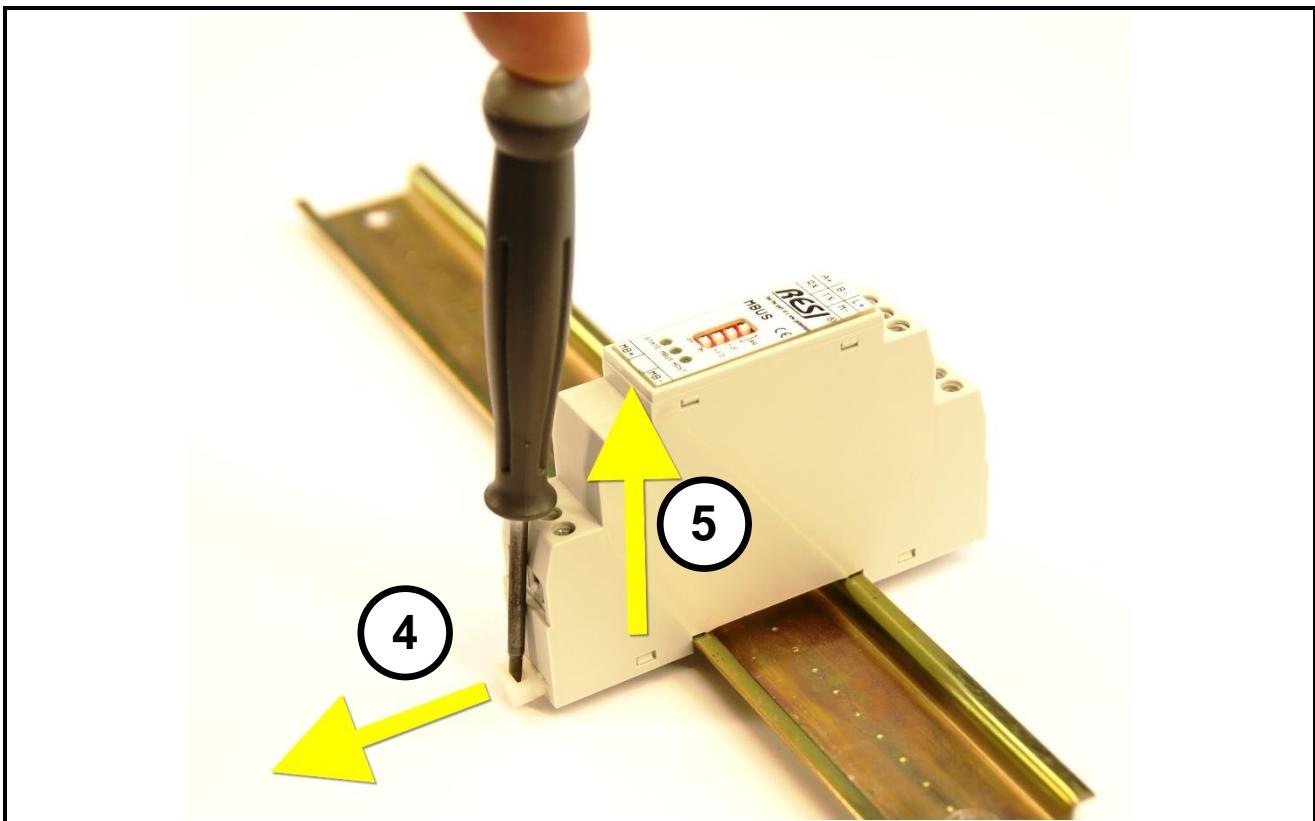

Weitergabe sowie Vervielfältigung dieser Unterlage, Verwertung und Mitteilung ihres Inhalts nicht gestattet, sofern nicht ausdrücklich zugestanden. Zuwidernahmen verpflichten zu Schadenersatz. Alle Rechte vorbehalten, insbesondere für den Fall der Patententfernung oder GM-Ertragung

Proprietary data, company confidential. All rights reserved.  
Confe de secret d'entreprise. Tous droits réservés.  
Comunicado como secreto empresarial. Reservados todos os direitos.  
Confidado como secreto industrial. Nos reservamos todos los derechos.

## 5.2 Clamps and LEDs

RESI-DMX-MODBUS	
L+	Power supply
M-	L+: 24 V=
	M-: Ground
A	RS485 Modbus/RTU slave interface
B	A: DATA+ B: DATA-
RX	RS232 Modbus/RTU slave interface
TX	RX: serial receive
M-	TX: serial transmit M-: Ground for RS232
D+	DMX Output, D+ is the DMX+ wire, D- is the
D-	DMX- wire and DG is the DMX ground wire
DG	
STATE	DMX Output, D+ is the DMX+ wire, D- is the DMX- wire and DG is the DMX ground wire
DMX	State LED, flashes slowly, if the converter is ok, flashes fast if there is an internal error in the converter
HOST	DMX bus LED is always on, if the DMX converter sends cyclic data to the DMX lamps. Flashes fast (every 250ms), if the DMX sending is stopped by the user and no data is send to the DMX lamps.
	HOST LED, Flashes shortly, if the HOST communicates with the converter.

Table: Description of connectors and LEDs of the RESI-DMX-MODBUS converter

### 5.3 DIP switch settings

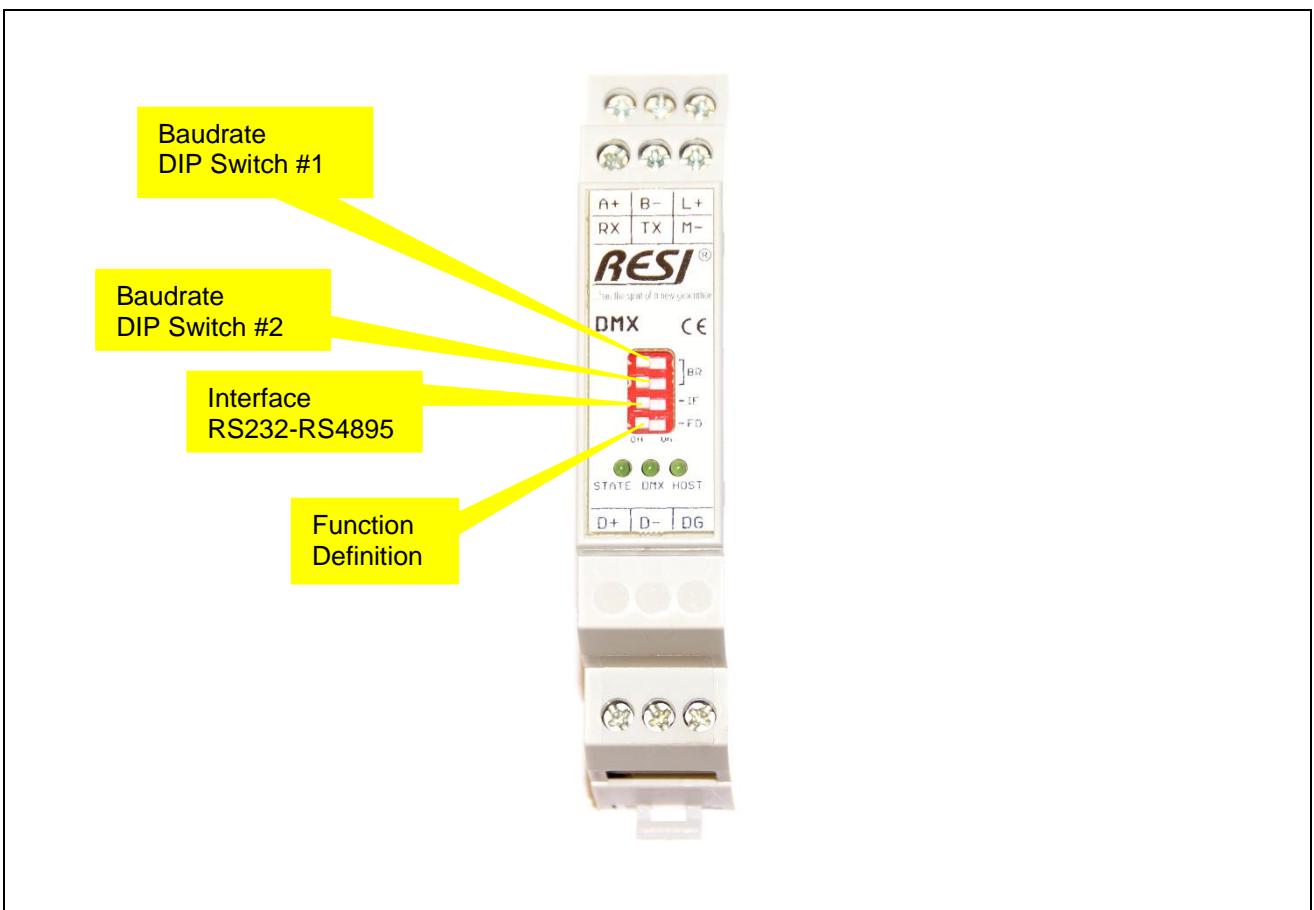


Illustration: Description of the DIP switch settings and LED status displays

DIP Switch	RESI-DMX-MODBUS
Baudrate BR	Use DIP Switches 1+2 to select baud rate: OFF OFF: 9600Bd ON OFF: 19200Bd OFF ON: 38400Bd ON ON: 57600Bd <b>HINT:</b> The correct parity (NONE, EVEN or ODD) is configured with the PC software, not via DIP switches!
Interface IF	Select serial interface for MODBUS/RTU slave OFF=RS232 ON=RS485
Function Definition FD	Selects special Functions OFF=Use Modbus RTU slave bus address from FLASH memory ON=Use always slave address 255
HINT	After changing the DIP switches the converter reboots immediately, so no power off or on is necessary. After reboot all the LEDs are on for half a second to signal the power on sequence.

Table: Description of DIP Switch functions

## 5.4 Wiring diagram

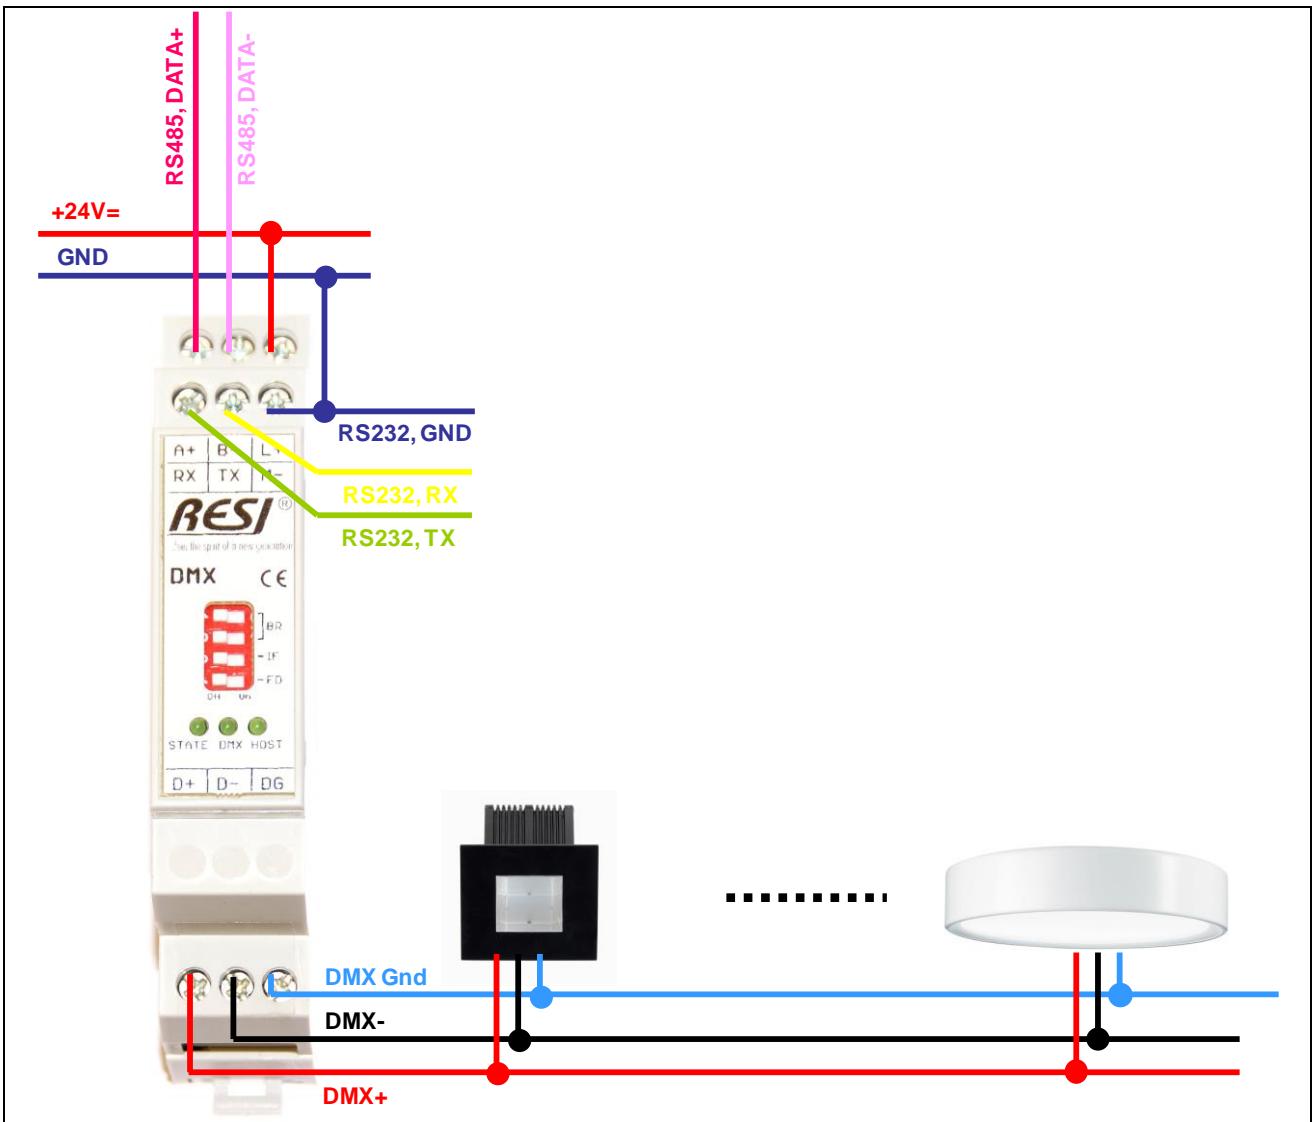


Illustration: Wiring diagram of the RESI-DMX-MODBUS converter

## 6 Function description

The RESI-DMX-ASCII converter is designed to integrate a DMX light subsystem into an automation device very easily. The automation device has to offer a serial interface (RS232 or RS485), which is capable of sending and receiving simple ASCII messages. The converter also offers the possibility to control the 512 DMX lights via a MODBUS/RTU based serial interface of an automation device, because the converter is also a MODBUS/RTU slave. The RESI-DMX-MODBUS converter is designed to control a DMX light system with MODBUS/RTU protocol.

The bases for this integration are lamps with ballasts, which are compatible to the DMX standard.

Please refer to the DIN 56930-2, ANSI E1.1 norm for more operational details about the DMX light system.

If the converter works properly, the state LED flashes with a 1 second period. Is there an internal error in the converter, then the state LED flashes with a 250m period.

Is the DMX connection ok and the converter is cyclically sending data to the DMX lamps, the DMX LED is always on. If the user has stopped the cyclic sending of DMX data, then this LED flashes faster with 250ms cycle.

For the communication with ASCII strings, the ASCII messages starts with a special start character # (0x23, 35dec) and the message ends with a special end character (0x0d, 13dec or CARRIAGE RETURN). The answer of the converter uses the same start and end characters. Please refer the chapter ASCII command description.

For communication via MODBUS the following MODBUS functions are available:

- READ HOLDING REGISTER (function code: 3)
- PRESET SINGLE REGISTER (function code: 6)
- PRESET MULTIPLE REGISTERS (function code: 16)

**Note:** The functions READ HOLDING REGISTER and PRESET MULTIPLE REGISTERS are limited to max. 50 register per query!

More information about the MODBUS/RTU slave functionality see the chapter MODBUS Registers.

## 7 MODBUS - Registers

### 7.1 Hint

Both converters, the RESI-DMX-ASCII and the RESI-DMX-MODBUS offer a MODBUS/RTU slave protocol for communication.

### 7.2 Overview


Register Range	Function
4x00001	DMX Universe with 512 DMX register
4x00512	
4x00513	unused
4x05999	
4x06000	Converter internally
4x06009	
4x06010	Unused
4x09999	
4x10000	DMX special commands
4x10099	
4x10100	Unused
4x59999	
4x60000	Converter internally
4x65536	

**Note:**

Registers that are not described in detail below, but are not explicitly stated as inoperable in this table, are reserved for internal commands and updates as well as program extensions in the future and therefore must not be read or written. The index into the holding registers start with 1. A maximum of 50 registers can be read with one telegram. All inoperable registers return the value 0 when access read.

## MODBUS Register


## 7.2.1 Read / Write a DMX 8 Bit register in the DMX universe

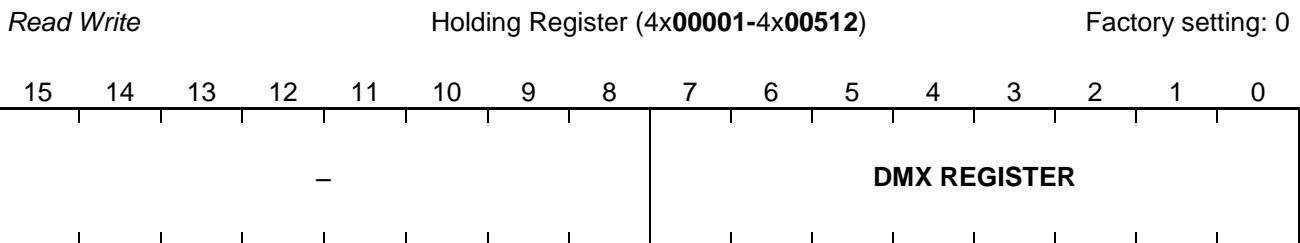

Bit	Description
<b>DMXREGISTER</b>	<b>Write:</b> New value for the 8 bit DMX register
<b>Read:</b> The current value of the 8 bit DMX register	
Writing to this register sets the new 8 bit value of the corresponding DMX register. This value will be send to the DMX bus cyclically.	
Reading this register returns the current 8 bit value of the corresponding DMX register.	

**Note:**  
How many DMX registers are sent to the DMX bus is defined with the DMXLENGTH register. This register is read/writeable via the MODBUS.

## 7.2.2 DMX Set amount of sending DMX registers to the DMX bus

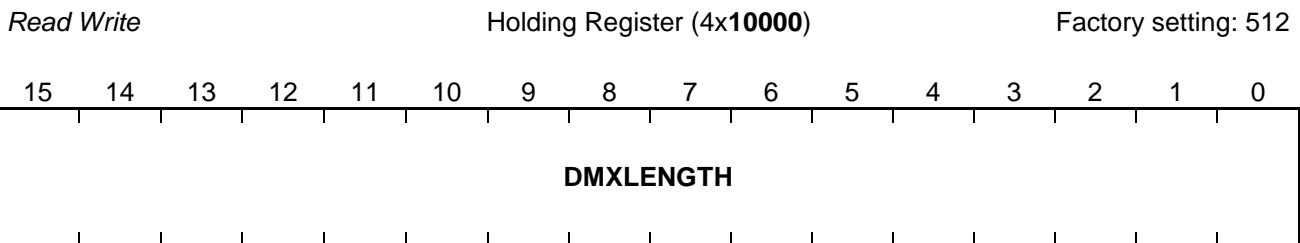


Bit	Description
<b>DMXLENGTH</b>	<b>Read:</b> Amount of DMX registers, which are currently send to the DMX bus with a DMX update cycle
<b>Write:</b> Define the new amount of DMX registers, which should be sent to the DMX bus	
DMXLENGTH is a value between 1 and 512 and defines the amount of DMX registers, which are sent cyclically to the DMX bus. After a reset or power on, this register has always the value 512 and the converter sends ALL 512 DMX registers.	

### 7.2.3 DMX start/stop sending DMX bus data

Read Write

Holding Register (4x10001)

Factory setting: 1

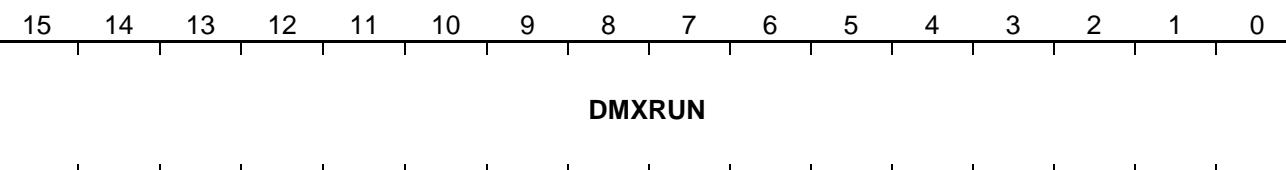

Bit	Description
-----	-------------

**DMXRUN**
**DMX bus output**

**Write:** Defines the operation mode of the DMX converter. Write 1 to this register, if you want to activate the DMX bus update, write 0 to stop the DMX bus update


**Read:** Returns the current status of the bus update. If the converter currently sends DMX data to the DMX bus, 1 is returned. If no data is updated on the DMX bus, 0 is returned.

### 7.2.4 Fill all DMX registers with same value

Read Write

Holding Register (4x10002)

Factory setting: 0

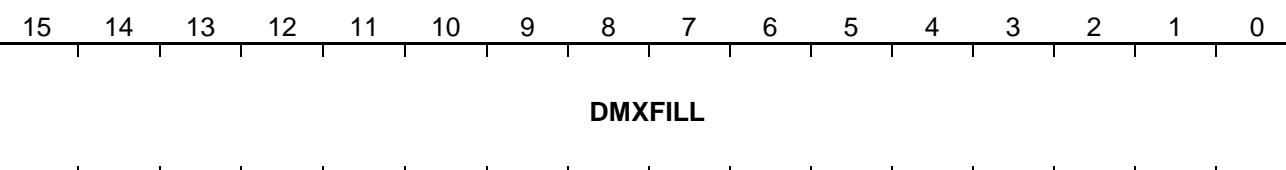

Bit	Description
-----	-------------

**DMXFILL**
**DMX 8 Bit value used for filling ALL DMX Register**

**Write:** Fills ALL 512 DMX registers with the new 8 Bit value.


**Read:** Returns the last used 8 bit fill value.

### 7.2.5 Converter Reset

WRITE only

Holding Register (4x06001)

Factory setting: 0

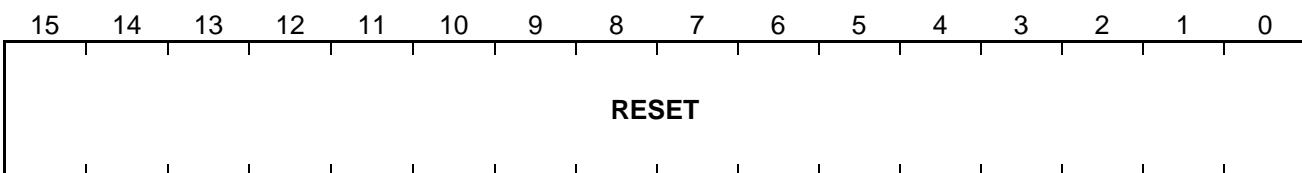


Bit	Description
<b>RESET</b>	<b>Reset of the converter</b>
Write: If you write 1 into this register, the converter does a software reset.	

### 7.2.6 MODBUS address

READ / WRITE

holding register (4x65222)

factory settings: 255

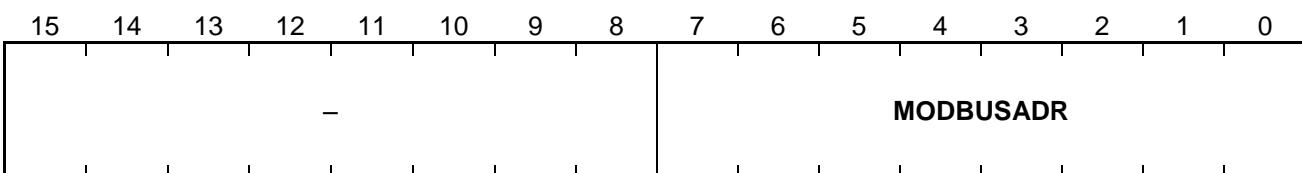

bit	description
<b>MODBUSADR</b>	<b>Modbus address</b>
	defines the MODBUS address of the converter. Range: 0 to 255


**Note:**  
To overwrite the old values the converter must be restarted.

### 7.2.7 MODBUS baud rate

READ / WRITE

holding register (4x65223)

factory settings: 1

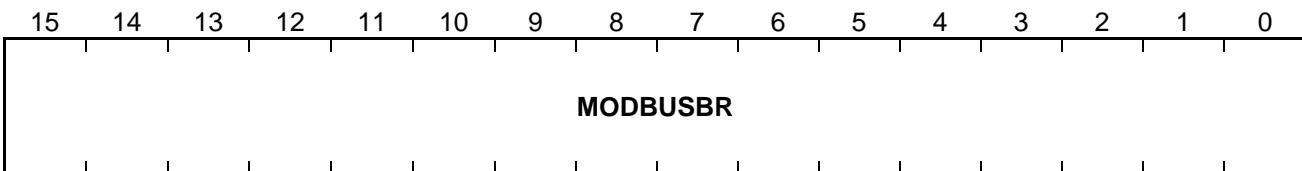

bit	description
<b>MODBUSBR</b>	<b>Modbus Baudrate</b> – defines the Modbus baud rate of the converter.
0	9600 bps
1	19200 bps
2	38400 bps
3	57600 bps

**Note:**  
If the set value is greater than 3, the standard baud rate of 19200 bps is used!  
To overwrite the old values it is necessary to save the new configuration and to restart the converter.

## 8 Specifications

### 8.1 Dimensions

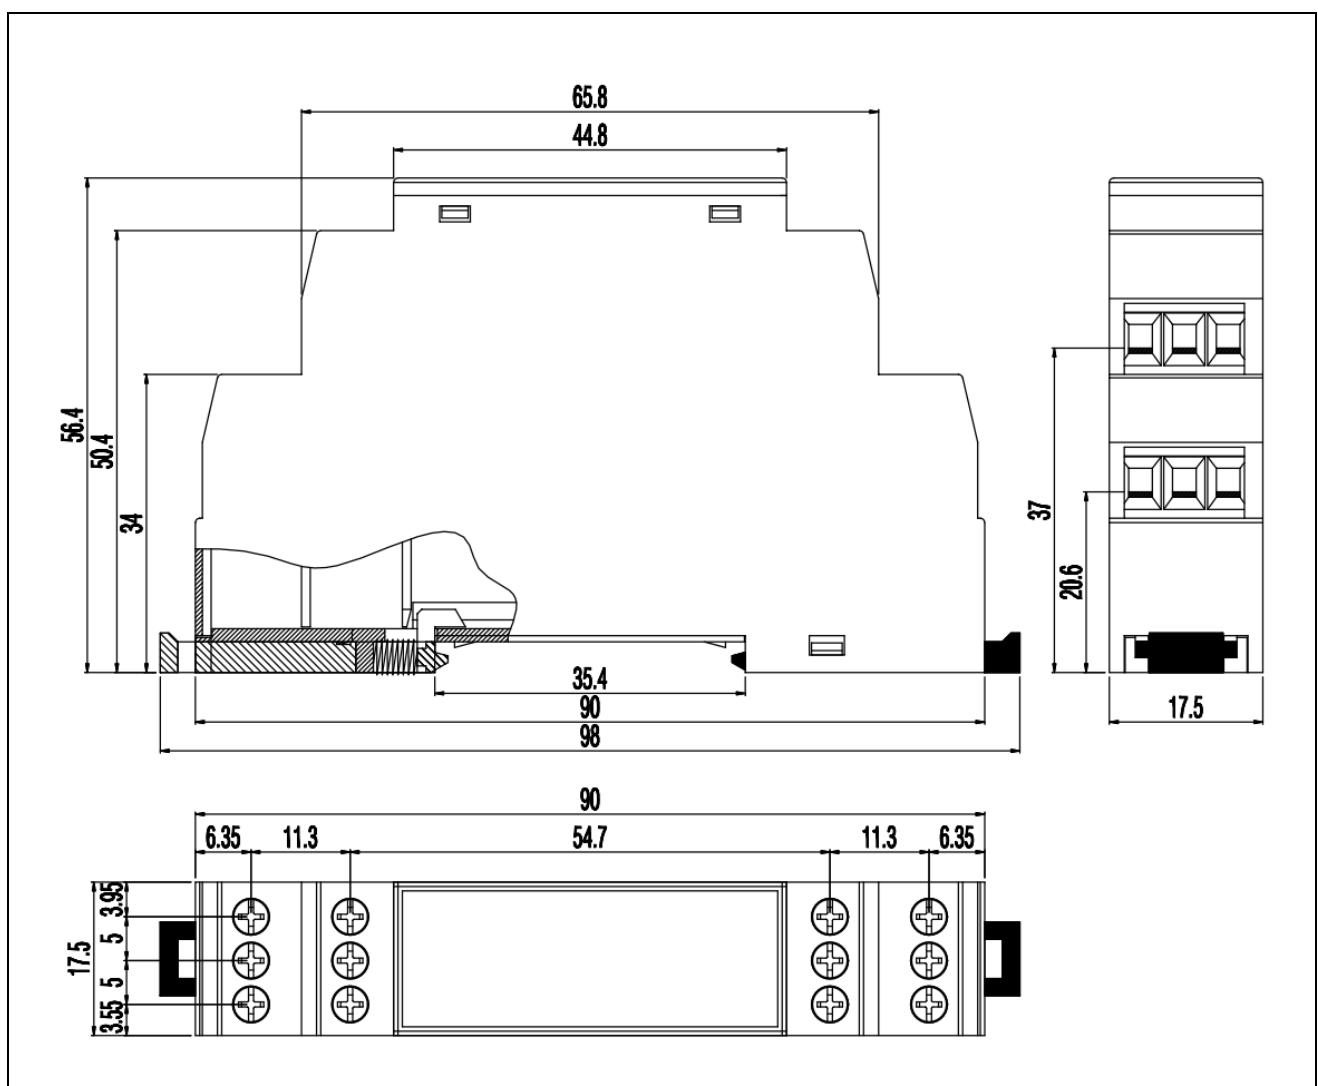


Illustration: dimension illustration in mm

Dimensions	
Enclosure dimensions L x W x H (mm)	17,5 x 90 x 58
Weight	60 g
Colour	Grey RAL7035
Material	PA - UL 94 V0
Protection class	IP20 based on DIN 40050/EN 60529

Table: Data of enclosure