



## User Manual

# ProfiHub A5/B5

### 5 Channel DP Spur and Repeater component

- 5 Isolated Channels.
- Transparent for all **PROFIBUS DP** protocols.
- RS 485 specifications** for each channel.
- Max. 12 Mbps.**
- Max. 31 devices** per channel.
- Max. 1200 m spur line length.**
- No limit in serial placement.
- No address** required.
- Integrated termination facilities.
- Configurable grounding system.

- IP 65** classification (ProfiHub A5).
- IP 20** classification (ProfiHub B5).

## Safety Guidelines

This manual contains notices which you should observe to ensure your own personal safety, as well as to protect the product and connected equipment. These notices are highlighted in the manual by a warning sign and are marked as follows according to the level of danger:



Draws your attention to important information on handling the product, a particular part of the documentation or the correct functioning of the product.

## Warning

This device and its components may only be used for the applications described in this manual and only in connection with devices or components that comply with PROFIBUS and an RS 485 interface. This product can only function correctly and safely if it is transported, stored, set up, installed, operated and maintained as recommended.

## Qualified Technicians

Only qualified technicians should be allowed to install and work with this equipment. Qualified technicians are defined as persons who are authorized to commission, to ground, to tag circuits and systems in accordance with established safety practices and standards. It is recommended that the technicians carry a Certified PROFIBUS Installer or Certified PROFIBUS Engineer certificate.

## Disclaimer of Liability

We have checked the contents of this manual as much as possible. Since deviations cannot be precluded entirely, we cannot guarantee full agreement. However, the content in this manual is reviewed regularly and any necessary corrections included in subsequent editions. Suggestions for improvement are welcomed.

## Copyright © 2005-2009 PROCEN TEC

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of the publisher.

**PROCEN TEC**  
**Turfschipper 41**  
**2292 JC WATERINGEN**  
**The Netherlands**

**Tel.: +31-(0)174-671800**  
**Fax: +31-(0)174-671801**  
**Email: [info@procentec.com](mailto:info@procentec.com)**  
**Web: [www.procentec.com](http://www.procentec.com)**

## Important Information

### **Purpose of the Manual**

This manual explains how to put the ProfiHub A5 and ProfiHub B5 into operation.

### **Recycling and Disposal**

The parts of the ProfiHub can be recycled. For further information about environment-friendly recycling and the procedure for disposing your old equipment, please contact:

*PROCENTEC  
Turfschipper 41  
2292 JC WATERINGEN  
The Netherlands*

*Tel.: +31-(0)174-671800  
Fax: +31-(0)174-671801  
Email: [info@procentec.com](mailto:info@procentec.com)*

### **Document Updates**

You can obtain constantly updated information on PROCENTEC products on the Internet at [www.procentec.com](http://www.procentec.com)

You can also contact PROCENTEC Customer Support:

- by phone at +31-(0)174-671800
- by fax at +31-(0)174-671801
- by email at [support@procentec.com](mailto:support@procentec.com)

## Contents

<b>1</b>	<b>Product Description</b>	<b>5</b>
1.1	Product Features	6
1.2	Application areas	7
1.3	Additional Benefits	7
1.4	Channel Structure	8
1.5	Grounding System	8
1.6	Cable lengths for PROFIBUS DP	9
1.7	Cable types for PROFIBUS DP	10
1.8	Status Display	11
1.9	Comparison table	12
<b>2</b>	<b>Installation Instructions ProfiHub A5</b>	<b>13</b>
2.1	Location	13
2.2	Position	13
2.3	Mounting	13
2.4	Power Supply	14
2.5	Backbone	15
2.6	Spur Segments	16
2.7	Termination	17
2.8	Baudrate switch	18
<b>3</b>	<b>Installation Instructions ProfiHub B5</b>	<b>19</b>
3.1	Location	19
3.2	Position	19
3.3	Mounting	19
3.4	Power Supply	19
3.5	Backbone	20
3.6	Spur Segments	21
3.7	Termination	22
3.8	Baudrate switch	23
<b>4</b>	<b>Technical Data ProfiHub A5</b>	<b>24</b>
<b>5</b>	<b>Technical Data ProfiHub B5</b>	<b>26</b>
<b>6</b>	<b>Sales offices and Distributors</b>	<b>28</b>
<b>7</b>	<b>Order codes</b>	<b>31</b>
<b>8</b>	<b>Glossary</b>	<b>32</b>
<b>9</b>	<b>Certificates</b>	<b>35</b>
<b>10</b>	<b>Revision History</b>	<b>38</b>
<b>11</b>	<b>Next version</b>	<b>39</b>
<b>12</b>	<b>Notes</b>	<b>40</b>

## 1 Product Description

**ProfiHub A5 and B5 are advanced, flexible and robust network components for PROFIBUS DP installations, to implement long multi-device spur lines and backbone structures with star/tree segments.**

PROFIBUS DP is a high speed communication bus that has to comply with strict rules concerning spur lines, because of possible reflections that could lead to communication disturbances. If spur lines or star segments are required, costly investments in repeaters have to be done.

Innovative components for such applications are the ProfiHub A5 and B5. These are perfect economic solutions to implement reliable spur lines in high speed DP networks. They have the functionality of **5 galvanic isolated transparent repeaters**. This allows network structures with extended spur lines that individually can handle a maximum of 31 devices and a length equal to the main bus. **The ProfiHub A5 and B5 refresh a received message on one Channel and transfer it to all the other Channels (chicken foot topology).**

Because the ProfiHub A5 and B5 create isolated segments, the devices can now be removed and added during operation. Also electrical bus problems and EMC disturbances in a spur do not spread to the other segments. The intelligent logic and isolation circuits of the ProfiHubs do not change the bit width. This means the ProfiHubs do not have limitations in serial placement. The logic also detects the transmission speed automatically.

To assist the installation work, termination is integrated and can be switched on/off. The grounding concept is also selectable: direct or capacitive grounding. The ProfiHubs are powered by a 10 to 32 DC Voltage (110/230V AC versions are also available). For troubleshooting, maintenance and commissioning the ProfiHubs are equipped with a display on the outside, which indicate the status of each Channel (Data and Error).





Fig. 1 - ProfiHub A5 (IP65)



Fig. 2 - ProfiHub B5 (IP20)

## 1.1 Product Features

- 5 Galvanic isolated channels (repeater segments).
- Transparent for all **PROFIBUS DP protocols**.
- **DP - RS 485 specifications** for each channel.
- **9,6 Kbps to 12 Mbps**.
- **31 devices** per channel.
- **1200 m spur line length** (depends on transmission speed).
- No limit in serial placement or cascading of ProfiHubs.
- No address required.
- Integrated termination facilities (switches).
- Configurable grounding system (direct or capacitive).
- **IP 65** classification (ProfiHub A5).
- **IP 20** classification (ProfiHub B5).

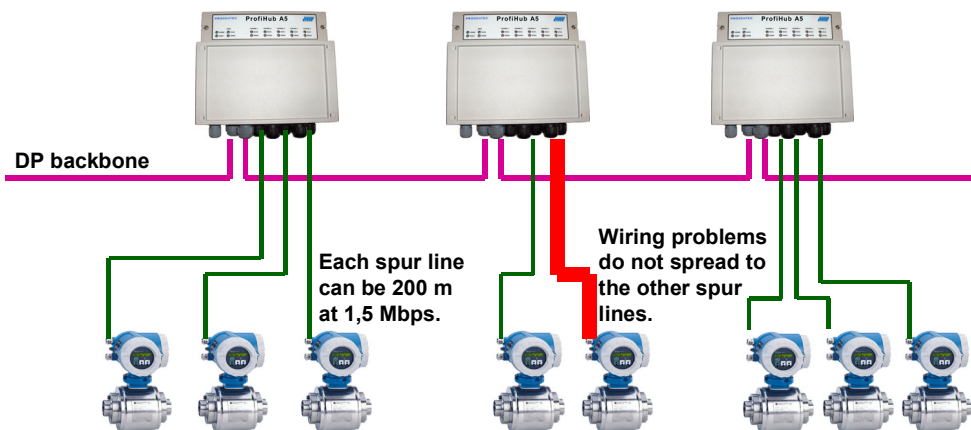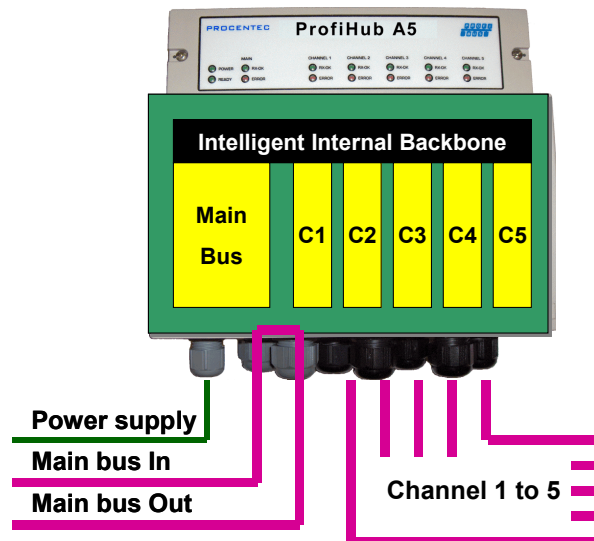


**Fig. 3 - Long spur lines to instruments and the possibility to remove/insert them during operation. Short circuit protection on each spur line is automatically provided.**

## 1.2 Application areas

- Dynamic spur lines to actuators, flow meters and pH analyzers.
- Removable drives and motors.
- Pull/Plug motor control centers (drawers).
- Roof mounted devices in tank farms.
- Dirty and humid environments.
- Barrier for non galvanic isolated equipment.
- Large star/tree structured networks.
- Outdoor applications with device and cable stress (ProfiHub A5).

## 1.3 Additional Benefits

- Hot slave **insertion and removal** during operation.
- **Short circuit protection** on each Channel.
- Compact and robust construction.
- Status and error display (per Channel).
- Suitable for all DP cables.
- Conveniently arranged networks.
- Easy extendable installations.
- Standard glands can be replaced with M12 (ProfiHub A5).
- On-board DB9 female connector for maintenance activities (ProfiHub A5).
- Cost Savings.

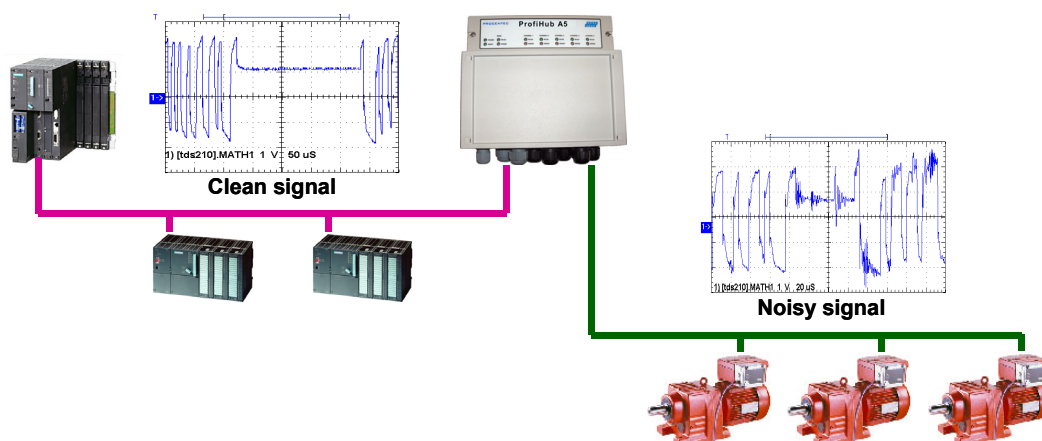

**Fig. 4 - Because of the isolation and intelligence the ProfiHub provides, it can be used as a barrier for electrically sensitive segments. This keeps the backbone and other Channels clean.**

## 1.4 Channel Structure

Every Channel is electrically isolated and internally connected to the transparent intelligent backbone. The termination is switchable and powered by the ProfiHub. The shielding of the PROFIBUS cable can be directly grounded or indirectly grounded (see the next paragraph).

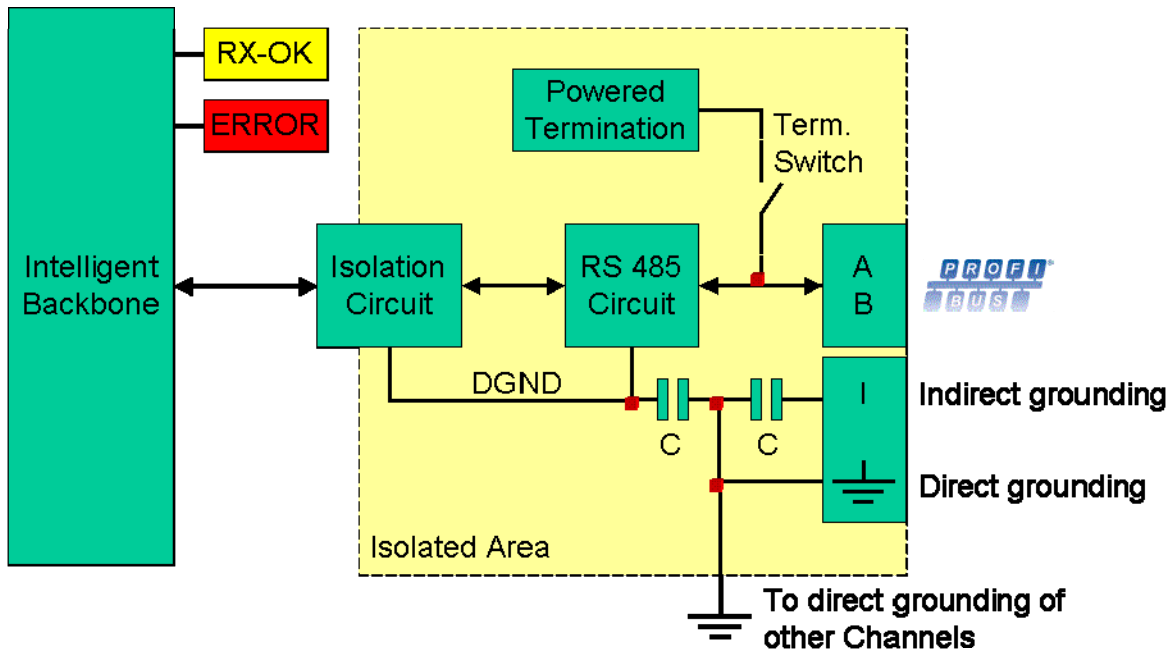


Fig. 5 - Channel structure

## 1.5 Grounding System

The ProfiHubs can be grounded by 3 methods:

- 1) Direct grounding
- 2) Indirect grounding (through a capacitor)
- 3) Combination of direct and indirect.

In most cases it is recommended always to use Direct Grounding with the power supply and the shielding of the PROFIBUS cables. If you do not want to ground all or some cables to the common ground, the cable shielding should be connected to pin 'I'. A capacitor with a parallel high value resistor will separate the 2 potentials (Fig. 5).

If by accident on 1 channel the Direct Grounding is connected with the Indirect Grounding, the Direct Grounding "wins".

## 1.6 Cable lengths for PROFIBUS DP

The cables on the Channels and the Main-Channel should comply with the PROFIBUS DP cable specifications for RS 485 (Fig. 6).

Baudrate (kbit/s)	9.6	19.2	45.45	93.75	187.5	500	1500	3000	6000	12000
Segment length (m)	1200	1200	1200	1200	1000	400	200	100	100	100
Segment length (feet)	3940	3940	3940	3940	3280	1310	656	328	328	328

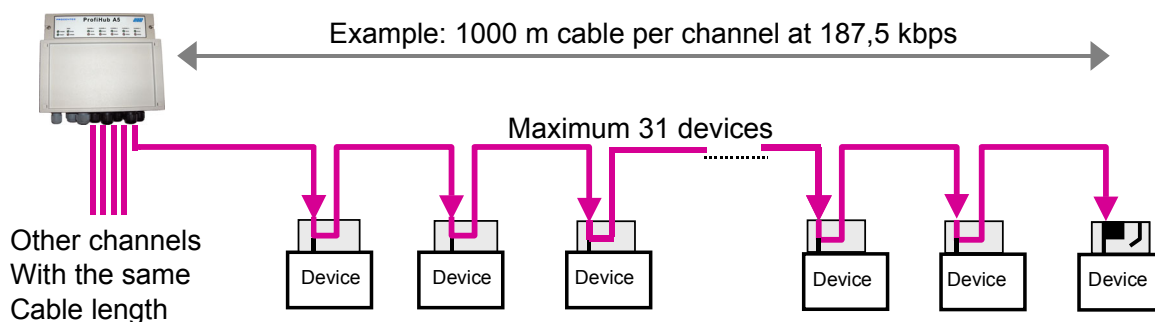


Fig. 6 - Cable lengths for PROFIBUS DP

## 1.7 Cable types for PROFIBUS DP

The cable type should comply with the PROFIBUS DP cable specifications for RS 485 (Fig. 7).

Parameter	Value
Wires	2 (twisted)
Impedance	135 .. 165 Ohm at 3 to 20 MHz
Capacity	< 30 pF/m
Loop resistance	< 110 Ohm/km
Wire diameter	> 0.64 mm
Wire area	> 0.32 mm <sup>2</sup>

Fig. 7 - PROFIBUS DP cable specifications

The ProfiHub A5 can handle cables based on multiple protection sheaths with a diameter between 6 to 12 mm (Fig. 8).

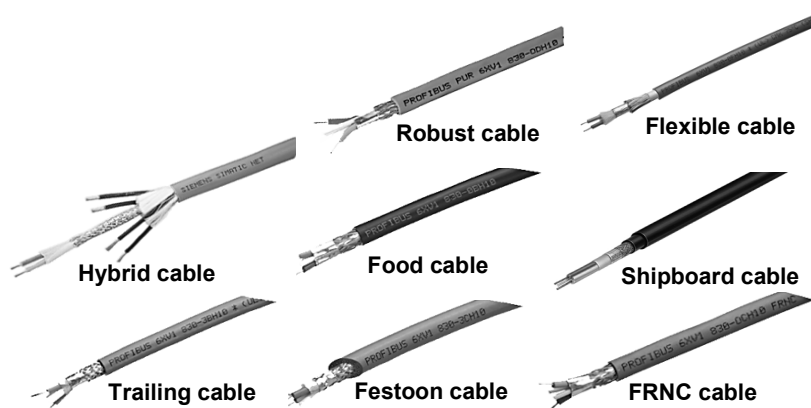




















Fig. 8 - Cables with different protection sheaths.

## 1.8 Status Display

The Status Display on the ProfiHubs is very useful for diagnostics.

	OFF	Blinking	ON
<b>POWER</b>	 Power is not switched on or an internal failure.	 Power supply not stable or an internal failure.	 Power supply OK.
<b>Main READY</b>	 Power is not switched on or an internal failure.	 Trying to detect the transmission speed, but has not locked it yet.	 The transmission speed has been detected.
<b>Main RX-OK</b>	 No communication detected on the Main-Channel.	 1 or more devices communicating on the Main-Channel.	 1 or more devices communicating on the Main-Channel.
<b>Main ERROR</b>	 No problem has been detected.	 Problem in the cabling has been detected (Main Channel).	 Problem in the cabling has been detected (Main Channel).
<b>Channel RX-OK</b>	 There is no communication detected (on this Channel).	 1 or more devices communicating (on this Channel).	 1 or more devices communicating (on this Channel).
<b>Channel ERROR</b>	 No problem has been detected.	 Problem in the cabling has been detected (on this Channel).	 Problem in the cabling has been detected (on this Channel).

## 1.9 Comparison table

	ProfiHub A5	ProfiHub B5
Area	IP 65	IP 20
Housing	Plastic	Metal
Mounting	Corner screws	DIN-rail
Weight	800 g	650 g
Dimensions	213 x 210 x 95 mm	167 x 111 x 32 mm
PROFIBUS connectors	Screw terminals (inside) Glands (outside)	Screw terminals and DB9 connectors
Alternative connectors	Glands can be replaced with M12 connectors (see chapter 7 Order codes)	No
Termination LEDs	No	Yes
Ground rail	Optional (see chapter 7 Order codes)	Yes

## 2 Installation Instructions ProfiHub A5

### 2.1 Location

The ProfiHub A5 can be installed everywhere in a non-hazardous area that complies with IP 65 (DIN 40 050) and the specified temperature range of -40 to +75° Celsius.

### 2.2 Position

The ProfiHub A5 can be installed in every position, but it is recommended to install it with the cable glands pointing down to create a more reliable protection against moist and dust (water compartment and glands). In this position it is also easier to read the status display.

### 2.3 Mounting

The ProfiHub A5 has 4 mounting holes for 4..5 mm screws (Fig. 9). To reach the holes on position 1 and 2, the top lid has to be removed.

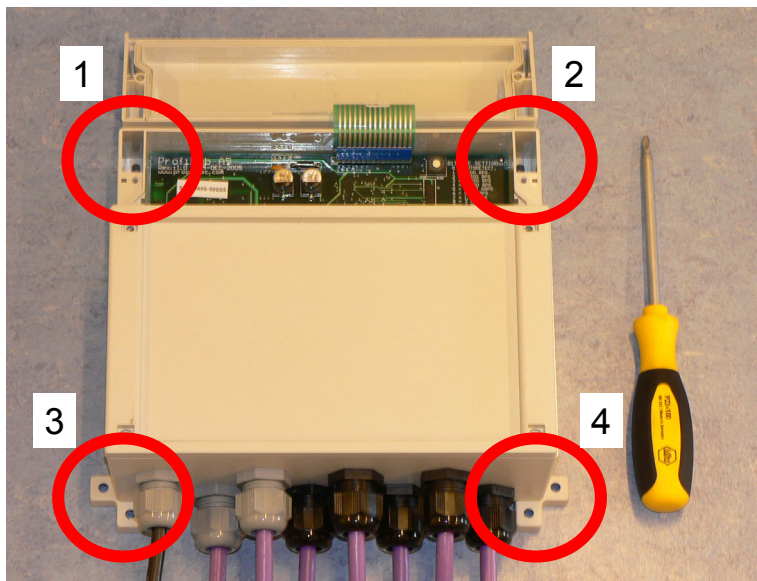



Fig. 9 - Positions of the mounting holes.



- 1) It is recommended to mount the ProfiHub A5 with at least 4 suitable screws/bolts in position 1, 2, 3 and 4.
- 2) Be careful with the flat cable that connects the lid with the PCB.

## 2.4 Power Supply

The 4-pin screw type power connector is located on the bottom left of the PCB (Fig. 10).

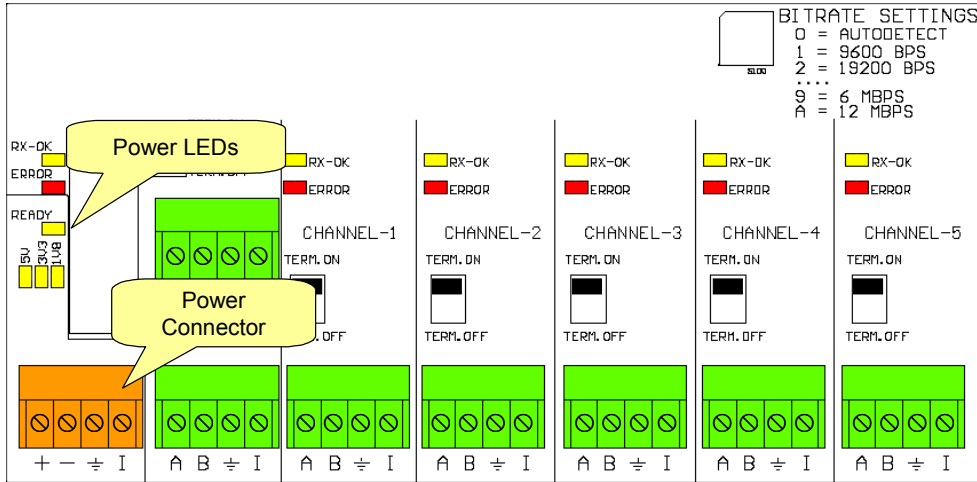

**Fig. 10 - Power connector and LEDs**

The power supply has to comply with the following specifications:

- Voltage: **10 to 32 Vdc**
- Current: **Min. 130 mA**
- Wire diameter: **< 2,5 mm<sup>2</sup>**
- Cable thickness: **5 to 10 mm**

### Procedure

To connect the 24V supply to the 4-pin screw-type terminal, proceed as follows:

- Strip the insulation from the cable or the conductors for the 24V power supply.
- Secure the conductors in the screw-type terminal.

Note: There is a grounding point that can be used.

To connect the power supply, you need a 3 mm screwdriver.

### Testing

If the power is switched on it can be diagnosed by the following indicators on the PCB:

- All the LEDs should be shortly blinking.
- The READY LED is ON or Blinking.
- The voltage LEDs are ON (5V, 3V3 and 1V8).



It is recommended to use a power supply with a ground lead (3-wire).

## 2.5 Backbone

Connect the DP backbone cable to the bottom connector of the Main-Channel (Fig. 11). If the ProfiHub is not the last device on the bus segment, connect the Bus-Out cable to the top connector of the Main-Channel (Fig. 11).

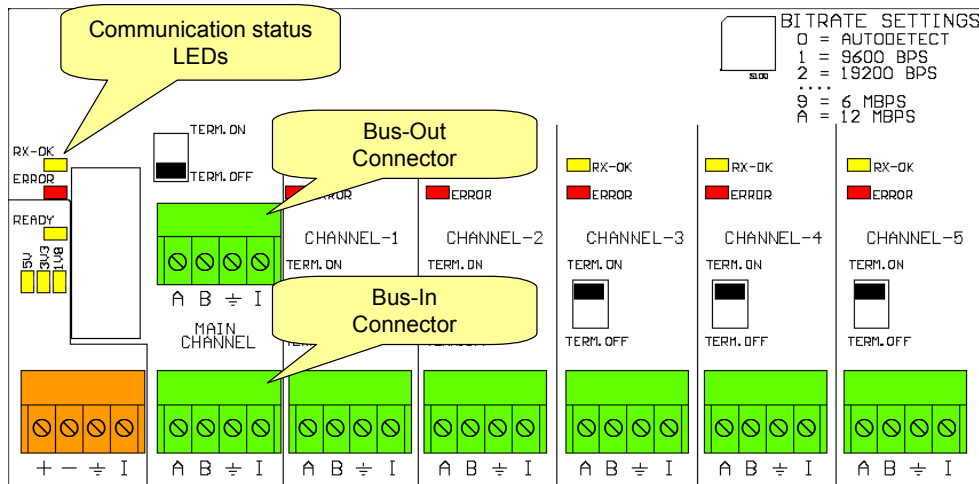


Fig. 11 - PROFIBUS DP backbone connection

### Pin Layout of the screw terminals

- Pin "A": Green wire
- Pin "B": Red wire
- Pin "I": Cable shielding OR
- Pin "⏚": Cable shielding

### Testing

- If the Main-Channel recognizes valid PROFIBUS messages from 1 or more connected devices, the RX-OK LED of this Channel should be blinking.

## 2.6 Spur Segments

Connect the spur segments to the connectors of Channel 1 to 5 (Fig. 12).

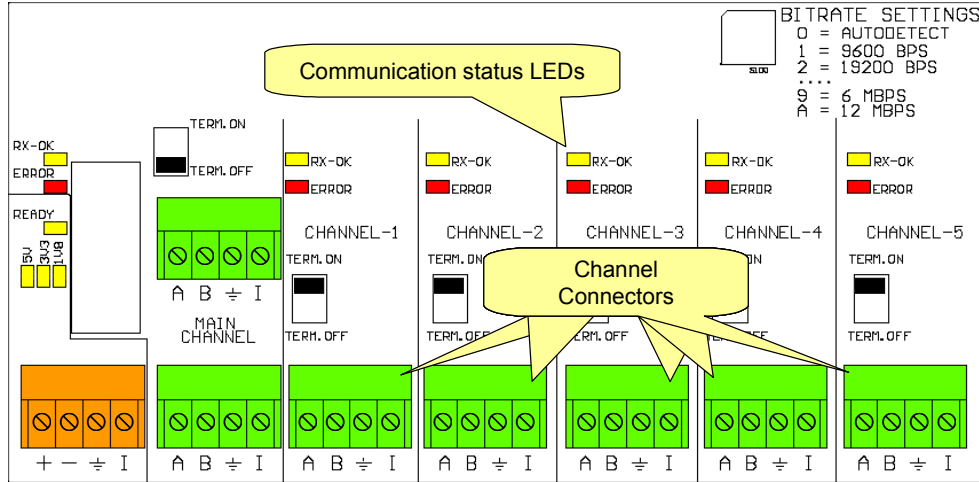


Fig. 12 - PROFIBUS DP spur connectors

### Pin Layout of the screw terminals

- Pin "A": Green wire
- Pin "B": Red wire
- Pin "I": Cable shielding *OR*
- Pin "≡": Cable shielding

### Testing

If a Channel recognizes valid PROFIBUS messages from 1 or more connected devices, the RX-OK LED of the specific Channel should be blinking.

## 2.7 Termination

The termination of the Main-Channel has been set to OFF by default. If the ProfiHub is the last/first device on the segment, the termination should be set to ON (Fig. 13).

The termination of the Channels have been set to ON by default. Because it is assumed that the new segment is started at the ProfiHub (Fig. 13).

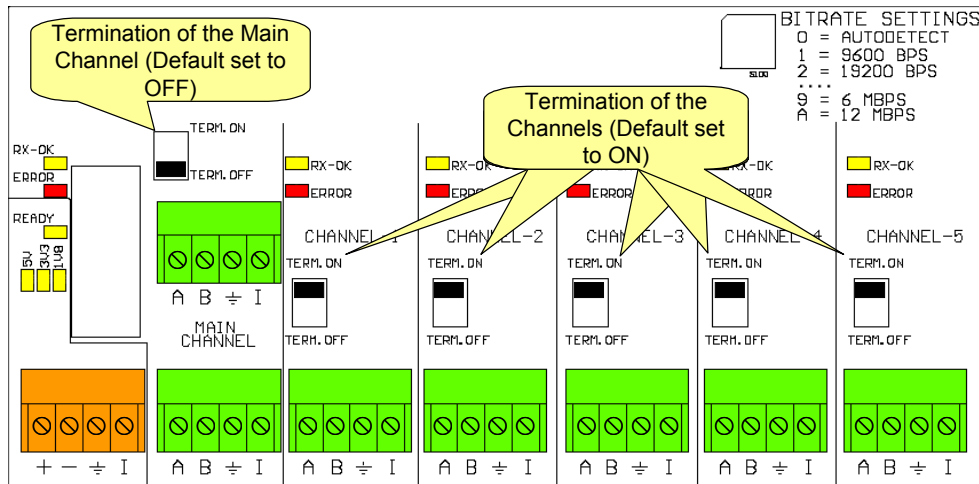


Fig. 13 - Termination Switches



Don't forget to switch the termination ON at the other end of the segment and make sure it is powered continuously.

## 2.8 Baudrate switch

The ProfiHub recognizes the transmission speed by default. If it is required that the ProfiHub is locked to a certain transmission speed, switch S100 should be set to the required value (Fig. 14). The switch can be reached by removing the top lid.

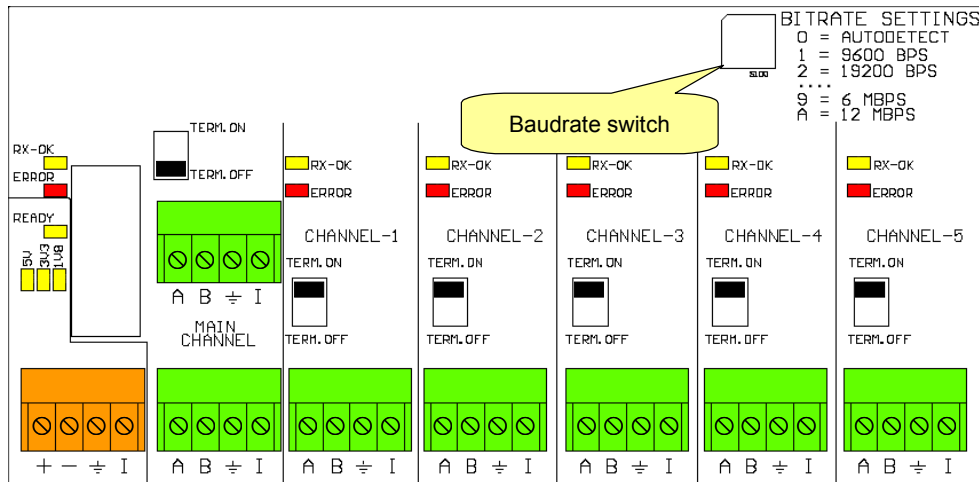


Fig. 14 – Baudrate speed switch

To set the transmission speed, you need a 3 mm screwdriver.

Switch values:

- 0 = Auto detect (**default**)
- 1 = 9,6 kbps
- 2 = 19,2 kbps
- 3 = 45,45 kbps
- 4 = 93,75 kbps
- 5 = 187,5 kbps
- 6 = 500 kbps
- 7 = 1500 kbps
- 8 = 3000 kbps
- 9 = 6000 kbps
- A = 12000 kbps
- B .. F = Auto detect

## 3 Installation Instructions ProfiHub B5

### 3.1 Location

The ProfiHub B5 can be installed everywhere in a non-hazardous area that complies with IP 20 (DIN 40 050) and the specified temperature range of -20 to +60° Celsius.

### 3.2 Position

The ProfiHub B5 can be installed in every position, but it is recommended to install it with the cables pointing down. In this position it is also easier to read the status display.

### 3.3 Mounting

The ProfiHub B5 has to be mounted on 35 mm DIN-rail with a minimum width of 167 mm.

### 3.4 Power Supply

The 3-pin screw type power connector is located on the bottom left of the ProfiHub B5 (Fig. 15).

- 1 = + (left)
- 2 = - (middle)
- 3 = Indirect grounding (right)

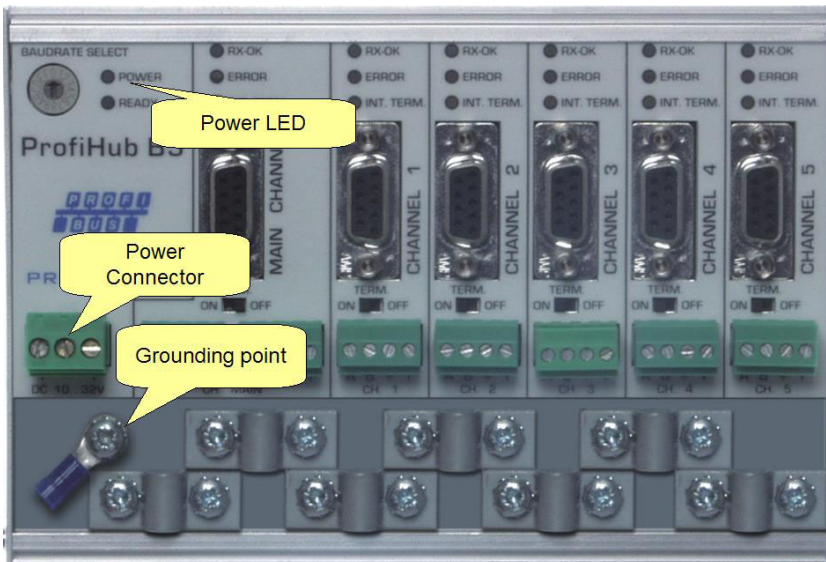


Fig. 15 - Power connector and LEDs

The power supply has to comply with the following specifications:

- Voltage: **10 to 32 Vdc**
- Current: **Min. 130 mA**
- Wire diameter: **< 2,5 mm<sup>2</sup>**

### Procedure

To connect the 24V supply to the 3-pin screw-type terminal, proceed as follows:

- Strip the insulation from the cable or the conductors for the 24V power supply.
- Secure the conductors in the screw-type terminal.

Note: There is a grounding point that can be used.

To connect the power supply, you need a 3 mm screwdriver.

### Testing

If the power is switched on it can be diagnosed by the following indicators:

- All the LEDs should be shortly blinking.
- The POWER LED is ON.
- The READY LED is ON or Blinking.



It is recommended to use a power supply with a ground lead (3-wire).

## 3.5 Backbone

Connect the DP backbone cable to the bottom-left connector of the Main-Channel (Fig. 16). If the ProfiHub is not the last device on the bus segment, connect the Bus-Out cable to the right connector of the Main-Channel (Fig. 16). The second method is to place a PROFIBUS standardized plug with an in/out cable on the DB9 connector.

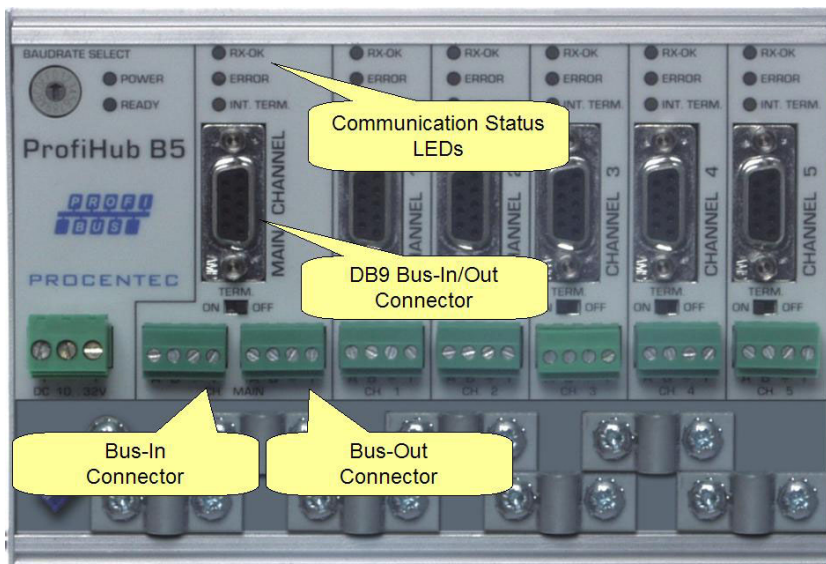


Fig. 16 - PROFIBUS DP backbone connection

### Pin layout of the screw terminals:


- Pin "A": Green wire
- Pin "B": Red wire
- Pin "I": Cable shielding OR
- Pin "⏚": Cable shielding

Testing

- If the Main-Channel recognizes valid PROFIBUS messages from 1 or more connected devices, the RX-OK LED of this Channel should be blinking.

### 3.6 Spur Segments

Connect the spur segments to the connectors of Channel 1 to 5 (Fig. 17). The second method is to place a PROFIBUS standardized plug on the DB9 connector of the specific Channel.

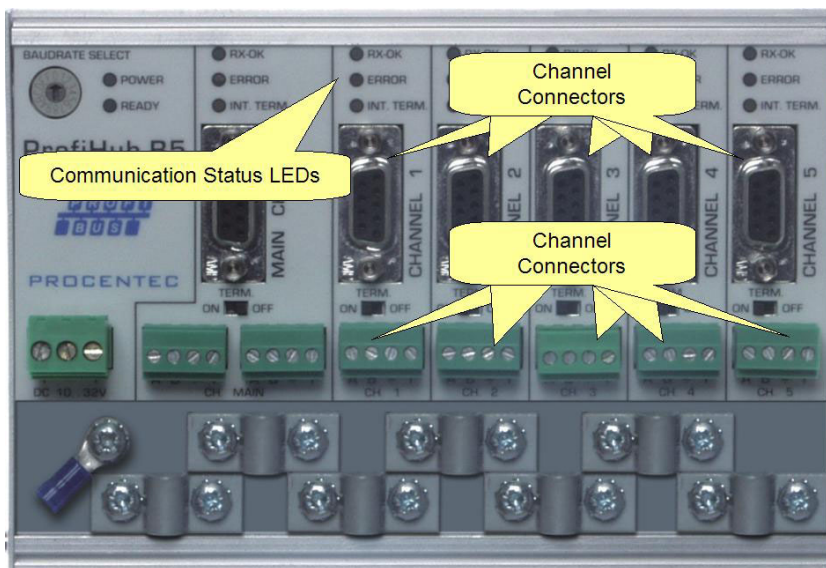

**Fig. 17 - PROFIBUS DP spur connectors**

Pin layout of the screw terminals:

Pin "A": Green wire

Pin "B": Red wire

Pin "I" or "Ground": Cable shielding

Note: Connecting the cable shielding is not required when the ground clips are used.

Testing

- If the Main-Channel recognizes valid PROFIBUS messages from 1 or more connected devices, the RX-OK LED should be blinking.

### 3.7 Termination

The termination of the Main-Channel has been set to OFF by default. If the ProfiHub is the last device on the bus, the termination should be set to ON (Fig. 18).

The termination of the Channels have been set to ON by default. Because it is assumed that the new segment is started at the ProfiHub (Fig. 18).

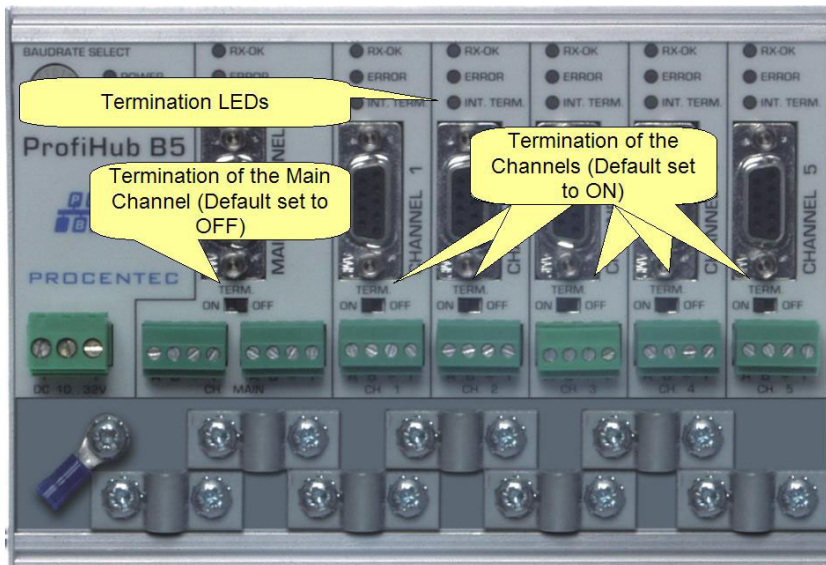


Fig. 18 - Termination Switches


The termination LED of the specific Channel is activated when the termination switch is set to ON.



When the DB9 connector is used and the cable starts at the ProfiHub, it is recommended to use the termination on the DB9 plug and NOT the ProfiHub.

## 3.8 Baudrate switch

The ProfiHub B5 recognizes the transmission speed by default. If it is required that the ProfiHub B5 is locked to a certain transmission speed, the baudrate switch should be set to the required value (**Fig. 19**).

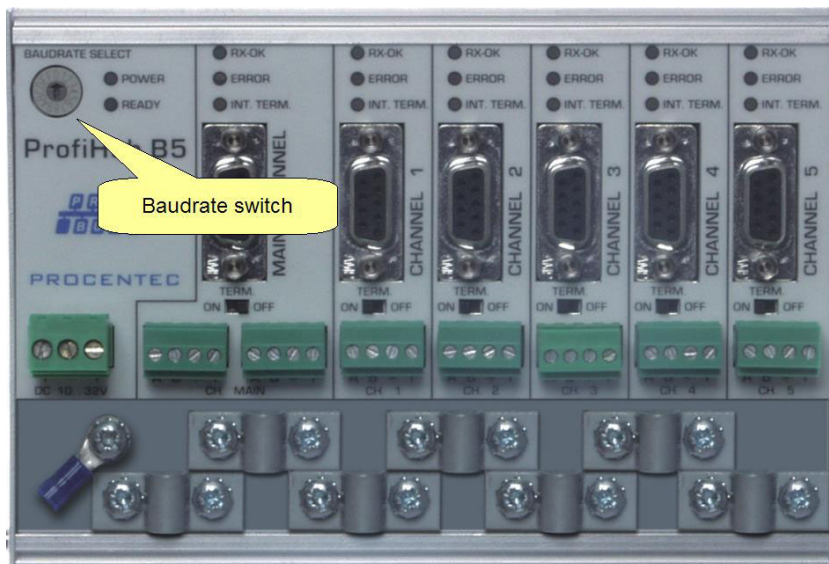

**Fig. 19 - Baudrate speed switch**

To set the transmission speed, you need a 3 mm screwdriver.

### Switch values:

0 = Auto detect (**default**)

1 = 9,6 kbps

2 = 19,2 kbps

3 = 45,45 kbps

4 = 93,75 kbps

5 = 187,5 kbps

6 = 500 kbps

7 = 1500 kbps

8 = 3000 kbps

9 = 6000 kbps

A = 12000 kbps

B .. F = Auto detect

## 4 Technical Data ProfiHub A5

Technical Data ProfiHub A5	
<b>Dimensions and weight</b>	
Dimensions L x W x H (mm) with glands Weight Mounting screws	213 x 210 x 95 mm Approximately 800 g 4 to 5 mm
<b>Ambient conditions</b>	
Operating temperature Isolation class	-40 to +75° Celsius IP 65 (DIN 40 050)
<b>Protocol specifications</b>	
Supported Protocols	DP-V0, DP- V1, DP-V2, FDL, MPI, FMS, PROFIsafe, PROFIdrive and any other FDL based protocol.
Transmission speed Transmission speed detection Transmission speed switch	9,6 kbps to 12 Mbps (including 45,45 kbps) Auto detect (default) or settable with a rotary switch 0 = Auto detect (default) 1 = 9,6 kbps 2 = 19,2 kbps 3 = 45,45 kbps 4 = 93,75 kbps 5 = 187,5 kbps 6 = 500 kbps 7 = 1500 kbps 8 = 3000 kbps 9 = 6000 kbps A = 12000 kbps B .. F = Auto detect
Transmission speed detection time	< 10 s (if it is set to auto detect)
Data delay time	1,25 TBit at 9,6 kbps to 93,75 kbps 1,3 TBit at 187,5 kbps to 500 kbps 1,4 TBit at 1,5 Mbps 1,6 TBit at 3 Mbps 2,0 TBit at 6 Mbps 3,0 TBit at 12 Mbps
Delay time jitter	Max. ¼ bit time

Technical Data ProfiHub A5	
<b>PROFIBUS cable specifications</b>	
Cable lengths	1200 m at 9,6 kbps to 93,75 kbps 1000 m at 187,5 kbps 400 m at 500 kbps 200 m at 1,5 Mbps 100 m at 3 Mbps to 12 Mbps
Cable thickness Wire diameter Wire type	6 to 12 mm < 2,5 mm <sup>2</sup> Stranded or Solid core
Number of devices	Maximum 31 per Channel (including ProfiHubs, OLMs, Laptops/PCs, etc)
Termination	Integrated and switchable. Powered according to IEC 61158 (390/220/390 Ohms) - All Channels (default on) - Main-Channel (default off)
Cascading depth Redundancy	No limits No
<b>Power supply specifications</b>	
Nominal supply voltage Current consumption Power dissipation	10 to 32 Vdc 130 mA at 24 V power supply (all Channels fully loaded) Max. 4,1 W
Reverse polarity protection Cable thickness Wire diameter	Yes 5 to 10 mm < 2,5 mm <sup>2</sup>
<b>Others</b>	
MTBF	Not available

## 5 Technical Data ProfiHub B5

Technical Data ProfiHub B5	
<b>Dimensions and weight</b>	
Dimensions L x W x H (mm) with screws Weight	167 x 111 x 32 mm Approximately 650 g
<b>Ambient conditions</b>	
Operating temperature Isolation class	-20 to +60° Celsius IP 20 (DIN 40 050)
<b>Protocol specifications</b>	
Supported Protocols	DP-V0, DP- V1, DP-V2, FDL, MPI, FMS, PROFIsafe, PROFIdrive and any other FDL based protocol.
Transmission speed Transmission speed detection Transmission speed switch	9,6 kbps to 12 Mbps (including 45,45 kbps) Auto detect (default) or settable with a rotary switch 0 = Auto detect (default) 1 = 9,6 kbps 2 = 19,2 kbps 3 = 45,45 kbps 4 = 93,75 kbps 5 = 187,5 kbps 6 = 500 kbps 7 = 1500 kbps 8 = 3000 kbps 9 = 6000 kbps A = 12000 kbps B .. F = Auto detect
Transmission speed detection time	< 10 s (if it is set to auto detect)
Data delay time	1,25 TBit at 9,6 kbps to 93,75 kbps 1,3 TBit at 187,5 kbps to 500 kbps 1,4 TBit at 1,5 Mbps 1,6 TBit at 3 Mbps 2,0 TBit at 6 Mbps 3,0 TBit at 12 Mbps
Delay time jitter	Max. ¼ bit time

Technical Data ProfiHub B5	
<b>PROFIBUS cable specifications</b>	
Cable lengths	1200 m at 9,6 kbps to 93,75 kbps 1000 m at 187,5 kbps 400 m at 500 kbps 200 m at 1,5 Mbps 100 m at 3 Mbps to 12 Mbps
Cable thickness Wire diameter Wire type	10 mm (when the ground rail is used) < 2,5 mm <sup>2</sup> Stranded or Solid core
Number of devices	Maximum 31 per Channel (including ProfiHubs, OLMs, Laptops/PCs, etc)
Termination	Integrated and switchable. Powered according to IEC 61158 (390/220/390 Ohms) - All Channels (default on) - Main-Channel (default off)
Cascading depth Redundancy	No limits No
<b>Power supply specifications</b>	
Nominal supply voltage Current consumption Power dissipation	10 to 32 Vdc 130 mA at 24 V power supply (all Channels fully loaded) Max. 4,1 W
Reverse polarity protection Cable thickness Wire diameter	Yes 10 mm (when the ground rail is used) < 2,5 mm <sup>2</sup>
<b>Others</b>	
MTBF	398723 hours based on IEC62380 (RDF-2000 / UTE C 80-810, mathematical model for failure rates).

## 6 Sales offices and Distributors

### HEADQUARTERS

PROCENTEC  
Turfshipper 41  
2292 JC WATERINGEN  
Netherlands  
Tel.: +31-(0)174-671800  
Fax: +31-(0)174-671801  
Email: [info@procentec.com](mailto:info@procentec.com)  
Internet: [www.procentec.com](http://www.procentec.com)

### ARGENTINA

eFALCOM  
Alcorta 2411  
B1744- Moreno  
Buenos Aires  
ARGENTINA  
Tel.: +54 237 46 31 151  
Fax: +54 237 46 31 150  
Email: [enrique.modai@efalcom.com](mailto:enrique.modai@efalcom.com)  
Internet: [www.efalcom.com.ar](http://www.efalcom.com.ar)

### AUSTRALIA

IS Systems Pty Limited  
14 Laverick Ave., Tomago,  
NSW, Australia, 2322  
Tel.: +61 2 4964 8548  
Fax: +61 2 4964 8877  
Email: [fritz.woller@issystems.com.au](mailto:fritz.woller@issystems.com.au)  
Internet: [www.issystems.com.au](http://www.issystems.com.au)

Tyco Flow Control Pacific  
1 Percival Road, Smithfield,  
NSW, Australia, 2164  
Tel.: +61 2 9612 2323  
Fax: +61 2 9612 2324  
Email: [nhsmith@typac.com.au](mailto:nhsmith@typac.com.au)  
Internet: [www.profibuscentre.com.au](http://www.profibuscentre.com.au)

### AUSTRIA

Dipl.Ing. Christoph Gudenus  
Rotenmuehlgasse 40/5  
1120 WIEN  
Austria  
Tel.: +43 1 812 34 20  
Fax: +43 1 812 31 55  
Email: [office@gudenus.at](mailto:office@gudenus.at)  
Internet: [www.gudenus.at](http://www.gudenus.at)

### BELGIUM

Bintz Technics N.V.  
Brixtonlaan 25,  
1930 ZAVENTEM  
Belgium  
Tel.: +32 2 720 49 16  
Fax: +32 2 720 37 50  
Email: [bloemen@bintz.be](mailto:bloemen@bintz.be)  
Internet: [www.bintz.be](http://www.bintz.be)

### BRAZIL

Westcon Instrument. Indl Ltda  
Rual Alvaro Rodrigues, 257  
São Paulo – SP  
Brazil - CEP 04582-000  
Tel.: +55 11 5561-7488  
Fax: +55 11 5093-2592  
Email: [paolo@wii.com.br](mailto:paolo@wii.com.br)  
Internet: [www.wii.com.br](http://www.wii.com.br)

Solution Engenharia de Automação  
Av. do Contorno, 7962, 10o. andar –  
Santo Agostinho, Belo Horizonte, Minas  
Gerais – Brasil – CEP 30110-120  
Tel.: +55 31 3335-7000  
Fax: +55 31 3335-7000  
Email: [solution@solution-engenharia.com.br](mailto:solution@solution-engenharia.com.br)  
Internet: [www.solution-engenharia.com.br](http://www.solution-engenharia.com.br)

### CHILE

RP Ingenieria Limitada  
Tucapel 92 oficina 52  
Concepción  
Chile  
Tel.: +56-(0)41-2522592  
Fax: +56-(0)41-2522592  
Email: [rodrigopinto@rpingeneria.cl](mailto:rodrigopinto@rpingeneria.cl)  
Internet: [www.rpingeneria.cl](http://www.rpingeneria.cl)

### CHINA

CAMETA  
Training & Marketing Department  
No. 1 Jiao Chang Kou - Room 407  
De Sheng Men Wai  
BEIJING 100011, China  
Tel.: +86-10-82285088 or 62055653  
Fax: +86-10-62055653  
Email: [training@cameta.org.cn](mailto:training@cameta.org.cn)  
Internet: [www.diewen.com](http://www.diewen.com)

### Czech Republic

FOXON e-shop  
Polní 367 460 01  
Liberec 12  
Czech Republic  
Tel.: +420 724 578 360  
Fax: +420 485 353 192  
Email: [jaromir.peterka@foxon.cz](mailto:jaromir.peterka@foxon.cz)  
Internet: [www.foxon.cz](http://www.foxon.cz)

### DENMARK

HH Automation A/S  
Hovedgaden 451F  
DK 2640 HEDEHUSENE  
Denmark  
Tel.: +45 70 20 52 01  
Fax: +45 70 20 52 02  
Email: [ph@hh-automation.dk](mailto:ph@hh-automation.dk)  
Internet: [www.hh-automation.dk](http://www.hh-automation.dk)

### FINLAND

Hantekno Oy  
Halsuantie 2,  
FIN-00421 HELSINKI  
Finland  
Tel.: +358 (0)9-530 66 570  
Fax: +358 (0)9-530 66 530  
Email: [hannu.aarrelampi@hantekno.com](mailto:hannu.aarrelampi@hantekno.com)  
Internet: [www.hantekno.com](http://www.hantekno.com)

### FRANCE

AGILiCOM  
Bâtiment B  
1, rue de la Briaudière  
Z.A. La Châtaigneraie  
37510 BALLAN-MIRE  
France  
Tel.: +33 247 76 10 20  
Fax: +33 247 37 95 54  
Email: [jy.bois@agilicom.fr](mailto:jy.bois@agilicom.fr)  
Internet: [www.agilicom.fr](http://www.agilicom.fr)

### GERMANY

PROCENTEC GmbH  
Haid-und-Neu-Str. 7  
D-76131 Karlsruhe  
Germany  
Tel.: +49-(0)721 626 96 32  
Fax: +49-(0)721 626 96 35  
Email: [tkarnau@procentec.com](mailto:tkarnau@procentec.com)  
Internet: [www.de.procentec.com](http://www.de.procentec.com)

Brandt-Data GmbH  
Friedrich-Hayn-Str. 4  
D-24582 Bordesholm  
Germany  
Tel.: +49 (0)4322-699657  
Fax: +49 (0)4322-699658  
Email: [hbrandt@brandt-data.de](mailto:hbrandt@brandt-data.de)  
Internet: [www.brandt-data.de](http://www.brandt-data.de)

profichip GmbH  
Einsteinstrasse 6  
D-91074 Herzogenaurach  
Germany  
Tel.: +49-9132-744-200  
Fax: +49-9132-744-204  
Email: [sales@profichip.com](mailto:sales@profichip.com)  
Internet: [www.profichip.com](http://www.profichip.com)

### INDIA

U L ELECTRODEVICES P LTD  
NIRMAN CLASSIC,  
KATRAJ-KONDHWA ROAD,  
KATRAJ, PUNE-411046  
India  
Tel.: +91-202 696 0050  
Fax: +91-202 696 2079  
Email: [dileep.miskin@ulepl.com](mailto:dileep.miskin@ulepl.com)  
Internet: [www.ulepl.com](http://www.ulepl.com)

### IRELAND

PROFIBUS Ireland  
University of Limerick  
National Technology Park, Plassey  
LIMERICK, Ireland  
Tel.: +353-61-202107  
Fax: +353-61-202582  
Email: [info@profibus.ie](mailto:info@profibus.ie)  
Internet: [www.profibus.ie](http://www.profibus.ie)

### ISRAEL

C-Vision computer systems Ltd.  
9 Haomanut St.  
Poleg Industry Area  
Natanya,  
Israel  
Tel.: +972-9-8633066  
Fax: +972-9-8633065  
Email: [shay@c-vision.co.il](mailto:shay@c-vision.co.il)  
Internet: [www.c-vision.co.il](http://www.c-vision.co.il)

### ITALY

C.S.M.T Gestione S.C.A.R.L.  
via Branze n. 43/45  
25123 BRESCIA  
Italy  
Tel.: +39 030 3384030  
Fax: +39 030 396999  
Email: [r.miglietti@csmt.it](mailto:r.miglietti@csmt.it)  
Internet: [www.csmt.it](http://www.csmt.it)

### JAPAN

Japanese PROFIBUS Organization  
C/O Siemens K.K.  
Takanawa Park Tower  
3-20-14 Higashi-Gotanda,  
Shinagawa-ku, TOKYO  
Japan  
Tel.: +81-3-5423-8628  
Fax: +81-3-5423-8734  
Email: [shinichi.motoyoshi@siemens.com](mailto:shinichi.motoyoshi@siemens.com)

### KOREA

Hi-PRO Tech. Co., Ltd.  
#812, SEOCHO PLATINUM, 1445-13,  
SEOCHO-DONG, SEOCHO-GU, SEOUL,  
KOREA  
Tel.: +82 (0)2-522-5005  
Fax: +82 (0)2-523-5149  
Email: [chays@hiprotech.co.kr](mailto:chays@hiprotech.co.kr)  
Internet: [www.profibus.co.kr](http://www.profibus.co.kr)

### NETHERLANDS

Ehrbecker Schiefelbusch BV  
Postbus 5505  
4801 DG BREDA  
Netherlands  
Tel.: +31-(0)76-5782860  
Fax: +31-(0)76-5719261  
Email: [at@eselektro.nl](mailto:at@eselektro.nl)  
Internet: [www.eselektro.nl](http://www.eselektro.nl)

### NORWAY

AD Elektronikk AS  
Boks 641  
N-1401 SKI  
Norway  
Tel.: +47 64 97 60 60  
Fax: +47 64 97 60 70  
Email: [kai@ade.no](mailto:kai@ade.no)  
Internet: [www.ade.no](http://www.ade.no)

### POLAND

INTEX Sp. z o.o.  
ul. Wincentego Pola 16  
44-100 GLIWICE  
Poland  
Tel.: +48 32 230 75 16  
Fax: +48 32 230 75 17  
Email: [intex@intex.com.pl](mailto:intex@intex.com.pl)  
Internet: [www.intex.com.pl](http://www.intex.com.pl)

### Romania

S.C. SVT Electronics S.R.L.  
Brăila 7  
540331 Tg-Mure  
Romania  
Tel.: +40 365 809 305  
Fax: +40 365 809 305  
Email: [sajgo.tibor@svt.ro](mailto:sajgo.tibor@svt.ro)  
Internet: [www.svt.ro](http://www.svt.ro)

### SINGAPORE

ISEP (S) Pte Ltd  
91 Defu Lane 10, #04-02  
Swee Hin Building  
Singapore 539221  
Tel.: +65-63564237  
Fax: +65-63467322  
Email: [chkoo@ise-p.com](mailto:chkoo@ise-p.com)  
Internet: [www.ise-p.com](http://www.ise-p.com)

### SOUTH AFRICA

IDX ONLINE CC  
1 Weaver Street, Fourways  
JOHANNESBURG  
South Africa  
Tel.: +27(11) 465-7916  
Fax: +27(11) 465-8890  
Email: [daveb@idxonline.com](mailto:daveb@idxonline.com)  
Internet: [www.idxonline.com](http://www.idxonline.com)

### SPAIN and PORTUGAL

ER-SOFT, SA  
Av. Constitucion, 4  
E-28230 Las Rozas,  
MADRID,  
Spain  
Tel.: +34 916.408.408  
Fax: +34 916.408.409  
Email: [info@er-soft.com](mailto:info@er-soft.com)  
Internet: [www.er-soft.com](http://www.er-soft.com)

### SWEDEN

P&L Nordic AB  
Box 252,  
S-281 23 HÄSSLEHOLM  
Sweden  
Tel.: +46 451 74 44 00  
Fax: +46 451 89 833  
Email: [hans.maunsbach@pol.se](mailto:hans.maunsbach@pol.se)  
Internet: [www.pol.se/profibus](http://www.pol.se/profibus)

### SWITZERLAND

Hochschule für Technik und Informatik  
PROFIBUS Kompetenzzentrum  
Jicoweg 1  
CH-3400 BURGDORF  
Switzerland  
Tel.: +41 (0) 34 426 68 32  
Fax: +41 (0) 34 426 68 13  
Email: [max.felser@bfh.ch](mailto:max.felser@bfh.ch)  
Internet: [www.profitrace.ch](http://www.profitrace.ch)

Endress+Hauser Process Solutions  
Kägenstrasse 2  
CH-4153 REINACH / BL1  
Switzerland  
Tel.: +41 (0) 61 715 73 00  
Fax: +41 (0) 61 715 73 01  
Email: [michael.ulrich@solutions.endress.com](mailto:michael.ulrich@solutions.endress.com)  
Internet: [www.solutions.endress.com](http://www.solutions.endress.com)

### TAIWAN

Full Data Technology  
6F., No.200, Gangqian Rd.,  
Neihu District, Taipei City  
114, Taiwan  
Tel.: +886-2-87519941/9097  
Fax: +886-2-87519533  
Email: [sales@fulldata.com.tw](mailto:sales@fulldata.com.tw)  
Internet: [www.fulldata.com.tw](http://www.fulldata.com.tw)

### TURKEY

Emikon Otomasyon  
DES Sanayi sitesi 103 sokak B-7 blok No:16  
Yukari Dudullu / Umraniye  
Istanbul 34776  
Turkey  
Tel.: +90 216 420 8347  
Fax: +90 216 420 8348  
Email: [tolgaturunz@emikonotomasyon.com](mailto:tolgaturunz@emikonotomasyon.com)  
Internet: [www.emikonotomasyon.com](http://www.emikonotomasyon.com)

### UNITED ARAB EMIRATES

Adaptive Measuring and Control  
P.O Box-123759 Unit No.424,  
Al Diyafah Building, Al- Diyafah Street,  
Satwa Dubai,  
United Arab Emirates  
Tel.: +971-4-3982760  
Fax: +971-4-3982761  
Email: [scsanu@emirates.net.ae](mailto:scsanu@emirates.net.ae)

### UNITED KINGDOM

Safronics Limited  
Pearson Street, Leeds  
LS10 1BQ  
United Kingdom  
Tel.: +44 (0)113 245 7170  
Fax: +44 (0)113 236 4010  
Email: [ian.robinson@safronics.co.uk](mailto:ian.robinson@safronics.co.uk)  
Internet: [www.safronics.co.uk](http://www.safronics.co.uk)

### iTech

Unit 1  
Dukes Road  
Troon, Ayrshire KA10 6QR  
United Kingdom  
Tel.: +44 (0)1292 311 613  
Fax: +44 (0)1292 311 578  
Email: [sales@itech-troon.co.uk](mailto:sales@itech-troon.co.uk)  
Internet: [www.itech-troon.co.uk](http://www.itech-troon.co.uk)

### Hi-Port Software Limited

The Hub 2 Martin Close  
Lee-on-Solent, Hampshire  
PO13 8LG,  
United Kingdom  
Tel.: +44 (0)8452 90 20 30  
Fax: +44 (0)2392 552880  
Email: [sales@hiport.co.uk](mailto:sales@hiport.co.uk)  
Internet: [www.hiport.co.uk](http://www.hiport.co.uk)

Verwer Training & Consultancy  
5 Barclay Road  
Poynton  
Stockport  
Cheshire SK12 1YY  
United Kingdom  
Tel.: +44 (0)1625 871199  
Email: [andy@verwertraining.com](mailto:andy@verwertraining.com)  
Internet: [www.verwertraining.com](http://www.verwertraining.com)

### UNITED STATES

Grid Connect Inc.  
1630 W. Diehl Road  
Naperville, Illinois 60563  
USA  
Tel.: +1 630 245-1445  
Fax: +1 630 245-1717  
Email: [sales@gridconnect.com](mailto:sales@gridconnect.com)  
Internet: [www.factorycomm.com](http://www.factorycomm.com)





### URUGUAY

ZyTECH (Kuolong s.r.l.)  
Cerro Largo 788 Bis  
11100 Montevideo  
Uruguay  
Tel.: +598 2 901 3311  
Fax: +598 2 901 3311  
Email: [javier@zytech.com.uy](mailto:javier@zytech.com.uy)  
Internet: [www.zytech.com.uy](http://www.zytech.com.uy)

### VIETNAM

Bavitech  
42 Truong Son Street  
Ward 2, Tan Binh District  
Ho Chi Minh City  
Vietnam  
Tel.: +84-8-3547 0976  
Fax: +84-8-3547 0977  
Email: [hai.hoang@bavitech.com](mailto:hai.hoang@bavitech.com)  
Internet: [www.bavitech.com](http://www.bavitech.com)

## 7 Order codes

Component	Order code	Remarks
 <p><b>ProfiHub A5</b></p>	16010	Includes mounting set.
 <p><b>Ground rail</b></p>	16011	The ground rail has to be mounted inside the casing to supply a common grounding area for all cable shielding. It improves the EMC behaviour and it supplies a good construction for vibrations. Not useable for capacitive grounding!
 <p><b>M12 female flange set</b></p>	16012	Set of 5 pieces (female).
 <p><b>ProfiHub B5</b></p>	17010	--

## 8 Glossary

Address	Unique number of a device connected to the network. With PROFIBUS this can be 0 to 126. 127 is a broadcast address.
Analyzer	Software tool to observe the protocol traffic. Combi-Analyzers can also inspect the signal quality. Other term: Bus Monitor. Example: ProfiTrace.
Backbone	The primary bus cable. Most of the time only the control systems, ProfiHubs and fiber optic couplers are connected to this cable. The field devices are connected behind the ProfiHubs and fiber optic couplers.
Bit Time (TBit)	The bit time TBit is the time, which elapses during the transmission of one bit. It depends on the baudrate and is calculated as follows $TBit = 1 \text{ (bit)} / \text{baudrate (bps)}$ . Examples: 12 Mbps --> TBit = 83 ns 1,5 Mbps --> TBit = 667 ns
Busparameters	Settings that define the timing behaviour on the bus. They are defined in the master. Examples: Tslot, MaxTSDR.
C	Capacitance.
DGND	Digital Ground.
DIN	German Institute for Standardization ( <a href="http://www.din.de">www.din.de</a> ).
DP-V0	DP-V0 is the basic stage of the PROFIBUS DP communication protocol. DP-V0 devices (master and slaves) perform the following basic functionalities: <ul style="list-style-type: none"> <li>- Cyclic exchange of I/O data between controlling and slave devices</li> <li>- Device, Identifier (module) and Channel related Diagnosis</li> <li>- Parameterization of DP-slaves</li> <li>- Configuration of DP-slaves</li> </ul>
DP-V1	DP-V1 is the first stage of extension of PROFIBUS DP after DP-V0. DP-V1 devices shall comply with the following features: <ul style="list-style-type: none"> <li>- Device related diagnosis is replaced by status and alarms.</li> <li>- The first three octets of the user parameterization data are now standardized</li> <li>- Optionally these devices may support: <ul style="list-style-type: none"> <li>- Acyclic communication (MS1, MS2)</li> <li>- If alarms are used, MS1 shall be supported</li> </ul> </li> </ul>

DP-V2	<p>DP-V2 is the second stage of extension of PROFIBUS DP after DP-V1. DP-V2 devices shall comply with the following features:</p> <ul style="list-style-type: none"> <li>- Data Exchange Broadcast (DxB) for slave to slave communication (publisher/subscriber principle).</li> <li>- Isochronous Mode (time tick synchronized operating slaves, e.g. drives)</li> <li>- Up- and/or download of Load Region Data (domains)</li> <li>- Clock Control (synchronization within slaves) and Time Stamping</li> <li>- Redundancy.</li> </ul>
Electromagnetic Compatibility	<p>See <i>EMC</i>.</p>
EMC	<p>The extent to which an electric or electronic device will tolerate electrical interference from other equipment (immunity), and will interfere with other equipment. Within the European Community as well as in other countries it is regulated by law that electric and electronic components and equipment comply with basic standards such as IEC 61000-6-2 or IEC 61326 or corresponding individual product standards.</p>
Hub	<p>A Hub refreshes a signal and passes the information on to all nodes which are connected to the Hub. Data frames which were received on one port are transferred to all the other ports (chicken foot topology).</p>
MPI	<p>Multiple Protocol Interface. Protocol defined by Siemens which uses the layer 1 and 2 of PROFIBUS (FDL).</p>
PCB	<p>Printed Circuit Board.</p>
PROFIBUS DP	<p>Acronym for "PROFIBUS for Decentralized Peripherals". Specification of an open fieldbus system with the following characteristics:</p> <ul style="list-style-type: none"> <li>- Polling master-slave-system (cyclic communications, MS0)</li> <li>- Flying masters with robin round token passing coordination (MM)</li> <li>- Connection based (MS1) and connectionless (MS2, MS3) acyclic communication between masters and slaves</li> </ul> <p>Options (e.g.):</p> <ul style="list-style-type: none"> <li>- Data exchange broadcast (DXB), i.e. slave to slaves communication</li> <li>- Isochronous mode of slaves</li> <li>- Clock synchronization</li> <li>- Redundancy</li> </ul> <p>PROFIBUS DP is standardized within IEC 61158 and IEC 61784, communication profile families 3/1 and 3/2</p> <p>The term "PROFIBUS DP" also is a synonym for the RS485 based deployments within factory automation.</p>
Repeater	<p>Active physical layer device that receives and retransmits all signals over a different port to increase the distance and number of devices for which signals can be correctly transferred for a given medium.</p>
Spur line	<p>A cable attached to a bus segment with a T-connection . Spurs are not recommended with PROFIBUS DP. They are prohibited with 12 Mbps and PROFIsafe operations. German term is "Stichleitung".</p>

Stub line	See <i>Spur line</i> .
TBit	See <i>Bit Time</i> .
Termination	A (powered) resistor network at both ends of a segment to prevent reflections (with PROFIBUS DP the termination has to be powered).
Topology	In a communications network, the pattern of interconnection between network nodes; e.g. bus, ring, star configuration.
PI	PROFIBUS International. The International PROFIBUS Organization based in Karlsruhe.
PNO	PROFIBUS Nutzer Organization. The German PROFIBUS Organization based in Karlsruhe.
Drop cable	See <i>Spur line</i> .
Reflection	Part of the original signal that is transmitted back along the cable. It corrupts the original signal.

## 9 Certificates

**QualityMasters**

Stichting QualityMasters hereby declares that

**PROCENTEC  
WATERINGEN**

Has a management system that meets the requirements of the standard

**NEN-EN-ISO 9001:2000**

For the scope

Providing training courses, technical support, product development  
and the exploitation of the test laboratory.

Date of issue 11<sup>th</sup> April 2008  
Valid until 11<sup>th</sup> April 2013  
Certificate number NL 4792

On behalf of Stichting QualityMasters,

N.B. The failure to meet the conditions as set forth in the certification agreement, or non-compliance with the given standard and/or guidelines, may lead to the suspension or cancellation of the certificate.

This certificate remains the property of Stichting Quality Masters.

**SRTCI**  
**ACCREDITED**  
EU9706010F



## ***Certificate for a PI Competence Center***

*PI confirms that*

**PROCENTEC  
Dennis van Booma  
Turfschipper 41  
2292 JC Wateringen  
THE NETHERLANDS**

*is a fully accredited  
PI Competence Center for PROFIBUS basic and  
PROFIBUS PA.*

*This certificate is granted according to the Quality of Services  
Agreement for PI Competence Centers and is valid for 2 years,  
until December 31, 2009.*

Karlsruhe, May 05, 2008



  
.....  
(Official in Charge)

Chairmen of PI

  
Michael Bryant (Chairman)

  
Jörg Freitag (Deputy Chairman)



**Authorization as PI Test Laboratory  
for PROFIBUS**

PROFIBUS Nutzerorganisation e.V. accepts  
**PROCENTEC**  
**Turfschipper 41**  
**2292 JC WATERINGEN**  
**NETHERLANDS**

as authorized PI Test Laboratory for:

**PROFIBUS Devices.**

The authorization is based on the assessment and expert report of Dr. Patz dated December 31, 2006.

The execution of the tests aimed in the PROFIBUS certification shall be conform to the PROFIBUS Standard and the valid guidelines.

 
This authorization is valid for 2 years, i.e. until December 31, 2008

Karlsruhe, March 2, 2007



Board of PROFIBUS Nutzerorganisation e. V.

  
\_\_\_\_\_  
(Edgar Küster)

  
\_\_\_\_\_  
(Klaus-Peter Lindner)

## 10 Revision History

### Version 0.3

- First release.

### Version 0.4

- Update of technical information.
- Addition of the ProfiHub B5 (first part).

### Version 0.5

- Update of technical information.
- Paragraph with ProfiHub A5/B5 comparison.
- Chapter with order codes.

### Version 1.1

- Final first release.

### Version 2.0

- Updated the Technical Data.
- Updated the Distributors.
- Added Certificates.
- Added Notes.

## 11 Next version

- Signal amplitudes.
- Capacity of a channel.
- Description of the ground rail.
- Adjustment of busparameters when cascading a large number of ProfiHubs.
- Use of the diagnostic connector.









## Other PROCENTEC products

### PROFINET Cable Tester

- ✓ Suitable for 4- and 8-wire PROFINET and regular Ethernet cables.
- ✓ Suitable for straight and 90°, metal or plastic PROFINET plugs.
- ✓ Tests cable shielding!
- ✓ Detects short circuits, wire breaks, swaps, miswiring and split pairs.
- ✓ Large LCD clearly indicates the test results.
- ✓ 150 hours on one 9 V battery.
- ✓ Operating temperature: 0 to 50 °C.
- ✓ Just 1-key-press to start continuous testing.
- ✓ It can also test telephone and coax cable.



[www.profinetcabletester.com](http://www.profinetcabletester.com)



### Compact PROFIBUS Repeater

- ✓ Single channel PROFIBUS repeater.
- ✓ Transparent.
- ✓ Latest RS 485 technology.
- ✓ Max. 12 Mbps.
- ✓ Auto baudrate detection.
- ✓ Redundant power supply.
- ✓ Digital glitch filtering.
- ✓ No limit in cascading.
- ✓ Integrated switchable termination.
- ✓ Diagnostic LEDs.
- ✓ DB9 connector for measurements.
- ✓ IP 20 with DIN-rail mounting.

[www.procentec.com/profihub/b1/en](http://www.procentec.com/profihub/b1/en)