

X-gateway Interface Addendum AS Interface Master

Doc: HMSI-27-256
Rev: 2.20



HALMSTAD • CHICAGO • KARLSRUHE • TOKYO • BEIJING • MILANO • MULHOUSE • COVENTRY • PUNE • COPENHAGEN

Important User Information

This document is intended to provide a good understanding of the functionality offered by the Interface described here.

The reader is expected to be familiar with high level software design, and communication systems in general. The use of advanced interface-specific functionality may require in-depth knowledge of networking internals and/or information from the network specifications. In such cases, the persons responsible for the implementation of this product should either obtain the necessary specifications to gain sufficient knowledge, or alternatively limit the implementation in such a way that this is not necessary.

Liability

Every care has been taken in the preparation of this manual. Please inform HMS Industrial Networks AB of any inaccuracies or omissions. The data and illustrations found in this document are not binding. We, HMS Industrial Networks AB, reserve the right to modify our products in line with our policy of continuous product development. The information in this document is subject to change without notice and should not be considered as a commitment by HMS Industrial Networks AB. HMS Industrial Networks AB assumes no responsibility for any errors that may appear in this document.

There are many applications of this product. Those responsible for the use of this device must ensure that all the necessary steps have been taken to verify that the applications meet all performance and safety requirements including any applicable laws, regulations, codes, and standards.

HMS Industrial Networks AB will under no circumstances assume liability or responsibility for any problems that may arise as a result from the use of undocumented features, timing, or functional side effects found outside the documented scope of this product. The effects caused by any direct or indirect use of such aspects of the product are undefined, and may include e.g. compatibility issues and stability issues.

The examples and illustrations in this document are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular implementation, HMS Industrial Networks AB cannot assume responsibility for actual use based on these examples and illustrations.

Intellectual Property Rights

HMS Industrial Networks AB has intellectual property rights relating to technology embodied in the product described in this document. These intellectual property rights may include patents and pending patent applications in the US and other countries.

Trademark Acknowledgements

Anybus ® is a registered trademark of HMS Industrial Networks AB. All other trademarks are the property of their respective holders.

!

WARNING: This is a class A product. in a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

ESD Note: This product contains ESD (Electrostatic Discharge) sensitive parts that may be damaged if ESD control procedures are not followed. Static control precautions are required when handling the product. Failure to observe this may cause damage to the product.

Table of Contents

Important User Information	
<i>Liability</i>	2-2
<i>Intellectual Property Rights</i>	2-2
<i>Trademark Acknowledgements</i>	2-2
Preface	About This Document
How To Use This Document	P-5
Related Documents.....	P-5
Document History	P-5
Conventions & Terminology.....	P-5
Support	P-5
Chapter 1	About the AS-Interface Master
General Description.....	1-6
Features.....	1-6
Status LEDs	1-7
Connectors & Buttons.....	1-7
Chapter 2	Installation and Configuration
Gateway Config Interface	2-8
Master Config Interface	2-9
<i>General Information</i>	2-9
<i>Invoking the Configuration Interface</i>	2-10
<i>Main Menu</i>	2-10
<i>View Scanlists</i>	2-11
<i>View All Slaves</i>	2-12
<i>View Detected Slaves</i>	2-12
<i>View Single Slave</i>	2-12
<i>Toggle Mode</i>	2-13
<i>Toggle Online / Offline Mode</i>	2-13
<i>Auto Address</i>	2-14
<i>Save Configuration</i>	2-14
<i>Slave Settings</i>	2-15

Chapter 3 Data Exchange

General Information.....	3-16
Data Format.....	3-17
<i>General Information</i>	3-17
<i>Digital I/O Image</i>	3-17
<i>Analog I/O</i>	3-19
<i>Live List</i>	3-19
<i>Valid Data List</i>	3-20
Configuration Examples	3-21
<i>Input Data</i>	3-21
<i>Output Data</i>	3-22
Control & Status Word Implementation.....	3-23
<i>Status Word</i>	3-23
<i>Control Word</i>	3-23
AS-I Status Flags	3-24
<i>Status Flags 1 (698h, RO)</i>	3-24
<i>Status flags 2 (699h, RO)</i>	3-24

Chapter 4 AS-Interface Implementation Details

General Information.....	4-25
Network Security.....	4-26
Automatic Slave Address Assignment	4-26
Synchronous Data I/O	4-27
Configuration Button	4-27

Appendix A Technical Specification

AS-Interface Connector Pinout	A-28
Master Config Interface Pinout	A-28

P. About This Document

P.1. How To Use This Document

This document describes the various features of the AS-Interface Master for the X-gateway, basic network installation procedures and other network specific details. General information and operating instructions for the gateway is available in the Generic X-Gateway User Manual.

P.2. Related Documents

Document	Author
Anybus-X Generic Gateway User Manual	HMS
Anybus-M AS-i Fieldbus Appendix	
AS-i Complete Specification (publ. CS 3.0 rev. 1)	AS-International Association
AS-i Profiles (Annex A and B, ver 3.0, rev. 1)	

P.3. Document History

Revision List

Revision	Date	Author(s)	Chapter(s)	Description
<2.00	-	-	-	(see older documents)
2.00	2007-06-04	PeP	All	First release
2.10	2007-12-04	PeP	-	Minor update
2.11	2008-02-25	PeP	-	Minor update
2.12	2008-09-18	StK	3	Minor update
2.13	2009-08-25	KeL	3	Minor update
2.20	May 2014	SDa	All	New hardware and Anybus Configuration Manager

P.4. Conventions & Terminology

The following conventions are used throughout this manual:

- Numbered lists provide sequential steps
- Bulleted lists provide information, not procedural steps
- The term ‘Master interface’ refers to the AS-Interface Master Interface for the X-gateway
- The term ‘Slave interface’ or ‘other network’ refers to the other, non AS-Interface side of the gateway.
- The term ‘user manual’ is used when referring to the Anybus-X Generic Gateway User Manual.
- Hexadecimal values are written in the format NNNNh, where NNNN is the hexadecimal value.

P.5. Support

For general contact information and support, please refer to the contact and support pages at www.anybus.com.

1. About the AS-Interface Master

1.1. General Description

The AS-Interface Master interface for the Anybus X-gateway implements an extended AS-Interface master (M4), and complies to version 3.0 of the AS-i Complete Specification.

The interface features an onboard configuration interface; providing user friendly access to AS-Interface specific parameters, as well as the settings for each slave. It can also be used to monitor the activity on the AS-Interface network.

Like all X-gateway interfaces, the AS-Interface Master exchanges data via two buffers as follows:


- **Input Buffer**

This buffer holds data *from the other network*, i.e. data that will be sent to the slaves on the AS-Interface network.

- **Output Buffer**

This buffer holds data *from the slaves on the AS-Interface network*, i.e. data that will be sent *to* the other network.

Apart from network I/O, this can optionally also include general status information from the AS-Interface network.

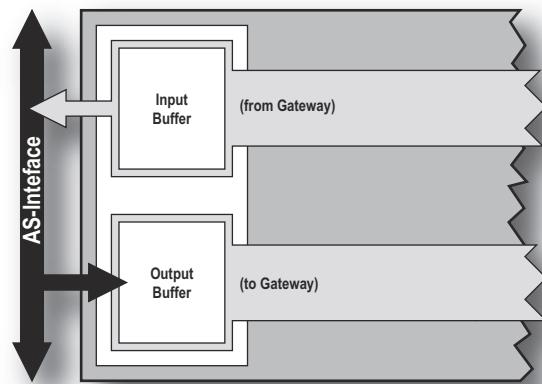

1.2. Features


- Controls up to 62 slaves
- Supports Combined Transaction Types 1, 2, 3, 4 and 5¹
- Up to 248 digital inputs and 186 digital outputs
- Up to 124 (16-bit) analog values
- Synchronous I/O (optional)
- Galvanically isolated bus electronics
- On-board configuration button
- Terminal-based Monitoration & Configuration interface (RS232)

1. Some profile-specific features are not supported, see 4-25 “AS-Interface Implementation Details”


1.3. Status LEDs

LED	State	Indication
Gateway Status	Consult the X-gateway user manual for further details.	
RUN	Green	Running
	Red	Idle
NS	Green	Online, no connections
	Green, 1Hz	Online according to configuration
	Red	Offline
MS	Green	Configuration mode
	Green, 8Hz	Auto Configuration in progress
	Green, 1Hz	Protected mode
	Red	Power Fail bus
AUP	Green, 8Hz	Auto programming possible
	Green, 1Hz	Slave address 0 exists
	Red	Periphery error
	Red, 8Hz	Periphery error - auto-programming possible
	Red, 1Hz	Periphery error - slave with address 0 exist


Front View

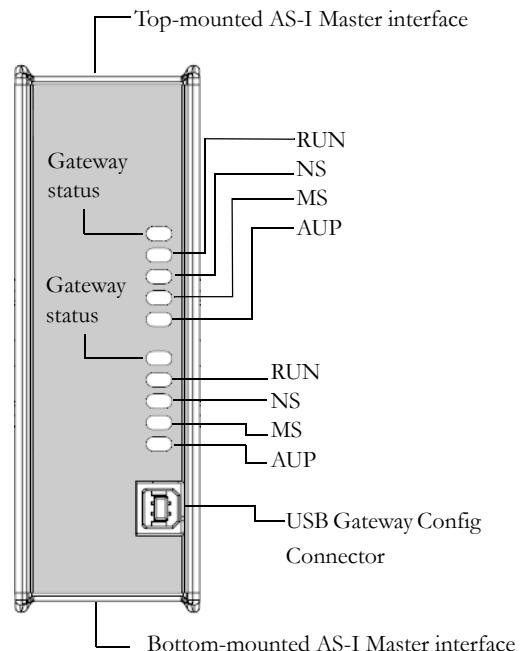

Top-mounted interface

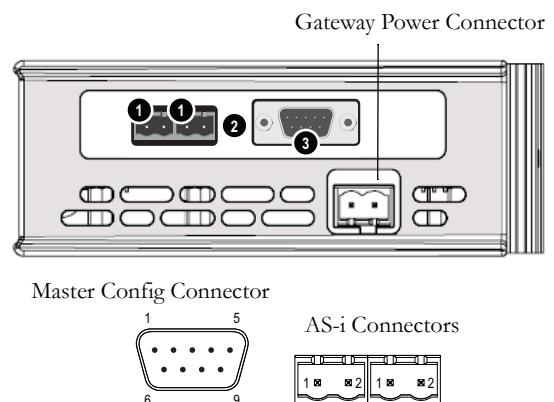

Bottom-mounted interface

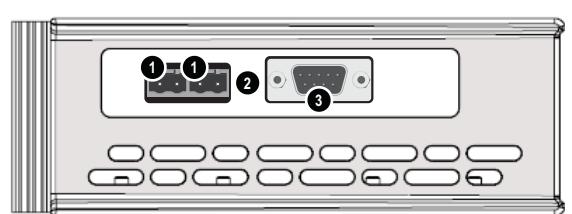

1.4. Connectors & Buttons

#	Description
1	AS-Interface connector See “AS-Interface Connector Pinout” on page 28.
2	Configuration Button See “Configuration Button” on page 27.)
3	Master Config connector See “Master Config Interface Pinout” on page 28.

Gateway Power connector

Consult the X-gateway user manual for further details.

USB Gateway Config connector

Consult the X-gateway user manual for further details.

2. Installation and Configuration

2.1. Gateway Config Interface

The X-Gateway and the AS Interface may be configured by using the software tool **Anybus Configuration Manager** (ACM), which is available from www.anybus.com/support

When ACM is connected to the gateway via the USB configuration connector, the following settings are available:

Network Type	
Name	AS-Interface Master
General	
Offline option	Clear
Fieldbus Specific	
Live list	Disabled
Valid data list	Disabled
Data Representation	Byte Mode
Synchronous I/O mode	Disabled

See also...

- The Anybus X-gateway User Manual, for full details on using ACM.
- The online help in ACM, for further help on the available settings.

2.2. Master Config Interface

2.2.1. General Information

The Master Config Interface can be accessed via RS232 using standard terminal emulation software.

The interface uses the following communication settings:

Emulation:	ASCII
Baud rate:	57600bps
Data bits:	8
Stop bits:	1
Parity:	None
Flow control:	None

The interface features a hierarchical menu system as follows:

	Menu Level 1	Menu Level 2	Menu Level 3	Menu Level 4
(Main Menu)	View scan-lists			
	View all slaves	Select Slave	Change Param	Parameter
			Change NV Param	NV Parameter
			Change NV I/O	NV I/O
			Change NV ID	NV ID
			Change NV Ext ID1	NV Ext ID1
			Change NV Ext ID2	NV Ext ID2
			Change Node address	Node address
	View all detected slaves	Select Slave	Change Param	Parameter
			Change NV Param	NV Parameter
			Change NV I/O	NV I/O
			Change NV ID	NV ID
			Change NV Ext ID1	NV Ext ID1
			Change NV Ext ID2	NV Ext ID2
			Change Node address	Node address
	View single slave	Select Slave	Change Param	Parameter
			Change NV Param	NV Parameter
			Change NV I/O	NV I/O
			Change NV ID	NV ID
			Change NV Ext ID1	NV Ext ID1
			Change NV Ext ID2	NV Ext ID2
			Change Node address	Node address
			I/O Monitor	I/O Data
	Toggle Mode	Select Configuration	Configuration Mode	
		Select Protected	Protected Mode	
	Toggle online/offline	Select online	Online	
		Select offline	Offline	
	Toggle auto address enabled / disabled	Enable Auto Address	Enabled	
		Disable Auto Address	Disabled	
	Save Configuration	Configuration Saved		

2.2.2. Invoking the Configuration Interface

When the interface detects a connection on the Master Config Interface, the following message is displayed.

```
-----  
Press Enter for configuration menu  
-----  
NOTE: I/O exchange will be halted  
-----
```

To open the Configuration Interface, press <Enter>.

2.2.3. Main Menu

The main menu holds the following menu entries.

Menu Command	Description
View scan-lists	Display AS-i scan lists
View all slaves	Display all slaves together with their actual configuration (Note that only detected slaves contain configuration information)
View all detected slaves	Display all detected slaves together with their actual configuration
View single slave	Display the actual and permanent configuration of a specified slave
Toggle Mode	Toggle between Protected Mode and Configuration Mode
Toggle online/offline	Toggle between online / offline status
Toggle auto address enabled / disabled	Enable / Disable automatic slave 0 addressing
Save Configuration	Store actual configuration in EEPROM and use as permanent configuration

```
Anybus-M AS-i Main Menu
-----
1 - View scan-lists
2 - View all slaves
3 - View all detected slaves
4 - View single slave
5 - Toggle Protected/Configuration
6 - Toggle Online/Offline
7 - Toggle auto addressing On/Off
8 - Save configuration
-----
Offline phase active: False  Power fail:      False
Normal operation:    True   Slave 0 exists:  False
Configuration match: False  Periphery fault: False
Address collision:  False  EEPROM status:   Ok
Auto address enable: On    Auto address assign: False
Offline mode:        Online
Autoprogramming:     Not possible
Operation mode:      Configuration
>
```

This section reflects the state of the AS-i flag bytes. For more information, consult the AS-i Specification.

2.2.4. View Scanlists

This menu displays an overview of the state of the slaves on the AS-Interface network as follows:

```
-----
Anybus-M AS-i View Scan-lists
-----
-----  

Detected Slaves  

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15  

- - - - - - - - - - - - - - - - - - -  

16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31  

- - - - - - - - - - - - - - - - - - -  

32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47  

- - - - - - - - - - - - - - - - - - -  

48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63  

- - - - - - - - - - - - - - - - - - -  

Configured Slaves  

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15  

- - - - - - - - - - - - - - - - - - -  

16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31  

- - - - - - - - - - - - - - - - - - -  

32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47  

- - - - - - - - - - - - - - - - - - -  

48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63  

- - - - - - - - - - - - - - - - - X  

Activated Slaves  

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15  

- - - - - - - - - - - - - - - - - - -  

16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31  

- - - - - - - - - - - - - - - - - - -  

32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47  

- - - - - - - - - - - - - - - - - - -  

48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63  

- - - - - - - - - - - - - - - - - - -  

List of periphery faulted slaves  

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15  

- - - - - - - - - - - - - - - - - - -  

16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31  

- - - - - - - - - - - - - - - - - - -  

32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47  

- - - - - - - - - - - - - - - - - - -  

48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63  

- - - - - - - - - - - - - - - - - - -  

>
```

- : No slave present

x : Slave present

2.2.5. View All Slaves

This menu displays the I/O configuration, ID codes etc. for each slave on the network.

```
-----
Anybus-M AS-i View All Slaves
-----
Select slave to view (dec)
Back - Esc
-----
Slave 0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15
I/O - - - - - - - - - - - - - - - -
ID - - - - - - - - - - - - - - - -
Param - - - - - - - - - - - - - - - -
Slave 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31
I/O - - - - - - - - - - - - - - - -
ID - - - - - - - - - - - - - - - -
Param - - - - - - - - - - - - - - - -
Slave 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47
I/O - - - - - - - - - - - - - - - -
ID - - - - - - - - - - - - - - - -
Param - - - - - - - - - - - - - - - -
Slave 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63
I/O - - - - - - - - - - - - - - - -
ID - - - - - - - - - - - - - - - -
Param - - - - - - - - - - - - - - - -
>
```

To alter the settings for a particular slave, enter the slave address and press <Enter>.

2.2.6. View Detected Slaves

This menu displays all detected slaves on the AS-Interface network.

```
-----
Anybus-M AS-i View All Detected Slaves
-----
Select slave to view (dec)
Back - Esc
-----
Slave ID I/O ID1 ID2 Param
>
```

To alter the settings for a particular slave, enter the slave address and press <Enter>.

2.2.7. View Single Slave

This menu provides access to the settings of an individual AS-Interface slave.

```
-----
Anybus-M AS-i View single slave
-----
Enter slave number (dec)
-----
```

To view or alter the settings for a particular slave, enter the slave address and press <Enter>.

2.2.8. Toggle Mode

This menu is used when switching between Protected- and Configuration Mode.

```
-----  
Anybus-M AS-i Toggle Protected/Configuration  
-----
```

- ```
1 - Configuration
2 - Protected

```

```
Module in configuration mode
```

Specify the mode of operation or press <ESC> to cancel.

### 2.2.9. Toggle Online / Offline Mode

This menu is used when switching between online- and offline mode.

```

Anybus-M AS-i Toggle Online/Offline

```

- ```
1 - Offline  
2 - Online  
-----
```

```
AS-i bus online
```

Specify the mode of operation or press <ESC> to cancel.

2.2.10. Auto Address

This menu is used when enabling/disabling the automatic address programming feature.

```
-----  
Anybus-M AS-i Toggle Auto address On/Off  
-----
```

- ```
1 - Auto addressing On
2 - Auto addressing Off

```

```
Auto addressing enabled
```

Specify the mode of operation or press <ESC> to cancel.

### 2.2.11. Save Configuration

This menu is used when storing the current configuration in non-volatile memory.

```

Anybus-M AS-i Save configuration

```

```
Press Enter to save configuration

```

Press <Enter> to store the current configuration, or <ESC> to cancel.

**Note:** Saving the configuration is not permitted in Protected Mode.

## 2.2.12. Slave Settings

The following menu appears when altering the settings for a particular slave (main menu entries 1... 4).

```

 Select value to change

1 - Change Parameter
2 - Change NV Parameter
3 - Change NV I/O
4 - Change NV ID
5 - Change NV Ext ID1
6 - Change NV Ext ID2
7 - Change Node address

Values for node number: 45
I/O f NV I/O f
ID f NV ID f
ID1 f NV ID1 f
ID2 f NV ID2 f
Param f NV Param f
>
```

To alter a particular setting, enter the corresponding digit and press <Enter>. An additional menu appears, allowing the specified setting to be altered. Specify the new value and press <Enter>.

```

 Change Parameter


 Enter new value
 Back - Esc

Value for node number: 45
Old value f
>
```

## 3. Data Exchange

### 3.1. General Information

The following figure illustrates the flow of data through the gateway:

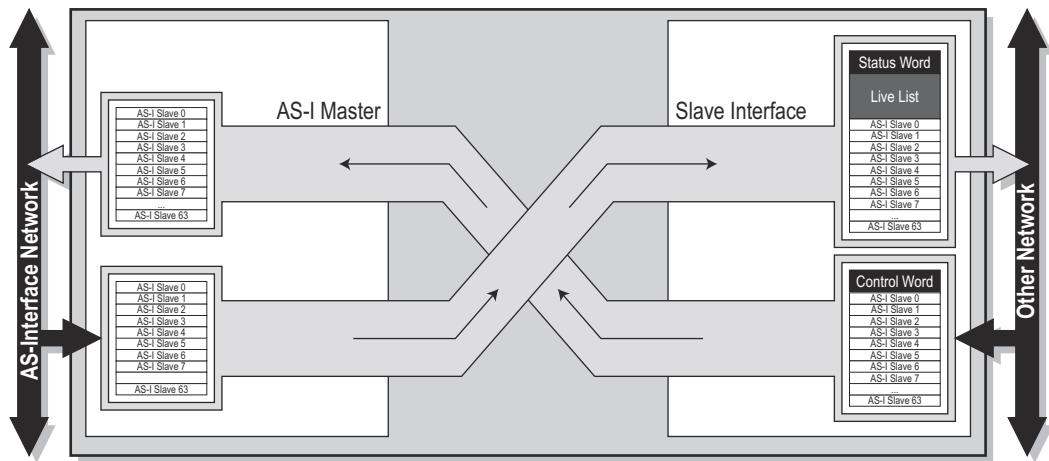

Due to the nature of the AS-Interface networking system, a few things need to be kept in mind:

- The Control- and Status Words cannot be accessed from the AS-Interface network
- AS-Interface slave 0A (0) is used for automatic slave address assignment and cannot be used for data exchange.
- Slave 0B (32) is reserved and cannot carry any data.
- The Live List, Valid Data List and the Control/Status Words can be completely disabled via the Gateway Config interface.

For more information, consult the X-gateway User Manual.

## 3.2. Data Format

### 3.2.1. General Information

The following data is forwarded to/from the other network side:

- **Input Buffer**

- Status Word (Consult the user manual for further information)
- Live List (See “Live List” on page 19.)
- Valid Data List (See “Valid Data List” on page 20.)
- Input Data Image (See “Digital I/O Image” on page 17.)
- Analog Input Image (See “Analog I/O” on page 19.)

- **Output Buffer**

- Control Word (See “Control & Status Word Implementation” on page 23.)
- Output Data Image (See “Digital I/O Image” on page 17.)
- Analog Output Image (See “Analog I/O” on page 19.)

**Note:** The Control- and Status Words are not represented on the AS-Interface side.

### 3.2.2. Digital I/O Image

AS-Interface is nibble-oriented; each slave carries 4 bits in each direction. This is reflected in the Digital I/O block, where data can be represented either in packed (nibble) mode or in byte-mode. The former packs the data of two slaves into a single byte, while the latter assigns a full byte to each slave (in such case, the upper 4 bits will not carry any data).

Since most other networks are either byte- or word-oriented; this must be taken in account when setting up the network communication.

- **Byte Mode (Default)**

(The data is located in the lower nibble of each byte)

| Offset   | Slave no. |     |     |     |     |     |     |     |  |  |  |  |  |  |  |  |
|----------|-----------|-----|-----|-----|-----|-----|-----|-----|--|--|--|--|--|--|--|--|
| 0... 7   | 0         | 1   | 2   | 3   | 4   | 5   | 6   | 7   |  |  |  |  |  |  |  |  |
| 8... 15  | 8         | 9   | 10  | 11  | 12  | 13  | 14  | 15  |  |  |  |  |  |  |  |  |
| 16... 23 | 16        | 17  | 18  | 19  | 20  | 21  | 22  | 23  |  |  |  |  |  |  |  |  |
| 24... 31 | 24        | 25  | 26  | 27  | 28  | 29  | 30  | 31  |  |  |  |  |  |  |  |  |
| 32... 39 | -         | 1B  | 2B  | 3B  | 4B  | 5B  | 6B  | 7B  |  |  |  |  |  |  |  |  |
| 40... 47 | 8B        | 9B  | 10B | 11B | 12B | 13B | 14B | 15B |  |  |  |  |  |  |  |  |
| 48... 55 | 16B       | 17B | 18B | 19B | 20B | 21B | 22B | 23B |  |  |  |  |  |  |  |  |
| 56... 63 | 24B       | 25B | 26B | 27B | 28B | 29B | 30B | 31B |  |  |  |  |  |  |  |  |

- **Nibble Mode**

(Even slaves = low nibble, odd slaves = high nibble)

| Offset   | Slave no. |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|----------|-----------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 0... 7   | 1         | 0   | 3   | 2   | 5   | 4   | 7   | 6   | 9   | 8   | 11  | 10  | 13  | 12  | 15  | 14  |
| 8... 15  | 17        | 16  | 19  | 18  | 21  | 20  | 23  | 22  | 25  | 24  | 27  | 26  | 29  | 28  | 31  | 30  |
| 16... 23 | 1B        | -   | 3B  | 2B  | 5B  | 4B  | 7B  | 6B  | 9B  | 8B  | 11B | 10B | 13B | 12B | 15B | 14B |
| 24... 31 | 17B       | 16B | 19B | 18B | 21B | 20B | 23B | 22B | 25B | 24B | 27B | 26B | 29B | 28B | 31B | 30B |

**Note:** Slaves 0A (0) and 0B (32) are reserved for special purposes and does not carry any data.

### 3.2.3. Analog I/O

The Analog I/O block holds data exchanged over Combined Transaction Types 1... 5.

The actual layout of this block depends on the profile of each slave.

*Example:*

| Offset     | Word no. | Description                               |
|------------|----------|-------------------------------------------|
| 0... 1     | 1        | Analog Input Data for slave 1, channel 0  |
| 2... 3     | 2        | Analog Input Data for slave 1, channel 1  |
| 4... 5     | 3        | Analog Input Data for slave 1, channel 2  |
| 6... 7     | 4        | Analog Input Data for slave 1, channel 3  |
| 8... 9     | 5        | Analog Input Data for slave 2, channel 0  |
| 10... 11   | 6        | Analog Input Data for slave 2, channel 1  |
| 12... 13   | 5        | Analog Input Data for slave 2B, channel 0 |
| 14... 15   | 6        | Analog Input Data for slave 2B, channel 1 |
| ...        | ...      | ...                                       |
| 246... 247 | 124      | Analog Input Data for slave 31, channel 3 |

See also...

- 3-20 “Valid Data List”

### 3.2.4. Live List

The Live List is an 8-byte bitfield which holds the active status of each slave on the AS-Interface network.

**Note:** The Live List can be disabled through the Gateway Configuration Interface.

### 3.2.5. Valid Data List

The Valid Data List indicates the validity of each analog/transparent (CTT) data channel through a single bit, and is refreshed every 5ms.

| Offset:         | b7 (MSB)             | b6                   | b5                   | b4                   | b3                   | b2                   | b1                   | b0 (LSB)             |
|-----------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|----------------------|
| 0               | Slave:<br>2:3/2B:1   | Slave:<br>2:2/2B:0   | Slave:<br>2:1/2A:1   | Slave:<br>2:0/2A:0   | Slave:<br>1:3/1B:1   | Slave:<br>1:2/1B:0   | Slave:<br>1:1/1A:1   | Slave:<br>1:0/1A:0   |
| 1               | Slave:<br>4:3/4B:1   | Slave:<br>4:2/4B:0   | Slave:<br>4:1/4A:1   | Slave:<br>4:0/4A:0   | Slave:<br>3:3/3B:1   | Slave:<br>3:2/3B:0   | Slave:<br>3:1/3A:1   | Slave:<br>3:0/3A:0   |
| 2               | Slave:<br>6:3/6B:1   | Slave:<br>6:2/6B:0   | Slave:<br>6:1/6A:1   | Slave:<br>6:0/6A:0   | Slave:<br>5:3/5B:1   | Slave:<br>5:2/5B:0   | Slave:<br>5:1/5A:1   | Slave:<br>5:0/5A:0   |
| 3               | Slave:<br>8:3/8B:1   | Slave:<br>8:2/8B:0   | Slave 8:1/<br>8A:1   | Slave:<br>8:0/8A:0   | Slave:<br>7:3/7B:1   | Slave:<br>7:2/7B:0   | Slave:<br>7:1/7A:1   | Slave:<br>7:0/7A:0   |
| 4               | Slave:<br>10:3/10B:1 | Slave:<br>10:2/10B:0 | Slave:<br>10:1/10A:1 | Slave:<br>10:0/10A:0 | Slave:<br>9:3/9B:1   | Slave:<br>9:2/9B:0   | Slave:<br>9:1/9A:1   | Slave:<br>9:0/9A:0   |
| 5               | Slave:<br>12:3/12B:1 | Slave:<br>12:2/12B:0 | Slave:<br>12:1/12A:1 | Slave:<br>12:0/12A:0 | Slave:<br>11:3/11B:1 | Slave:<br>11:2/11B:0 | Slave:<br>11:1/11A:1 | Slave:<br>11:0/11A:0 |
| 6               | Slave:<br>14:3/14B:1 | Slave:<br>14:2/14B:0 | Slave:<br>14:1/14A:1 | Slave:<br>14:0/14A:0 | Slave:<br>13:3/13B:1 | Slave:<br>13:2/13B:0 | Slave:<br>13:1/13A:1 | Slave:<br>13:0/13A:0 |
| 7               | Slave:<br>16:3/16B:1 | Slave:<br>16:2/16B:0 | Slave:<br>16:1/16A:1 | Slave:<br>16:0/16A:0 | Slave:<br>15:3/15B:1 | Slave:<br>15:2/15B:0 | Slave:<br>15:1/15A:1 | Slave:<br>15:0/15A:0 |
| 8               | Slave:<br>18:3/18B:1 | Slave:<br>18:2/18B:0 | Slave:<br>18:1/18A:1 | Slave:<br>18:0/18A:0 | Slave:<br>17:3/17B:1 | Slave:<br>17:2/17B:0 | Slave:<br>17:1/17A:1 | Slave:<br>17:0/17A:0 |
| 9               | Slave:<br>20:3/20B:1 | Slave:<br>20:2/20B:0 | Slave:<br>20:1/20A:1 | Slave:<br>20:0/20A:0 | Slave:<br>19:3/19B:1 | Slave:<br>19:2/19B:0 | Slave:<br>19:1/19A:1 | Slave:<br>19:0/19A:0 |
| 10              | Slave:<br>22:3/22B:1 | Slave:<br>22:2/22B:0 | Slave:<br>22:1/22A:1 | Slave:<br>22:0/22A:0 | Slave:<br>21:3/21B:1 | Slave:<br>21:2/21B:0 | Slave:<br>21:1/21A:1 | Slave:<br>21:0/21A:0 |
| 11              | Slave:<br>24:3/24B:1 | Slave:<br>24:2/24B:0 | Slave:<br>24:1/24A:1 | Slave:<br>24:0/24A:0 | Slave:<br>23:3/23B:1 | Slave:<br>23:2/23B:0 | Slave:<br>23:1/23A:1 | Slave:<br>23:0/23A:0 |
| 12              | Slave:<br>26:3/26B:1 | Slave:<br>26:2/26B:0 | Slave:<br>26:1/26A:1 | Slave:<br>26:0/26A:0 | Slave:<br>25:3/25B:1 | Slave:<br>25:2/25B:0 | Slave:<br>25:1/25A:1 | Slave:<br>25:0/25A:0 |
| 13              | Slave:<br>28:3/28B:1 | Slave:<br>28:2/28B:0 | Slave:<br>28:1/28A:1 | Slave:<br>28:0/28A:0 | Slave:<br>27:3/27B:1 | Slave:<br>27:2/27B:0 | Slave:<br>27:1/27A:1 | Slave:<br>27:0/27A:0 |
| 14              | Slave:<br>30:3/30B:1 | Slave:<br>30:2/30B:0 | Slave:<br>30:1/30A:1 | Slave:<br>30:0/30A:0 | Slave:<br>29:3/29B:1 | Slave:<br>29:2/29B:0 | Slave:<br>29:1/29A:1 | Slave:<br>29:0/29A:0 |
| 15              | -                    | -                    | -                    | -                    | Slave:<br>31:3/31B:1 | Slave:<br>31:2/31B:0 | Slave:<br>31:1/31A:1 | Slave:<br>31:0/31A:0 |
| 16 <sup>a</sup> | ASI Flag 7           | ASI Flag 6           | ASI Flag 5           | ASI Flag 4           | ASI Flag 3           | ASI Flag 2           | ASI Flag 1           | ASI Flag 0           |
| 17 <sup>b</sup> | ASI Flag 15          | ASI Flag 14          | ASI Flag 13          | ASI Flag 12          | ASI Flag 11          | ASI Flag 10          | ASI Flag 9           | ASI Flag 8           |

a. See 3-24 "Status Flags 1 (698h, RO)"

b. See 3-24 "Status flags 2 (699h, RO)"

**Note:** The Valid Data List can be disabled through the Gateway Configuration Interface.


See also...

- 3-19 "Analog I/O"

## 3.3. Configuration Examples

### 3.3.1. Input Data

The following examples illustrates how data from the AS-Interface network appears on the other network side.

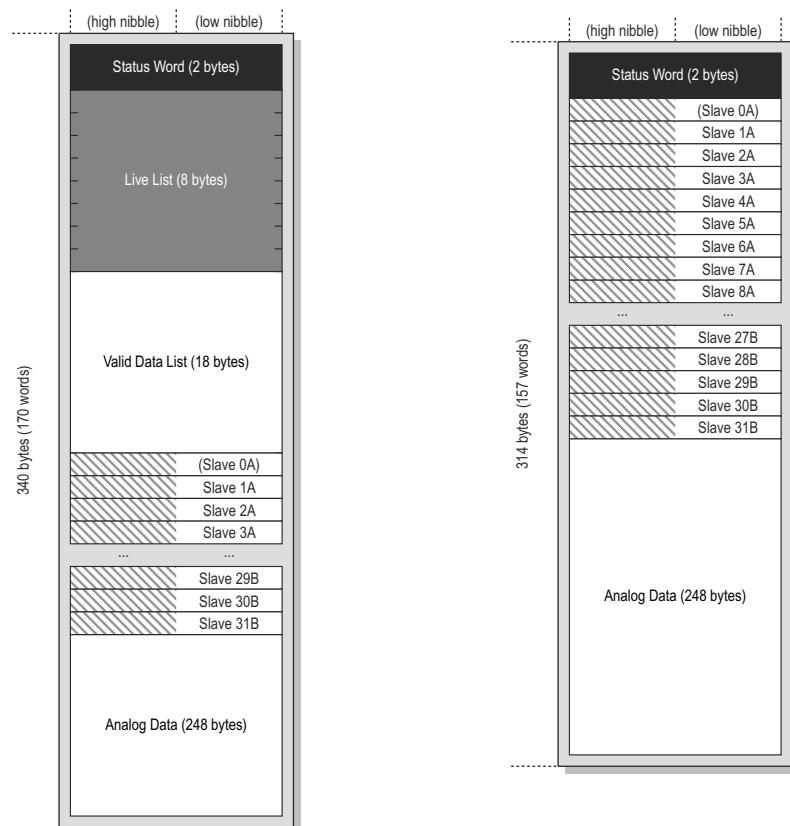

#### Example A:


Live List= Enabled  
 Valid Data List= Enabled  
 Control & Status Word= Enabled  
 Data Representation= Byte Mode

#### Example B:

Live List= Disabled  
 Valid Data List= Disabled  
 Control & Status Word= Enabled  
 Data Representation= Byte Mode

### 3.3.2. Output Data

The following examples illustrate how the gateway interprets data from the other network, and forwards information to the slaves on the AS-Interface network.

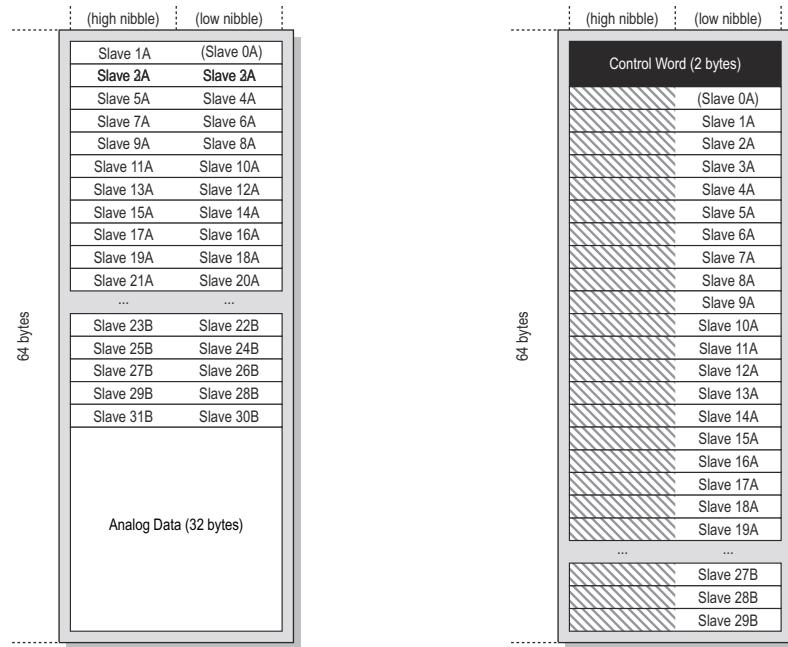

**Example A:**

Live List= N/A  
 Valid Data List= N/A  
 Control & Status Word= Disabled  
 Data Representation= Nibble Mode

**Example B:**

Live List= N/A  
 Valid Data List= N/A  
 Control & Status Word= Enabled  
 Data Representation= Byte Mode

## 3.4. Control & Status Word Implementation

### 3.4.1. Status Word

The Status Word holds general status information from the gateway.

(Consult the user manual for further information.)

### 3.4.2. Control Word

The Control Word, if enabled, controls the communication towards the slaves on the AS-Interface network.

Control Word Contents:



| Mode | Meaning            | Comments                                                             |
|------|--------------------|----------------------------------------------------------------------|
| 00b  | Idle - DE Active   | These settings are also available from the Gateway Config interface. |
| 01b  | Idle - DE Inactive | See also...<br>- 2-9 "Change Operation Mode"                         |
| 10b  | Running            |                                                                      |
| 11b  |                    |                                                                      |

**Note:** When shifting from 'Idle - DE Inactive', all slaves will be included again one by one, a process which may take as long as 1 second to complete on a fully populated AS-Interface network.

| Reset | Meaning          | Comments                                                     |
|-------|------------------|--------------------------------------------------------------|
| 0b    | Normal operation | -                                                            |
| 1b    | Reset gateway    | Setting this bit causes the gateway to perform a self-reset. |

**Note:** The Control- and Status Words can be disabled through the Gateway Configuration Interface. In such case, the master interface will enter 'Running' mode automatically after having completed the start up initialisation sequence.

## 3.5. AS-I Status Flags

### 3.5.1. Status Flags 1 (698h, RO)

For more information, please consult the AS-i Specification.

| Bit     | Content                            | Comment                                                                                                                       |
|---------|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| 0 (LSB) | Get_Flag_Offline_Ready()           | Offline phase active                                                                                                          |
| 1       | Status, Flag = Get_Flag_apf()      | Voltage on AS-i too low                                                                                                       |
| 2       | Get_Flag_Normal_Operation_Active() | Normal operation                                                                                                              |
| 3       | Operation Mode                     | 0: Protected mode<br>1: Configuration Mode                                                                                    |
| 4       | Get_Flag_Auto_Prog_Available()     | Automatic address assignment will be processed as soon as a slave with zero address and valid configuration data is connected |
| 5       | Auto Address Assign                | Automatic address assignment possible                                                                                         |
| 6       | Get_Flag_LDS.0()                   | Slave with address 0 exists                                                                                                   |
| 7 (MSB) | Get_Flag_Config_OK()               | Actual configuration matches configured configuration                                                                         |

### 3.5.2. Status flags 2 (699h, RO)

For more information, please consult the AS-i Specification.

| Bit     | Content                        | Comment                                        |
|---------|--------------------------------|------------------------------------------------|
| 0 (LSB) | Offline mode                   | Offline mode                                   |
| 1       | -                              | (reserved)                                     |
| 2       | EEPROM OK                      | EEPROM OK                                      |
| 3       | Mode = Get_Auto_Address_Enable | Automatic addressing enabled (set by the user) |
| 4       | Get_Flag_Periphery_OK()        | Periphery fault detected                       |
| 5       | Address Collision              | Address collision detected                     |
| 6       | -                              | (reserved)                                     |
| 7 (MSB) |                                |                                                |

## 4. AS-Interface Implementation Details

### 4.1. General Information

The AS-Interface network interface is implemented according to the AS-i Complete Specification (CS) Version 3.0, rev. 1.

#### Supported Slave Types

- **Standard Slaves**  
4 bits of I/O in each direction.
- **Slaves w. Extended Addressing Mode**  
3 bits out, 4 bits in, can be configured as A- or B-slaves, allowing up to 62 slaves to be used.
- **Slaves w. support for Combined Transactions**  
Up to 4 analog I/O channels, or other types of I/O which requires one or more bytes of data.  
The following Combined Transaction types are supported:

| Type           | Slave Profile        | Comments                                          |
|----------------|----------------------|---------------------------------------------------|
| Type 1         | S-7.1                | (not supported)                                   |
| Type 1         | S-7.2                | (not supported)                                   |
| Type 1         | S-7.3                | 16-bit I/O                                        |
| Type 1         | S-7.4 <sup>a</sup>   | Complex field devices                             |
| Type 2         | S-7.5. <sup>b</sup>  | Combi field devices                               |
| Type 2         | S-7.A.5 <sup>b</sup> | Combi field devices                               |
| Type 2         | S-B.A.5              | Serial communication field devices                |
| Type 3         | S-7.A.7              | 4I/4O in extended address mode                    |
| Type 3         | S-7.A.A              | 8I/8O in extended address mode                    |
| Type 4         | S-7.A.8              | 16-bit inputs in extended address mode            |
| Type 5         | S-6.0                | High speed 16-bit I/O                             |
| Safety at Work | S-0.B                | Safety at Work input slaves                       |
| Safety at Work | S-7.B                | Safety at Work input slaves with standard outputs |

a.Acyclic STRING services operating on 7.4 slaves are not supported.

b.'Issue CTT2 command' (CTT2\_CMD) is not supported

**Note:** The AS-i Master interface does not implement support for the 'Reset' and 'Read Status' services on individual slaves.

#### Master Profiles

The master interface supports the following master profiles:

- **Profile M3**  
Full extended master, Combined Transaction type 1.
- **Profile M4**  
Support for Combined Transaction types 2, 3, 4 and 5.

## 4.2. Network Security

The Master Interface offers two modes of operation related to network security; Configuration Mode and Protected Mode. For network security reasons, certain functions that are available in Configuration Mode are not available in Protected Mode and vice versa.

- **Configuration Mode**

All slaves attached to the network are active instantly. Automatic slave address assignment is not possible in this mode.

- **Protected Mode**

Slaves must be detected and configured in order to become active. Automatic slave address assignment is possible in this mode.

See also...

- 4-27 “Configuration Button”
- 2-13 “Toggle Mode”

## 4.3. Automatic Slave Address Assignment


This is a powerful feature which allows a failed sensor or actuator to be exchanged without requiring time consuming network configuration procedures.

This is a critical procedure which can potentially lead to errors if not cautious. Hence, certain restrictions apply:

- The Master Interface must be running in Protected Mode.
- The network must be projected, i.e. the Master Interface must hold information about the type and address of the slaves in error-free operation.
- Only one slave can be missing in the List of Active Slaves.
- Automatic Slave Addressing must be enabled
- The replacement slave must be of the same type as the failed one, i.e. I/O configuration and ID-code must correspond to the permanent configuration data in the Master Interface.

See also...

- 4.2. Network Security
- 2.2.10. Auto Address

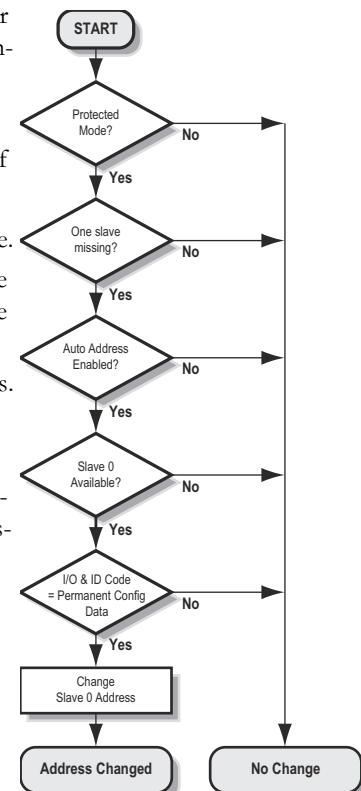

## 4.4. Synchronous Data I/O

The Master interface supports Synchronous Data I/O, which enables synchronous I/O operations for a specific range of slaves on the network. This functionality is based on the concept of exchanging data in the normal cycle, and validating that data based on an additional trigger event.

See also...

- 2-8 “Configuration Settings”

## 4.5. Configuration Button

The on-board configuration button serves two purposes:

- **Mode Change**

Pushing the button for less than two seconds causes the master interface to toggle between Configuration Mode and Protected Mode.

- **Initiate Auto Configuration**

Pushing and holding the button for more than five seconds enables Auto Configuration; the master interface will upload the network configuration and save it as the pre-set configuration. This is only permitted in Configuration Mode.

**Note:** Bus power must be present in order for this functionality to be available.


See also...

- 1-7 “Status LEDs”
- 4-26 “Network Security”

## A. Technical Specification

### A.1. AS-Interface Connector Pinout

| Pin | Signal         |
|-----|----------------|
| +   | AS-Interface + |
| -   | AS-Interface - |

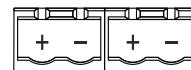

### A.2. Master Config Interface Pinout

| Pin     | Signal           |
|---------|------------------|
| 1       | -                |
| 2       | RS232 Receive    |
| 3       | RS232 Transmit   |
| 4       | -                |
| 5       | Ground           |
| 6       | -                |
| 7       | -                |
| 8       | -                |
| 9       | -                |
| Housing | Protective Earth |

