


WICHTIG: Bevor Sie mit der Installation des Produkts beginnen, lesen Sie die beigefügten **WICHTIGEN SICHERHEITSHINWEISE** aufmerksam durch und befolge Sie diese Informationen sorgfältig!

Beschreibung:

Verbindet ein Host System mit seriellem ASCII Interface mit dem EIB/KNX Bus, Host Kommunikation: Via RS232 oder RS485 mit MODBUS/RTU oder ASCII Protokoll, Host Baudraten: 9600, 19200, 38400 oder 57600Bd, keine oder gerade Parität, 8 Datenbits, 1 Stoppbit, Alle 32768 EIB/KNX Gruppen werden unterstützt, Galvanische Trennung zwischen EIB/KNX und RS232/RS485 Schnittstelle, Mappingtabelle: max. 300 Konfigurationseinträge, Konfiguration der EIB/KNX Gruppen, internen Register und Datentypen mit freier PC Software MODBUS Konfigurator, Gewicht: 55g, Größe (LxBxH): 17,5x90x58mm, Spannungsversorgung: 24V=, Leistungsaufnahme: <0.5W, Schnappbar auf EN50022 DIN Schiene.

Handbuch+Software:

Um unser Modul zu konfigurieren, benötigen Sie unser kostenloses Tool ModbusConfigurator. Lesen Sie unser aktuelles Handbuch zum Produkt gewissenhaft durch! Beides erhalten Sie auf unserer Homepage www.RESI.cc

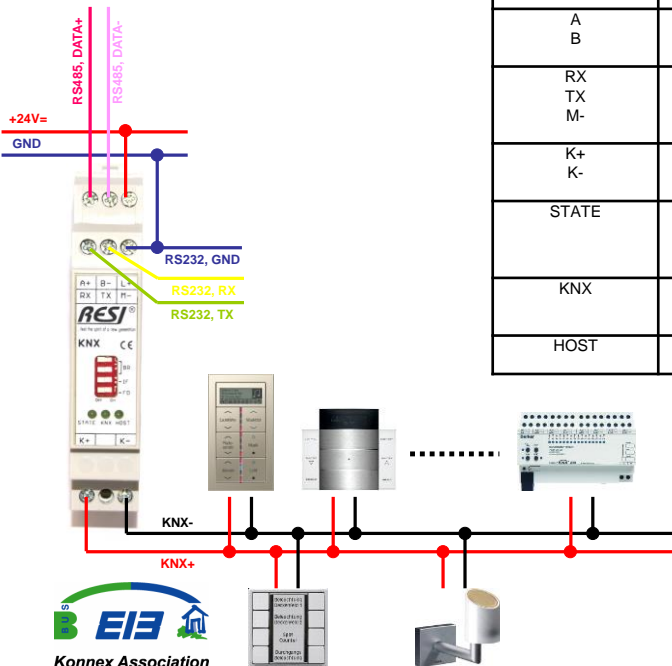

| KLEMMEN/LEDS | RESI-KNX-ASCII |
|----------------|---|
| L+ M- | Spannungsversorgung L+: 24 V= M: Masse |
| A B | RS485 Schnittstelle A: DATA+ B: DATA- |
| RX TX M- | RS232 Schnittstelle RX: Seriell Empfangen TX: Seriell Senden M: Masse für RS232 |
| K+ K- | Schnittstelle für KNX Anschluss K+: KNX+ Busleitung (rot) K-: KNX- Busleitung (schwarz) |
| STATE | Status-LED, blinkt langsam, wenn der Konverter funktioniert und der KNX angeschlossen ist, blinkt schnell, wenn der KNX nicht angeschlossen ist |
| KNX | KNX Aktivitäts-LED, zeigt an, wenn KNX Telegramme versendet oder empfangen werden |
| HOST | HOST-LED, blinkt, wenn der Host Telegramme sendet/empfangt |

| Dip Switch | Beschreibung |
|------------------------------|---|
| Baudrate BR | Benutzen Sie DIP Switch 1+2, um die Baudrate zu wählen: AUS AUS: 9600Bd EIN AUS: 19200Bd AUS EIN: 38400Bd EIN EIN: 57600Bd HINWEIS: Die korrekte Parität (NONE; EVEN;ODD) wird über die PC Software eingestellt, nicht mit DIP Switches. |
| Interface IF | Wählt die physikalische Art der seriellen Schnittstelle aus: AUS=RS232 EIN=RS485 |
| Function Definition FD | Wählt eine Spezialfunktion aus: AUS=Es wird die Unit ID aus dem FLASH verwendet EIN=Es wird immer die Unit ID 255 verwendet |
| HINWEIS | Nachdem der DIP Switch verändert wurde, bootet das Gerät automatisch neu. Somit ist kein Spannung aus/Spannung ein Zyklus notwendig. Nach dem Neustart sind alle drei LEDs kurz ein, um die Neustart-Sequenz darzustellen. |

| Technische Rahmenbedingungen | |
|------------------------------|--------------------------------|
| Betriebstemperatur | 0...60°C |
| Lagerungstemperatur | -20...+80°C |
| Feuchte | 25..90 %rF nicht kondensierend |
| Spannungsversorgung | 24Vdc +/-10% |
| Leistungsaufnahme | <0.5W |
| Schraubklemmen | Anzugsmoment max. 0.5Nm |
| Verkabelungsquerschnitt | Max. 1.5mm ² |
| Abmessungen (LxBxH) | 17.5x90x58mm |
| Gewicht | 55g |
| Schutzart | IP20 |
| Konformität | CE |


IMPORTANT: Before you start with the installation of the product, read the attached **IMPORTANT SECURITY NOTES** very carefully and follow all the herein given information very accurate!

Description:

Connects a host with MODBUS/RTU or ASCII interface to EIB/KNX bus, Host communication: via RS232 or RS485 with MODBUS/RTU or ASCII protocol, Host baud rates: 9600, 19200, 38400 or 57600Bd, no or even parity, 8 data bits, 1 stop bit, all 32768 EIB/KNX groups are supported, Galvanic insulation between EIB/KNX and serial interface, mapping table size: 300 configuration entries, configuration of EIB/KNX groups, internal registers and datatypes with our free PC software MODBUS configurator, Weight: 55g, Dimension (LxWxH): 17,5x90x58mm, Power supply: 24V=, Power consumption: <0.5W, Mountable onto a EN50022 DIN rail.


Manual+Software:

To configure our module, you need our free software tool ModbusConfigurator. Read the actual manual for our product very carefully! You will find both things on our homepage www.RESI.cc

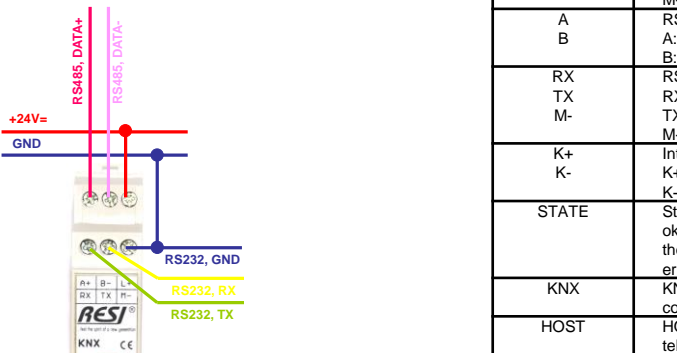

| CLAMP/LEDS | RESI-KNX-ASCII |
|------------|---|
| L+ | Power supply |
| M- | L+: 24 V= M-: Ground |
| A | RS485 interface |
| B | A: DATA+ B: DATA- |
| RX | RS232 interface |
| TX | RX: serial receive |
| M- | TX: serial transmit M-: Ground for RS232 |
| K+ | Interface to KNX bus system |
| K- | K+: KNX+ bus wire (rot) K-: KNX- bus wire (schwarz) |
| STATE | State-LED, flashes slowly, when converter is ok and the KNX is connected. Flashes fast, if the converter or the KNX connection has an error |
| KNX | KNX activity LED, this LED is on while the converter send or receives KNX telegrams |
| HOST | HOST-LED, flashes, when host sends/receive telegrams |

| Dip Switch | Description |
|------------------------|--|
| Baudrate BR | Use DIP Switch 1 and 2 to select the baud rate: OFF OFF: 9600Bd ON OFF: 19200Bd OFF ON: 38400Bd ON ON: 57600Bd HINT: The correct parity (NONE; EVEN;ODD) is selected with the software tool, not with DIP switches. |
| Interface IF | Selects the physical type of the serial interface: OFF=RS232 ON=RS485 |
| Function Definition FD | Selects a special function: OFF=The unit ID from the FLASH memory is used ON=The unit ID is always 255 |
| HINT | After you change a DIP switch, the converter reboots automatically. Therefore you don't need to switch off and on the converter to change settings. After a reboot, all three LEDs are on for a short period to signal the power on procedure. |

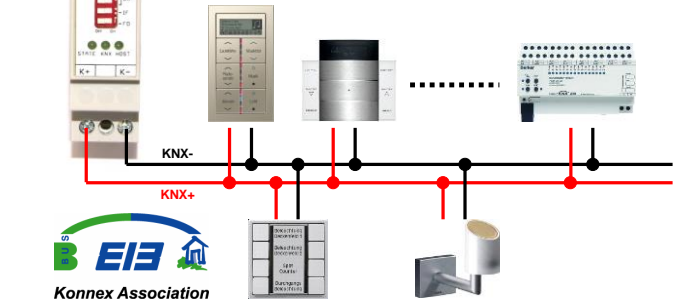

| Technical Conditions | |
|--------------------------|------------------------------|
| Operating temperature | 0...60°C |
| Storage temperature | -20...+80°C |
| Humidity | 25..90 %rH not condensing |
| Power supply | 24Vdc +/-10% |
| Power consumption | <0.5W |
| Clamps | Tightening torque max. 0.5Nm |
| Clamp Wire cross section | max. 1.5mm ² |
| Dimension (LxWxH) | 17.5x90x58mm |
| Weight | 55g |
| Protection class | IP20 |
| Conformity | CE |

Wichtige Hinweise:

- **Vor der Installation und Inbetriebnahme ist dieser Sicherheitshinweis, die beigefügte Installationsanleitung und das dazugehörige Handbuch zu lesen und alle darin gemachten Hinweise sind zu beachten!**
- Die Installation der Geräte darf nur durch Fachpersonal durchgeführt werden!
- Der Anschluss der Geräte darf nur im spannungslosen Zustand erfolgen!
- Führen Sie bei eingeschaltetem Gerät keine elektrischen Arbeiten am Gerät aus!
- Sichern Sie das Gerät gegen Wiedereinschalten!
- Das Gerät darf nur mit der vorgeschriebenen Spannung versorgt werden!
- Schwankungen und Abweichungen der Netzspannung vom Nennwert dürfen die in den technischen Daten angegebenen Toleranzgrenzen und Vorgaben nicht überschreiten. Bei Nichteinhaltung kann es zu Funktionsbeeinträchtigungen und Funktionsstörungen kommen!
- Es sind die aktuellen EMV Richtlinien in der Verkabelung zu beachten!
- Alle Signal- und Anschlussleitungen sind so zu verlegen, daß induktive und kapazitive Störungen sowie Einstreuungen die Funktionen des Geräts nicht beeinflussen. Falsche Verkabelung kann zu erheblichem Fehlfunktionen des Geräts führen!
- Für Signalleitungen und Sensorleitungen sind geschirmte Kabel zu verwenden, um Schäden durch Spannungsinduktion zu verhindern!
- Es sind die aktuellen Sicherheitsvorschriften der ÖVE, VDE, der Länder, ihrer Überwachungsorgane, des TÜV und des örtlichen EVUs zu beachten!
- Beachten Sie die länderspezifischen Vorschriften und Normen!
- Das Gerät ist nur für den angegebenen Verwendungszweck zu benutzen!
- Für Mängel und Schäden, die durch unsachgemäße Verwendung der Geräte entstehen, werden keinerlei Gewährleistungen und Haftungen übernommen!
- Folgeschäden, welche durch Fehler an diesem Gerät entstehen, sind von der Gewährleistung und Haftung ausgenommen!
- Es gelten ausschließlich die technischen Daten, Anschlussbedingungen und Bedienungsanleitungen, welche den Geräten bei der Lieferung beigefügt sind!
- Alle auf unserer Homepage, oder in unserem Datenblatt, in unseren Handbüchern, in unseren Katalogen oder bei unseren Partnern publizierten technischen Daten müssen im Sinne des technischen Fortschritts nicht immer aktuell sein!
- Bei Veränderungen unserer Geräte durch den Anwender entfallen alle Gewährleistungsansprüche!
- Die beim Gerät spezifizierten technischen Rahmenbedingungen (zb Temperaturen, Spannungsversorgung, etc.) sind unbedingt einzuhalten!
- Der Betrieb von Geräten in der Nähe zu unseren Geräten, welche nicht den EMV-Richtlinien entsprechen, kann zur Beeinflussung der Funktionsweise unseres Gerätes bis zum Ausfall unseres Gerätes führen!
- Unsere Geräte dürfen nicht für Überwachungszwecke, welche ausschließlich dem Schutz von Personen gegen Gefährdung oder Verletzung dienen und nicht als Not-Aus-Schalter in Anlagen und Maschinen oder vergleichbare sicherheitsrelevante Aufgaben verwendet werden!
- Die Gehäuse- und Gehäusezubehörmaße können geringe Toleranzen zu den Angaben in der Installationsanleitung bzw. zu den Angaben im Handbuch aufweisen!
- Veränderungen dieser Unterlagen sind nicht gestattet!
- Reklamationen werden nur in unserer vollständigen Originalverpackung angenommen!



Beachten Sie folgende Regeln:

1. Freischalten der Anlage
2. Sichern gegen Wiedereinschalten
3. Spannungsfreiheit feststellen
4. Andere spannungsführende Teile abdecken

Important hint:

- **Before you start with the installation and the initial setup of the device, you have to read this document and the attached installation guide and the actual manual for the device very carefully. You have to follow all the herein given information very accurate!**
- Only authorized and qualified personnel are allowed to install and setup the device!
- The connection of the device must be done in de-energized state!
- Do not perform any electrical work while the device is connected to power!
- Disable and secure the system against any automatic restart or power on procedure!
- The device must be operated with the defined voltage level!
- Supply voltage jitters must not exceed the technical specifications and tolerances given in the technical manuals for the product. If you do not obey this issue, the proper performance of the device cannot be guaranteed. This can lead to fail functions of the device and in worst case to a complete breakdown of the device!
- You have to obey the current EMC regulations for wiring!
- All signal, control and supply voltage cables must be wired in a way, that no inductive or capacitive interference or any other severe electrical noise disturbance may interfere with the device. Wrong wiring can lead to a malfunction of the device!
- For signal or sensor cables you have to use shielded cables, to avoid damages through induction!
- You have to obey and to apply the current safety regulations given by the ÖVE, VDE, the countries, their control authorities, the TÜV or the local energy supply company!
- Obey country-specific laws and standards!
- The device must be used for the intended purpose of the manufacturer!
- No warranties or liabilities will be accepted for defects and damages resulting from improper or incorrect usage of the device!
- Subsequent damages, which results from faults of this device, are excluded from warranty and liability!
- Only the technical data, wiring diagrams and operation instructions, which are part to the product shipment are valid!
- The information on our homepage, in our datasheets, in our manuals, in our catalogues or published by our partners can deviate from the product documentation and is not necessarily always actual, due to constant improvement of our products for technical progress!
- In case of modification of our devices made by the user, all warranty and liability claims are lost!
- The installation has to fulfill the technical conditions and specifications (e.g. operating temperatures, power supply, ...) given in the devices documentation!
- Operating our device close to equipment, which do not comply with EMC directives, can influence the functionality of our device, leading to malfunction or in worst case to a breakdown of our device!
- Our devices must not be used for monitoring applications, which solely serve the purpose of protecting persons against hazards or injury, or as an emergency stop switch for systems or machinery, or for any other similar safety-relevant purposes!
- Dimensions of the enclosures or enclosures accessories may show slight tolerances on the specifications provided in these instructions!
- Modifications of this documentation is not allowed!
- In case of a complaint, only complete devices returned in original packing will be accepted!



Pay attention to the following rules:

1. Disconnect the system from power
2. Secure the system against automatic power on
3. Check that the system is de-energized
4. Cover other energized parts of the system