

# Host Application Implementation Guide

# Anybus<sup>®</sup> CompactCom

Doc.Id. HMSI-27-334  
Doc. Rev. 1.10



---

HALMSTAD • CHICAGO • KARLSRUHE • TOKYO • BEIJING • MILANO • MULHOUSE • COVENTRY • PUNE • COPENHAGEN

---

HMS Industrial Networks  
Mailing address: Box 4126, 300 04 Halmstad, Sweden  
Visiting address: Stationsgatan 37, Halmstad, Sweden

E-mail: [info@hms-networks.com](mailto:info@hms-networks.com)  
Web: [www.anybus.com](http://www.anybus.com)

---

# Table of Contents

<b>Preface</b>	<b>About This Document</b>	
	Related Documents.....	4
	Document History .....	4
	Conventions & Terminology.....	4
	Support.....	4
	Glossary .....	5
<b>Chapter 1</b>	<b>Introduction</b>	
	Overview.....	7
	Preparations.....	8
<b>Chapter 2</b>	<b>Step One</b>	
	System Adaptation and Application Development.....	9
	System Set-up.....	9
	<i>Big- or Little-endian</i> .....	9
	<i>16-bit Char System</i> .....	9
	<i>Data Types</i> .....	10
	Anybus CompactCom Set-up.....	10
	<i>Communication Interfaces and Operating Modes</i> .....	10
	<i>Parallel Operating Mode Specifics</i> .....	11
	<i>SPI Operating Mode Specifics</i> .....	12
	<i>Module ID and Module Detect Settings</i> .....	12
	<i>Message and Process Data Settings</i> .....	12
	<i>Interrupt Handling</i> .....	13
	<i>Communication Watchdog Settings</i> .....	13
	<i>ADI Settings</i> .....	13
	<i>Debug Event Print Settings</i> .....	13
	<i>Startup Time</i> .....	14
	<i>Sync Settings</i> .....	14
	System Adaptation Functions .....	14
	<i>General Functions</i> .....	15
	<i>SPI Operating Mode</i> .....	15
	<i>Parallel Operating Mode</i> .....	17
	<i>Serial Operating Mode</i> .....	18
	Object Configuration.....	18
	Example Application .....	19
	<i>ADIs and Process Data Mapping</i> .....	19
	<i>Main Loop</i> .....	19
	<i>Compile and Run</i> .....	21

---

<b>Chapter 3</b>	<b>Step Two</b>	
	Adaptations and Customizations .....	22
	<i>Anybus CompactCom Setup</i> .....	22
	<i>System Adaptation Functions</i> .....	25
	<i>Network Identification</i> .....	26
	<i>Software Platform Porting</i> .....	27
	<i>Example Application</i> .....	30
<b>Appendix A</b>	<b>Software Overview</b>	
	Files and Folders .....	40
	Root Files.....	40
	CompactCom Driver Interface (Read Only) .....	40
	Internal Driver Files (Read Only) .....	41
	System Adaptation Files .....	42
<b>Appendix B</b>	<b>API</b>	
	API Documentation .....	43
<b>Appendix C</b>	<b>Host Application State Machine</b>	

*Preface*

## P. About This Document

For more information, documentation etc., please visit the HMS website, ‘[www.anybus.com](http://www.anybus.com)’.

### P.1 Related Documents

Anybus CompactCom 40 Software Design Guide	HMS
Anybus CompactCom 40 Hardware Design Guide	HMS
Anybus CompactCom 40 Network Guides	HMS

### P.2 Document History

#### Summary of Recent Changes (1.00... 1.10)

Change	Page(s)
Revised document	All

#### Revision List

Revision	Date	Author	Chapter(s)	Description
1.00	2015-11-20	KaD	All	New Document
1.10	2016-02-05	KaD	All	Fully revised revision

### P.3 Conventions & Terminology

The following conventions are used throughout this manual:

- Numbered lists provide sequential steps
- Bulleted lists provide information, not procedural steps
- The terms ‘Anybus’ or ‘CompactCom’ refers to the Anybus CompactCom 40 device.
- The terms ‘host’ or ‘host application’ refers to the device that hosts the Anybus device.
- Hexadecimal values are either written in the format NNNNh or the format 0xNNNN, where NNNN is the hexadecimal value.

### P.4 Support

For general contact information and technical support, please refer to the contact and support pages at [www.anybus.com](http://www.anybus.com).

## P.5 Glossary

Item	Description
ADI	Application Data Instance For more information, see the Anybus CompactCom 40 Software Design Guide
API	Application Programming Interface
Communication Interface	The communication interface defines the way of communication in the code. Available interfaces are Serial, Parallel 30, Parallel, SPI
Operating Mode	The operating mode configured with the OM-pins in the host application interface.

# 1. Introduction

When starting an implementation of the Anybus CompactCom 30 or the Anybus CompactCom 40, host application example code is available to speed up the development process. The host application example code includes a driver, which acts as glue between the Anybus CompactCom module and the host application. The driver has an API (Application Programming Interface), which defines a common interface to the driver. Also included in the example code is an example application which makes use of the API to form a simple application that can be used as a base for the final product.



This guide is developed to describe a step-by-step implementation of the Anybus CompactCom driver and example application. The programmer is requested to have basic knowledge in the Anybus CompactCom object model and the communication protocol before starting the implementation. See “Related Documents” on page 4 for suggested reading.

The guide is divided into two steps:

**Step One:** The adaptations needed for the target hardware are done here and a simple application is developed. The goal with this step is to make sure that the hardware specific code is working and that it is possible to connect to the network and exchange a limited amount of data.

**Step Two:** The code is adapted to the target product. The goal with this step is to customize the code and add to it, to configure the data that will be sent on the network. The application can then be extended further if needed.

The driver is fully OS independent and it can even be used without an operating system, if required. Furthermore, it can be used for Anybus CompactCom 30 modules as well as Anybus CompactCom 40 modules. The driver supports multiple operating modes, where selection of one of the implemented modes can be made at runtime.


The host application example code is available in different versions for different platforms. When writing this guide, the platforms depicted below are available.

Each folder contains all files for a specific platform.

- Generic - Can be ported to any platform
- Xilinx, Zynq - Optimized for the MicroZed evaluation platform
- STMicroelectronics, STM32 - Optimized for the STM3240-EVAL evaluation platform
- Freescale - Optimized for the Freescale TWRP1025 evaluation platform
- Windows - Optimized for HMS starterkit hardware (USB board)

## 1.1 Overview

Parts of the driver code need to be adapted to the host application platform. This generally includes functions which access the Anybus host interface, or functions which need to be adapted to integrate the driver into the host system. The figure below shows the different parts of the host application example code.

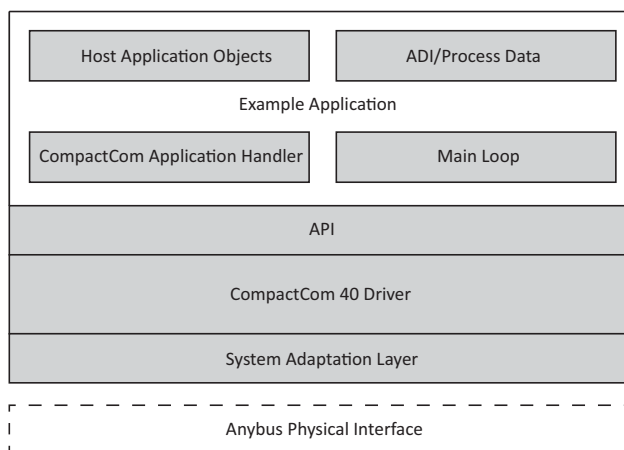

The host application example code is divided into five different folders depending on the functionality and whether the files need to be adapted or not by the user.

- **/abcc\_abp (part of the driver - read only)**
  - Contains all Anybus object and communication protocol definitions.
  - Files may be updated when new Anybus CompactCom 40 releases are available.
  - **These files are read only and must not be changed in any way by the user.**
- **/abcc\_drv (part of the driver - read only)**
  - Contains source and header files for the driver.
  - Files may be updated when new Anybus CompactCom 40 releases are available.
  - **These files are read only and must not be changed in any way by the user.**
- **/abcc\_adapt**
  - Contains configuration files.
  - These files must be modified by the user to adapt the driver and the example code to the system environment. **Note:** If using example code adjusted to a specific platform, most of the adaptations needed in this folder are already completed.
- **/abcc\_obj**
  - Includes all Anybus host application object implementations.
  - These files can be modified if needed, for optimization and/or additional features.
- **/example\_app**

Example application including:

- Main state machine to handle initialization, restart, normal and error states.
- State machine patterns to show how to send Anybus CompactCom messages.
- Implementation of callbacks required by the driver.
- Definition of ADIs, Application Data Instances, and default process data mapping setup.
- These files have to be adapted to the application by the programmer. Additionally they may be modified for optimization and/or additional features.

## 1.2 Preparations

Before continuing, try to answer as many of the questions below as possible. This will make the later decisions during implementation easier. It is also good to have access to the hardware schematics of the target hardware during the implementation.

### Step One

Consider the following questions:

- What operating mode, or modes, i.e. interfaces to the Anybus CompactCom, shall be used in the design?
- What networks shall be used in the design?
- Are the networks available in the CompactCom 40 series or is there also a need to use CompactCom 30 series modules?
- Are the Module Identification pins connected to the host processor?
- Are the Module Detection pins connected to the host processor?

### Step Two

Consider the following questions:

- Is the interrupt signal implemented in the hardware?
- What parameters/data shall be communicated on the network in the final product?
  - Name
  - Data Type
  - Length
  - Read/Write access
  - Acyclic access, Cyclic access
  - Max/Min/Default
- Which events (diagnostics) shall be reported on the network?
- What network identification parameters are available? E.g. Vendor ID, Product Code, Id number etc.



## 2. Step One

### 2.1 System Adaptation and Application Development

When this step is completed you have...

- ...implemented the system specific functions needed to communicate with the Anybus Compact-Com.
- ...compiled the host application example code with default settings.
- ...exchanged data between the host application and the network master/scanner.

### 2.2 System Set-up

These defines can be found in `abcc_adapt/abcc_td.h`.

General settings for the system environment, to be used in the driver, are configured here.

#### 2.2.1 Big- or Little-endian

Configure if the host application is a big-endian system or a little-endian system. Define the `ABCC_SYS_BIG_ENDIAN` if it is a big-endian system. Do not define (leave as default) if the host application is a little-endian system.

```
#define ABCC_SYS_BIG_ENDIAN          /* Big-endian host application */  
/* #define ABCC_SYS_BIG_ENDIAN */   /* Little-endian host application */
```

#### 2.2.2 16-bit Char System

Configure if the host application is a 16-bit char system or an 8-bit char system (i.e. if the smallest addressable type is 8-bit or 16-bit). Define the `ABCC_SYS_16BIT_CHAR` if it is a 16-bit char system. Do not define (leave as default) if it is an 8-bit char system. Configuring of 16-bit char for an 8-bit char system is not recommended.

```
#define ABCC_SYS_16_BIT_CHAR         /* 16 bit char system */  
/* #define ABCC_SYS_16_BIT_CHAR */  /* 8 bit char system */
```

## 2.2.3 Data Types

Define the Data Types for the current system. For 16-bit char systems, all 8-bit types shall be typed to 16-bit types. The following data types must be defined:

- `BOOL` Standard boolean data type.
- `BOOL8` Standard boolean data type, 8-bit.
- `INT8` Standard signed 8-bit data type.
- `INT16` Standard signed 16-bit data type.
- `INT32` Standard signed 32-bit data type.
- `UINT8` Standard unsigned 8-bit data type.
- `UINT16` Standard unsigned 16-bit data type.
- `UINT32` Standard unsigned 32-bit data type.
- `FLOAT32` Float (according to IEC 60559).

## 2.3 Anybus CompactCom Set-up

These defines and functions are found in `abcc_adapt/abcc_drv_cfg.h`. Detailed read-only descriptions are available in `abcc_drv/inc/abcc_cfg.h`

Settings for how to use and communicate with the Anybus CompactCom. Operating mode, interrupt handling, memory handling etc., are configured here.

### 2.3.1 Communication Interfaces and Operating Modes

Define the communication interfaces and the operating mode between the host application and the CompactCom (Parallel, SPI, Serial), that will be used in the implementation. There are several possibilities to set the operating mode depending on how the host application is intended to communicate with the Anybus and also depending on how the operating mode is selected by the user.

- First, define all communication interfaces that will be supported by the implementation. All interfaces that will be used must be defined here, otherwise an error will be reported later on. Only define the interfaces that will really be used, since every enabled interface will increase the compiled code size.

#### Only for 40-series.

```
#define ABCC_CFG_DRV_PARALLEL ( TRUE ) /* Parallel, 8/16-bit, event mode */
#define ABCC_CFG_DRV_SPI      ( FALSE ) /* SPI */
```

#### For both 30-series and 40-series.

```
#define ABCC_CFG_DRV_SERIAL    ( FALSE ) /* Serial */
#define ABCC_CFG_DRV_PARALLEL_30( TRUE ) /* Parallel, 8-bit, half duplex */
```



`ABCC_CFG_DRV_SERIAL` and `ABCC_CFG_DRV_PARALLEL_30` are only recommended for implementations with the Anybus CompactCom 30-series. Not recommended for new designs with the Anybus CompactCom 40-series.

- Get the operating mode from external hardware - If the operating mode is set e.g. via a dip-switch connected to the host application processor or via an HMI controller, define the `ABCC_CFG_OP_MODE_GETTABLE` and implement the function `ABCC_SYS_GetOpmode()` in `abcc_adapt/abcc_sys_adapt.c`.

```
#define ABCC_CFG_OP_MODE_GETTABLE ( TRUE )
```

If not defined, the operating mode defines must be explicitly defined for the specific module type. (See `ABCC_CFG_ABCC_OP_MODE_30` and `ABCC_CFG_ABCC_OP_MODE_40` on page 11).

- If the operating mode pins on the CompactCom host connector can be controlled by the host processor, define `ABCC_CFG_OP_MODE_SETTABLE` and implement the function `ABCC_SYS_SetOpmode()` in `abcc_adapt/abcc_sys_adapt.c`.

```
#define ABCC_CFG_OP_MODE_SETTABLE ( TRUE )
```

If not defined, it is assumed that the operating mode signals of the CompactCom host connector are fixed or controlled by external hardware, e.g. a dip-switch.

- If only one operating mode per module type (CompactCom 30 and CompactCom 40) is used, define the operating mode with `ABCC_CFG_ABCC_OP_MODE_30` and `ABCC_CFG_ABCC_OP_MODE_40`. The available operating modes (`ABP_OP_MODE_X`) can be found in `abcc_abp/abp.h`.

```
#define ABCC_CFG_ABCC_OP_MODE_30 ABP_OP_MODE_8_BIT_PARALLEL
#define ABCC_CFG_ABCC_OP_MODE_40 ABP_OP_MODE_16_BIT_PARALLEL
```

If none of these defines are set, `ABCC_SYS_GetOpmode()` must be implemented to retrieve the operating mode from external hardware. See `ABCC_CFG_OP_MODE_GETTABLE` on page 11.

## 2.3.2 Parallel Operating Mode Specifics

**If parallel operating mode (8-bit or 16-bit) is not used, this section can be ignored.**

If direct access to the CompactCom memory is available (the host controller provides dedicated signals to access external SRAM), define `ABCC_CFG_MEMORY_MAPPED_ACCESS` to `TRUE` and define the base address with `ABCC_CFG_PARALLEL_BASE_ADR` (this address must be defined to suit the host platform).

```
#define ABCC_CFG_MEMORY_MAPPED_ACCESS ( TRUE )
#define ABCC_CFG_PARALLEL_BASE_ADR ( 0x00000000 )
```

If direct access to the CompactCom memory is not available, several functions to read and write data must be implemented in `abcc_adapt/abcc_sys_adapt.c` (described in `abcc_drv/inc/abcc_sys_adapt_par.h`). See “Parallel Operating Mode” on page 17



The recommendation is to have direct access to the CompactCom memory if possible for a simpler and most often faster implementation.

### 2.3.3 SPI Operating Mode Specifics

**Only for 40-series. If SPI operating mode is not used, this section can be ignored.**

The length of an SPI message fragment in bytes per SPI transaction is defined with `ABCC_CFG_SPI_MSG_FRAG_LEN`.

If the `ABCC_CFG_SPI_MSG_FRAG_LEN` value is less than the largest message to be transmitted, the sending or receiving of a message may be fragmented and take several SPI transactions to be completed. Each SPI transaction will have a message field of this length regardless if a message is present or not. If messages are important the fragment length should be set to the largest message to avoid fragmentation. If IO data are important the message fragment length should be set to a smaller value to speed up the SPI transaction.

For high message performance a fragment length up to 1524 octets is supported. The message header is 12 octets, so 16 or 32 octets will be enough to support small messages without fragmentation.

```
#define ABCC_CFG_SPI_MSG_FRAG_LEN          ( 16 )
```

### 2.3.4 Module ID and Module Detect Settings

- If the Module Identification pins (MI) on the CompactCom host connector are not connected to the host processor, `ABCC_CFG_ABCC_MODULE_ID` must be defined to the correct CompactCom module ID that corresponds to the module ID of the used device. If defined, it shall be set to the correct `ABP_MODULE_ID_X` definition from `abcc_abp/abp.h`.  
If not defined, the function `ABCC_SYS_ReadModuleId()` in `abcc_adapt/abcc_sys_adapt.c` must be implemented.



The recommendation is to connect the Module ID pins on the application connector directly to GPIO-pins on the host processor and implement the `ABCC_SYS_ReadModuleId()` function.

```
/* #define ABCC_CFG_ABCC_MODULE_ID          ABP_MODULE_ID_ACTIVE_ABCC40 */
```

- If the Module Detect pins (MD) in the host application connector are connected to the host processor, the `ABCC_CFG_MOD_DETECT_PINS_CONN` shall be set to `TRUE` and the `ABCC_SYS_ModuleDetect()` function in `abcc_adapt/abcc_sys_adapt.c` must be implemented.

```
#define ABCC_CFG_MOD_DETECT_PINS_CONN      ( TRUE )
```

### 2.3.5 Message and Process Data Settings

Leave the following defines with the default values for now. For more information, see “Step Two” on page 22.

```
#define ABCC_CFG_MAX_NUM_APPL_CMDS        ( 2 )
#define ABCC_CFG_MAX_NUM_ABCC_CMDS        ( 2 )
#define ABCC_CFG_MAX_MSG_SIZE             ( 255 )
#define ABCC_CFG_MAX_PROCESS_DATA_SIZE    ( 512 )
#define ABCC_CFG_REMAP_SUPPORT_ENABLED     ( FALSE )
```

## 2.3.6 Interrupt Handling

If the IRQ pin is connected the driver can be configured to check if an event has occurred even if the interrupt is disabled. It can be used e.g. to detect the CompactCom power up event. Define `ABCC_CFG_POLL_ABCC_IRQ_PIN` to enable this functionality, and implement the function `ABCC_SYS_IsAbccInterruptActive()` in `abcc_adapt/abcc_sys_adapt.c`.

```
#define ABCC_CFG_POLL_ABCC_IRQ_PIN ( TRUE )
```

In this step, we will not use the interrupt functionality, which means that we will define `ABCC_CFG_INT_ENABLED` as `FALSE`. For more information, see “Step Two” on page 22.

**If the IRQ pin is not connected, this define must be set to false.**

```
#define ABCC_CFG_INT_ENABLED ( FALSE )
```

## 2.3.7 Communication Watchdog Settings

The timeout for the CompactCom communication watchdog is configured with `ABCC_CFG_WD_TIMEOUT_MS`. If a timeout occurs, the callback function `ABCC_CbfWdTimeout()` is called.



**NOTE:** Currently the watchdog functionality is only supported by the SPI-, serial- and parallel30 (half duplex) operating modes.

```
#define ABCC_CFG_WD_TIMEOUT_MS ( 1000 )
```

## 2.3.8 ADI Settings

Leave the following defines with the default values for now. For more information, see “Step Two” on page 22.

```
#define ABCC_CFG_STRUCT_DATA_TYPE ( FALSE )
```

```
#define ABCC_CFG_ADI_GET_SET_CALLBACK ( FALSE )
```

```
#define ABCC_CFG_64BIT_ADI_SUPPORT ( FALSE )
```

## 2.3.9 Debug Event Print Settings

For development purposes, a number of debug functions are available for the developer. The following defines affects debug printouts from the driver. If additional printouts are needed from the application code, use the ported function `ABCC_PORT_DebugPrint()` in `abcc_adapt/abcc_sw_port.h`.

- Enable or disable the error reporting callback function `ABCC_CbfDriverError()` with `ABCC_CFG_ERR_REPORTING_ENABLED`. The function is described in `abcc_drv/inc/abcc.h`.

```
#define ABCC_CFG_ERR_REPORTING_ENABLED ( TRUE )
```

- Enable or disable driver support for print out of debug events within the driver with `ABCC_CFG_DEBUG_EVENT_ENABLED`. `ABCC_PORT_DebugPrint()` in `abcc_adapt/abcc_sw_port.h` will be used to print debug information.

```
#define ABCC_CFG_DEBUG_EVENT_ENABLED ( TRUE )
```

- Enable or disable printout of debug information, such as file name and line number, when `ABC-C_CbfDriverError()` is called with `ABCC_CFG_DEBUG_ERR_ENABLED`.

```
#define ABCC_CFG_DEBUG_ERR_ENABLED ( TRUE )
```

- Enable or disable printout of received and sent messages with `ABCC_CFG_DEBUG_MESSAGING`. Related events such as buffer allocation and queuing information is also printed.

```
#define ABCC_CFG_DEBUG_MESSAGING ( FALSE )
```

### 2.3.10 Startup Time

If the CompactCom IRQ pin is connected, `ABCC_CFG_STARTUP_TIME_MS` will be used as a timeout while waiting for the CompactCom to become ready for communication. An error will be reported if the start-up interrupt is not received within this time. If the interrupt pin is not available `ABCC_CFG_STARTUP_TIME_MS` will serve as time to wait before starting to communicate with the CompactCom. If not defined, the default value is 1500 ms.

```
#define ABCC_CFG_STARTUP_TIME_MS ( 1500 )
```



If possible, the recommendation is to use the startup interrupt.

### 2.3.11 Sync Settings

**Only for 40-series.**

Leave the following defines with the default values for now. For more information, see “Step Two” on page 22.

```
#define ABCC_CFG_SYNC_ENABLE ( FALSE )
```

```
#define ABCC_CFG_SYNC_MEASUREMENT_IP ( FALSE )
```

```
#define ABCC_CFG_SYNC_MEASUREMENT_OP ( FALSE )
```

## 2.4 System Adaptation Functions

A number of functions must be implemented for the driver to be able to access the Anybus CompactCom. The functions shall be implemented in `abcc_adapt/abcc_sys_adapt.c`. The functions are described per operating mode in the files specified below.

- General functions: `abcc_drv/inc/abcc_sys_adapt.h`
- SPI operating mode: `abcc_drv/inc/abcc_sys_adapt_spi.h`
- Parallel operating mode: `abcc_drv/inc/abcc_sys_adapt_par.h`
- Serial operating mode: `abcc_drv/inc/abcc_sys_adapt_ser.h`

## 2.4.1 General Functions

These functions can be found in `abcc_drv/inc/abcc_sys_adapt.h`.

### **ABCC\_SYS\_HwInit()**

This function can be used to initiate the hardware required to communicate with the CompactCom device (e.g. configuring the direction and initial values of used host processor port pins). This function shall be called once during the power up initialization.

**Note:** Make sure that the CompactCom is kept in reset when returning from this function.

### **ABCC\_SYS\_Init()**

This function is called by the driver at start-up and restart of the driver (see `ABCC_StartDriver()` in “API Functions” on page 43 for more information). If needed, any hardware or system dependent initialization shall be done here. If not used, leave the function empty.

### **ABCC\_SYS\_Close()**

Called from the driver if the driver is terminated (see `ABCC_ShutDown()` in “API Functions” on page 43 for more information). If resources were allocated in `ABCC_SYS_Init()` it is recommended to close or free them in this function. If not used, leave the function empty.

### **ABCC\_SYS\_HWRReset()**

This function must be implemented to pull the reset pin on the Anybus CompactCom interface to low.

### **ABCC\_SYS\_HWRReleaseReset()**

This function must be implemented to set the reset pin on the Anybus CompactCom interface to high.

### **ABCC\_SYS\_AbccInterruptEnable()**

For now, interrupt will be disabled. Leave this function empty for now.

### **ABCC\_SYS\_AbccInterruptDisable()**

For now, interrupts will be disabled. Leave this function empty for now.

### **ABCC\_SYS\_IsAbccInterruptActive()**

If the interrupt pin (IRQ) is connected to the host processor, this function shall read the interrupt signal from the CompactCom and return `TRUE` if the interrupt pin is low (i.e. interrupt is active). It is used to enable polling of the interrupt pin of the CompactCom interface if interrupts are not enabled.

## 2.4.2 SPI Operating Mode

**Only for 40-series. If SPI operating mode is not used, the functions below are never called, and this section can be ignored.**

These functions can be found in `abcc_drv/inc/abcc_sys_adapt_spi.h`.

**ABCC\_SYS\_SpiRegDataReceived()**

Registers the callback function that shall be called when new data is received (MISO received).

**ABCC\_SYS\_SpiSendReceive()**

Handles sending and receiving of data in SPI mode.



## 2.4.3 Parallel Operating Mode

These functions can be found in `abcc_drv/inc/abcc_sys_adapt_par.h`.

If parallel operating mode is not used, the functions below are never called, and this section can be ignored.

If parallel operating mode is used and `ABCC_CFG_MEMORY_MAPPED_ACCESS` is defined, this section can be ignored. See “Parallel Operating Mode Specifics” on page 11 for more information about `ABCC_CFG_MEMORY_MAPPED_ACCESS`.

### **ABCC\_SYS\_ParallelRead()**

Reads an amount of octets from the CompactCom memory.

### **ABCC\_SYS\_ParallelRead8()**

Only used for half duplex parallel operating mode.

Reads an octet from the CompactCom memory.

### **ABCC\_SYS\_ParallelRead16()**

Reads a word from the CompactCom memory.

### **ABCC\_SYS\_ParallelWrite()**

Writes an amount of octets to the CompactCom memory.

### **ABCC\_SYS\_ParallelWrite8()**

Only used for half duplex parallel operating mode.

Writes an octet to the CompactCom memory.

### **ABCC\_SYS\_ParallelWrite16()**

Writes a word to the CompactCom memory.

### **ABCC\_SYS\_ParallelGetRdPdBuffer()**

Get the address to the received read process data.

### **ABCC\_SYS\_ParallelGetWrPdBuffer()**

Get the address to store the write process data.

## 2.4.4 Serial Operating Mode

These functions can be found in `abcc_drv/inc/abcc_sys_adapt_ser.h`.

If serial operating mode is not used, the functions below are never called, and this section can be ignored.

### **ABCC\_SYS\_SerRegDataReceived()**

Registers a callback function that shall indicate that a new RX telegram has been received on the serial channel.

### **ABCC\_SYS\_SerSendReceive()**

Send TX telegram and prepare for RX telegram reception.

### **ABCC\_SYS\_SerRestart()**

Restart the serial driver. Typically used when a telegram has timed out.

## 2.5 Object Configuration

For this step, the default settings in the CompactCom will be used. No host application objects are enabled in the file `abcc_adapt/abcc_obj_cfg.h`.

In “Step Two” on page 22, the network identification attributes will be customized to fit the target product.

## 2.6 Example Application

An API layer that defines a common interface for all network applications to the Anybus CompactCom driver is available. The API is found in `abcc_drv/inc/abcc.h`. See “API” on page 43 for more information. The example application is provided to give an example of how a standard application implements the CompactCom driver using the API. It can be used as it is to be able to test the CompactCom concept and can also be used as a base when implementing the driver into the final application.

For step 1, no changes in the example application are needed.

### 2.6.1 ADIs and Process Data Mapping

Process data is an integral part of the application. Process data is added to the application by creating ADIs (Application Data Instances) and mapping them to the desired process data areas (read or write).

For now, the mapping described in `appl_adimap_simple16.c` shall be used. This means that `APPL_ACTIVE_ADI_SETUP` in `/example_app/appl_adi_config.h` is defined as `APPL_ADI_SETUP_SIMPLE_16`.

- `example_app/appl_adimap_simple16.c` - This map loops 32 16-bit words.
  - ADI 1: 32 element array of UINT16
  - ADI 2: 32 element array of UINT16
  - The ADIs are mapped in each direction.
  - The data is looped since both ADIs refer to the same data place holder.
  - No structures or callbacks are used.

### 2.6.2 Main Loop

The main loop is where the execution of the application starts. In the generic project, it is located in the file named `main.c`. Below are some guidelines how to implement the main loop.

- `ABCC_HwInit()` - this function will initiate the hardware required to communicate with the CompactCom, and shall be called once during the power-up initialization. It must also make sure that the CompactCom is kept in reset when returning from the function. The driver can be restarted without calling this function again. `ABCC_HwInit()` will trigger the function `ABCC_SYS_HwInit()` in `abcc_adapt/abcc_sys_adapt.c`, which shall be customized to fit the current system. Make sure this function is one of the first functions called in the main function.

- `APPL_HandleAbcc()` - This function will run the CompactCom state machine and take care of reset, run, and shutdown of the driver, and it must be called periodically from the main loop. A status from the CompactCom driver is returned every time this function is called.

<code>APPL_MODULE_NO_ERROR</code>	The CompactCom is OK. This is the normal response if everything is running normal.
<code>APPL_MODULE_NOT_DETECTED</code>	No CompactCom is detected. Inform the user.
<code>APPL_MODULE_NOT_SUPPORTED</code>	Unsupported module detected. Inform the user.
<code>APPL_MODULE_NOT_ANSWERING</code>	Possible reasons: Wrong API selected, defect module.
<code>APPL_MODULE_RESET</code>	Reset requested from the CompactCom. A reset is received from the network. The application is responsible for restarting the system.
<code>APPL_MODULE_SHUTDOWN</code>	Shutdown requested
<code>APPL_MODULE_UNEXPECTED_ERROR</code>	Unexpected error occurred. Inform the user. If necessary, put the outputs in a fail-safe state.

See “Host Application State Machine” on page 46 for more information.

- `ABCC_RunTimerSystem()` - This function shall be called periodically with a known period (ms since last call). This can be done either by having a known delay in the main loop and call the function each iteration, or by setting up a timer interrupt. This function is responsible for handling all timers for the CompactCom driver. It is recommended to call this function on a regular basis from a timer interrupt. Without this function no timeout and watchdog functionality will work.

```
int main()
{
    APPL_AbccHandlerStatusType eAbccHandlerStatus = APPL_MODULE_NO_ERROR;

    if( ABCC_HwInit() != ABCC_EC_NO_ERROR )
    {
        return( 0 );
    }
    while( eAbccHandlerStatus == APPL_MODULE_NO_ERROR )
    {
        eAbccHandlerStatus = APPL_HandleAbcc();
#ifdef !USE_TIMER_INTERRUPT
        ABCC_RunTimerSystem( APPL_TIMER_MS );
        DelayMs( APPL_TIMER_MS );
#endif
        switch( eAbccHandlerStatus )
        {
            case APPL_MODULE_RESET:
                Reset();
                break;
            default:
                break;
        }
    }
    return( 0 );
}
```



**Tip:** It is recommended to use a timer interrupt with this function. However, for easier debugging when implementing, skip the timer interrupt in the beginning.

### 2.6.3 Compile and Run

To compile the project, update the make-file to include all the Anybus CompactCom 40 example code (all of the five folders described here) and compile.

- /abcc\_abp
- /abcc\_drv
- /abcc\_adapt
- /abcc\_obj
- /example\_app

Before continuing to Step Two, make sure

- The project compiles without errors
- The host application can communicate with the Anybus CompactCom
- Data can be exchanged with the network

## 3. Step Two

### 3.1 Adaptations and Customizations

When this step is completed you have...

- ...customized the network identification, e.g. Vendor ID, Product Code, Product Name, etc.
- ...created ADI:s for the target product.
- ...mapped the ADI:s that shall be exchanged cyclically to process data.

#### 3.1.1 Anybus CompactCom Setup

In Step One, some Anybus CompactCom settings were left at default values. We will revisit some of those values here.

##### Message and Process Data Settings

- The number of message commands that can be sent without receiving a response is configured with `ABCC_CFG_MAX_NUM_APPL_CMDS`. At least 2 buffers are required by the driver. Increasing this value will of course increase the possible number of message commands, but it will also consume more RAM memory. For more information about sending messages, see “Message Handling” on page 37.

```
#define ABCC_CFG_MAX_NUM_APPL_CMDS ( 2 )
```

- The number of message commands that can be received without sending a response is configured with `ABCC_CFG_MAX_NUM_ABCC_CMDS`. At least 2 buffers are required by the driver. Increasing this value will of course increase the possible number of message commands, but it will also consume more RAM memory.

```
#define ABCC_CFG_MAX_NUM_ABCC_CMDS ( 2 )
```

- The size of the largest message in bytes that will be used is configured with `ABCC_CFG_MAX_MSG_SIZE`.



Anybus CompactCom 30 supports 255 bytes messages and Anybus CompactCom 40 supports 1524 bytes messages. `ABCC_CFG_MAX_MSG_SIZE` should be set to largest size that will be sent or received. If this size is not known it recommended to set the maximum supported size.

```
#define ABCC_CFG_MAX_MSG_SIZE ( 1524 )
```

- The maximum size of the process data in bytes that will be used in either direction is configured with `ABCC_CFG_MAX_PROCESS_DATA_SIZE`. The maximum size is dependent on the type of network that is used. See the corresponding network guide for the networks to be used.

```
#define ABCC_CFG_MAX_PROCESS_DATA_SIZE ( 512 )
```

- Enable or disable driver and Application Data object support for the remap command with `ABCC_CFG_REMAP_SUPPORT_ENABLED`. If `TRUE` the `ABCC_CbfRemapDone()` needs to be implemented by the application. The function is described in `abcc_drv/inc/abcc.h`.  

```
#define ABCC_CFG_REMAP_SUPPORT_ENABLED ( FALSE )
```

## Interrupt Handling

The Anybus CompactCom driver can be used either with the interrupt functionality enabled or disabled.

- Define if the CompactCom IRQ pin shall be used along with an interrupt routine by defining `ABCC_CFG_INT_ENABLED`. The IRQ pin can be used in both parallel mode and SPI mode. The function `ABCC_ISR()` shall be called from inside the CompactCom interrupt routine. If the interrupt is flank triggered, the interrupt shall be acknowledged before `ABCC_ISR()` is called.  

```
#define ABCC_CFG_INT_ENABLED ( FALSE )
```

- **If parallel mode is not used, this define can be ignored.** Configure which interrupts that shall be enabled when using parallel mode with the `ABCC_CFG_INT_ENABLE_MASK_PAR` define. The available options are defined in `abcc_abp/abp.h` (INT MASK Register). If an event is not notified via the CompactCom interrupt, it must be polled by the driver function `ABCC_RunDriver()` (called by `example_app/APPL_HandleAbcc()`). If not defined, the default mask is 0.

```
#define ABCC_CFG_INT_ENABLE_MASK_PAR ( ABP_INTMASK_RDPDIEN | ABP_INTMASK_STATUSIEN | ABP_INTMASK_RDMSGIEN | ABP_INTMASK_WRMSGIEN | ABP_INTMASK_ANBRIEN )
```

- `ABCC_CFG_HANDLE_INT_IN_ISR_MASK` defines what interrupt events for the Anybus CompactCom that are handled in interrupt context. Events that are enabled in the interrupt enable mask (`ABCC_CFG_INT_ENABLE_MASK_X`) but not configured to be handled by the ISR will be translated to a bit field of `ABCC_ISR_EVENT_X` definitions (defined in `abcc_drv/inc/abcc.h`) and forwarded to the user via the `ABCC_CbfEvent()` callback. Only applicable for parallel 8/16-bit operating mode.

If not defined, the value will be 0, i.e. no events are handled by the ISR.

```
#define ABCC_CFG_HANDLE_INT_IN_ISR_MASK ( ABP_INTMASK_RDPDIEN )
```

See “Event Handling” on page 35 for more information.

## ADI Settings

- Enable ADI-support for structured data types with `ABCC_CFG_STRUCT_DATA_TYPE`. This define will affect the `AD_AdiEntryType` in `abcc_drv/inc/abcc_ad_if.h`, used for defining the user ADI:s. If defined, the required memory usage will increase, i.e. it should only be defined if structured data types are needed.

```
#define ABCC_CFG_STRUCT_DATA_TYPE          ( FALSE )
```

- Enable or disable driver support for triggering of callback notifications each time an ADI is read or written with `ABCC_CFG_ADI_GET_SET_CALLBACK`. This define will affect the `AD_AdiEntryType` in `abcc_drv/inc/abcc_ad_if.h`, used for defining the user ADI:s. If an ADI is read by the network the callback is invoked before the action. If an ADI is written by the network the callback is invoked after the action. See “Process Data Callbacks” on page 34.

```
#define ABCC_CFG_ADI_GET_SET_CALLBACK      ( FALSE )
```

- Enable or disable support for 64-bit data types in the Application Data object with `ABCC_CFG_64BIT_ADI_SUPPORT`.

```
#define ABCC_CFG_64BIT_ADI_SUPPORT        ( FALSE )
```

## Sync Settings

### Only for 40-series.

- Enable or disable driver support for sync. If `TRUE`, the `abcc_CbfSyncIsr()` must be implemented by the application.

```
#define ABCC_CFG_SYNC_ENABLE              ( FALSE )
```

### If sync is not used or if the code is compiled for release, the following defines shall be disabled.

The sync measurement functions are used to measuring the input processing time and the output processing time used in a sync application.

- Enable or disable driver support for measurement of input processing time (used for sync) with `ABCC_CFG_SYNC_MEASUREMENT_IP`. This define is used during development by activating it and compiling special test versions of the product. When `ABCC_CFG_SYNC_MEASUREMENT_IP` is `TRUE` `ABCC_SYS_GpioReset()` is called when the WRPD has been sent. If running in SPI operating mode it is instead called when `ABCC_SpiRunDriver()` has finished sending data to the Anybus. When `ABCC_CFG_SYNC_MEASUREMENT_IP` is `TRUE`, `ABCC_GpioSet()` needs to be called at the Input Capture Point.

```
#define ABCC_CFG_SYNC_MEASUREMENT_IP      ( FALSE )
```

- Enable or disable driver support for measurement of output processing time (used for sync) with `ABCC_CFG_SYNC_MEASUREMENT_OP`. This define is used during development by activating it and compiling special test versions of the product. When `ABCC_CFG_SYNC_MEASUREMENT_OP` is `TRUE`, `ABCC_SYS_GpioSet()` is called from the RDPDI interrupt. When `ABCC_CFG_SYNC_MEASUREMENT_OP` is `TRUE` `ABCC_GpioReset()` needs to be called at the Output Valid Point.

```
#define ABCC_CFG_SYNC_MEASUREMENT_OP      ( FALSE )
```



### 3.1.2 System Adaptation Functions

These functions can be found in `abcc_adapt/abcc_sys_adapt.c`.

If interrupts will be used in Step Two, implement the following functions.

- **ABCC\_SYS\_AbccInterruptEnable()**  
Enable the CompactCom HW interrupt (IRQ\_N pin on the application interface). This function will be called by the driver when the CompactCom interrupt shall be enabled.  
If `ABCC_CFG_INT_ENABLED` is not defined, this function does not need to be implemented.
- **ABCC\_SYS\_AbccInterruptDisable()**  
Disable CompactCom HW interrupt (IRQ\_N pin on the application interface).  
If `ABCC_CFG_INT_ENABLED` is not defined, this function does not need to be implemented.

### 3.1.3 Network Identification

So far, all network settings have been left disabled, and the product has identified itself as an HMS product. Now it is time to customize the network identification settings.

#### Host Application Objects - Networks

Define the networks to be supported by the implementation by defining their respective host application object in the file `abcc_adapt/abcc_obj_cfg.h`. Further implementations of the host application objects are done in the `abcc_obj` folder where each object has its own `c-` and `h-`files.

#### Example:

```
#define PRT_OBJ_ENABLE                ( TRUE )
#define EIP_OBJ_ENABLE                ( FALSE )
#define EPL_OBJ_ENABLE                ( TRUE )
```

The identity related attributes for each enabled network object are parameters that must be set by the application. They are all related to how the device is identified on the network. If the attribute is enabled (`TRUE`), the value will be used. If the attribute is disabled (`FALSE`), the attribute's default value will be used. These settings can be found in `abcc_adapt/abcc_identification.h`.

#### Example:

```
/*-----
** Ethernet Powerlink (0xE9)
**-----
*/
#if EPL_OBJ_ENABLE
/*
** Attribute 1: Vendor ID (UINT32 - 0x00000000-0xFFFFFFFF)
*/
#define EPL_IA_VENDOR_ID_ENABLE      TRUE
#define EPL_IA_VENDOR_ID_VALUE      0xFFFFFFFF

/*
** Attribute 2: Product Code type (UINT32 - 0x00000000-0xFFFFFFFF)
*/
#define EPL_IA_PRODUCT_CODE_ENABLE   TRUE
#define EPL_IA_PRODUCT_CODE_VALUE   0xFFFFFFFF
```



It is also possible to define a function instead of a constant to generate the value. The serial number is a good example of where a function would be suitable. In the example below, the serial number is set during production in a specific memory area, and here the same number is fetched:

```
extern char* GetSerialNumberFromProductionArea(void);
#define PRT_IA_IM_SERIAL_NBR_ENABLE TRUE
#define PRT_IA_IM_SERIAL_NBR_VALUE GetSerialNumberFromProductionArea()
```

### Host Application Objects - Other

In `abcc_adapt/abcc_obj_cfg.h`, define all other host application objects that shall be supported by the implementation.

#### Example:

```
#define ETN_OBJ_ENABLE           TRUE
#define SYNC_OBJ_ENABLE         FALSE
```

### Host Application Objects - Advanced

The file `abcc_adapt/abcc_obj_cfg.h` contains all attributes for all supported host objects, except for those already defined in `abcc_adapt/abcc_identification.h`. All attributes in this file are disabled by default. Network specific services are labelled "not supported" by default, and if desired they need to be implemented in the application.



The file `abcc_adapt/abcc_platform_cfg.h` can be used to override defines for objects and attributes in the files `abcc_adapt/abcc_obj_cfg.h` and `abcc_adapt/abcc_identification.h`.

To override a define, just add the desired defines to the `abcc_adapt/abcc_platform_cfg.h` file.

If not used, leave the file empty.

## 3.1.4 Software Platform Porting

These functions can be found in `abcc_adapt/abcc_sw_port.h`.

The driver uses a number of functions, like memory copying functions, print functions, and functions for critical sections, which can be optimized for the current software platform. These functions can be found in the file `abcc_adapt/abcc_sw_port.h` (described in `abcc_drv/inc/abcc_port.h`). The default example code can be used as-is, but it should be optimized (recommended) for the desired platform later in the implementation project.

### ABCC\_PORT\_DebugPrint()

Used by the driver for debug prints such as events or error debug information. If not defined the driver will be silent. Debug prints can e.g. be sent to a serial terminal or be saved to a logfile.

## Critical Section Functions

Critical sections are used when there is a risk of resource conflicts or race conditions between CompactCom interrupt handler context and the application thread.

Three macros are used to implement the critical sections:

- `ABCC_PORT_UseCritical()`
- `ABCC_PORT_EnterCritical()`
- `ABCC_PORT_ExitCritical()`

Depending on the configuration of the driver there are different requirements on the critical section implementation. Please choose the most suitable implementation from the numbered list below. The first statement that is true will choose the requirement.

1. All three macros need to be implemented if any of the statements below are true.

- Any message handling is done within interrupt context.

Requirements:

- The implementation must support that a critical section is entered from interrupt context. `ABCC_PORT_UseCritical()` should be used for any declarations needed in advance by `ABCC_PORT_EnterCritical()`.
- When entering the critical section the required interrupts i.e. any interrupt that may lead to driver access, must be disabled. When leaving the critical section the interrupt configuration must be restored to the previous state.

2. `ABCC_PORT_EnterCritical()` and `ABCC_PORT_ExitCritical()` need to be implemented if any of the statements below are true.

- `ABCC_RunTimerSystem()` is called from a timer interrupt.
- The application is accessing the CompactCom driver message interface from different processes or threads without protecting the message interface on a higher level (semaphores or similar).

Requirement:

- When entering the critical section the required interrupts i.e. any interrupt that may lead to driver access, must be disabled. When leaving the critical section the interrupts must be enabled again.

3. If none of the above is true, no implementation is required.

### **ABCC\_PORT\_UseCritical()**

If any preparation is needed before calling `ABCC_PORT_EnterCritical()` or `ABCC_PORT_ExitCritical()`, this macro is used to add platform specific necessities.

### **ABCC\_PORT\_EnterCritical()**

This function is called by the driver when there is a possibility of internal resource conflicts between the CompactCom interrupt handler and the application thread or main loop. The function temporarily disables interrupts to avoid conflict. Note that all interrupts that could lead to a driver access need to be disabled.

### **ABCC\_PORT\_ExitCritical()**

Restore interrupts to the state they were before `ABCC_PORT_EnterCritical()` was called.

### **ABCC\_PORT\_MemCopy()**

Copy a number of octets, from the source pointer to the destination pointer.

**ABCC\_PORT\_StrCpyToNative()**

Copy a packed string to a native formatted string.

**ABCC\_PORT\_StrCpyToPacked()**

Copy a native formatted string to a packed string.

**ABCC\_PORT\_CopyOctets()**

Copy octet aligned buffer.

**ABCC\_PORT\_Copy8()**

Copy 8 bits from a source to a destination. For a 16 bit char platform octet alignment support (the octet offset is odd) need to be considered when porting this macro.

**ABCC\_PORT\_Copy16()**

Copy 16 bits from a source to a destination. Octet alignment support (the octet offset is odd) need to be considered when porting this macro.

**ABCC\_PORT\_Copy32()**

Copy 32 bits from a source to a destination. Octet alignment support (the octet offset is odd) need to be considered when porting this macro.

**ABCC\_PORT\_Copy64()**

Copy 64 bits from a source to a destination. Octet alignment support (the octet offset is odd) need to be considered when porting this macro.

### 3.1.5 Example Application

#### ADIs and Process Data Mapping

In Step One, the example ADI mapping `appl_adimap_simple16.c` was used. In the example application there are ADI mapping examples included, which exemplify different types of ADIs:

Only one mapping can be used at a time. The map that is currently used in the application is configured in the file `example_app/appl_adi_config.h`, by defining `APPL_ACTIVE_ADI_SETUP` to the ADI mapping to be used.

- `example_app/appl_adimap_simple16.c` - This map loops 32 16-bit words.

ADI	Description
ADI 1	32 element array of UINT16 (mapped as input data)
ADI 2	32 element array of UINT16 (mapped as output data)

- The ADIs are mapped on process data in each direction.
- The data is looped since both ADIs refer to the same data place holder.
- No structures or callbacks are used.

- `example_app/appl_adimap_separate16.c` - Example of how get/set callbacks can be used:

ADI	Description
ADI 10	32 element array of UINT16 (mapped as output data)
ADI 11	32 element array of UINT16 (mapped as input data)
ADI 12	UINT16 (not mapped to process data)

- ADIs 10 and 11 are mapped on process data in each direction.
- A callback is used when the network reads ADI 11. This callback will increment the value of ADI 12 by one.
- A callback is used when the network writes ADI 10. This callback copies the value of ADI 10 to ADI 11.



`ABCC_CFG_ADI_GET_SET_CALLBACK` has to be enabled in `abcc_adapt/abcc_drv_cfg.h` since callbacks are used. See “ADI Settings” on page 13.

- `example_app/appl_adimap_alltypes.c` - Example of how structured data types and bit data types can be used.

ADI	Description
ADI 20	UINT32 (mapped as output data)
ADI 21	UINT32 (mapped as input data)
ADI 22	SINT32 (mapped as output data)
ADI 23	SINT32 (mapped as input data)
ADI 24	UINT16 (mapped as output data)
ADI 25	UINT16 (mapped as input data)
ADI 26	SINT16 (mapped as output data)
ADI 27	SINT16 (mapped as input data)
ADI 28	BITS16 (mapped as output data)
ADI 29	BITS16 (mapped as input data)
ADI 30	UINT8 (mapped as output data)
ADI 31	UINT8 (mapped as input data)
ADI 32	SINT8 (mapped as output data)
ADI 33	SINT8 (mapped as input data)
ADI 34	PAD8 (mapped as output data, reserved space, no data)
ADI 35	PAD8 (mapped as input data, reserved space, no data)
ADI 36	BIT7 (mapped as output data)
ADI 37	BIT7 (mapped as input data)
ADI 38	Struct (mapped as output data)
ADI 39	Struct (mapped as input data)



ABCC\_CFG\_STRUCT\_DATA\_TYPE has to be enabled in `abcc_adapt/abcc_drv_cfg.h` since structures are used. See “ADI Settings” on page 13.

The examples implements the following steps that shall be customized to fit the actual implementation:

- ADI Entry List - The ADI:s (i.e. the data instances that will be used in the implementation) must be defined as an `AD_AdiEntryType` in an ADI entry list. All parameters related to an ADI are specified here.

ADI Entry Item	Description
<code>iInstance</code>	ADI instance number (1-65535). 0 is reserved for Class.
<code>pabName</code>	Name of ADI (character string, ADI instance attribute #1). If NULL, a zero length name will be returned.
<code>bDataType</code>	<p>ABP_BOOL: Boolean</p> <p>ABP_SINT8: Signed 8 bit integer</p> <p>ABP_SINT16: Signed 16 bit integer</p> <p>ABP_SINT32: Signed 32 bit integer</p> <p>ABP_UINT8: Unsigned 8 bit integer</p> <p>ABP_UINT16: Unsigned 16 bit integer</p> <p>ABP_UINT32: Unsigned 32 bit integer</p> <p>ABP_CHAR: Character</p> <p>ABP_ENUM: Enumeration</p> <p>ABP_SINT64: Signed 64 bit integer</p> <p>ABP_UINT64: Unsigned 64 bit integer</p> <p>ABP_FLOAT: Floating point value (32 bits)</p> <p>ABP_OCTET: Undefined 8 bit data (Only 40-series)</p> <p>ABP_BITS8: 8 bit bit field (Only 40-series)</p> <p>ABP_BITS16: 16 bit bit field (Only 40-series)</p> <p>ABP_BITS32: 32 bit bit field (Only 40-series)</p> <p>ABP_BIT1: 1 bit bit field (Only 40-series)</p> <p>ABP_BIT2: 2 bit bit field (Only 40-series)</p> <p>: :</p> <p>ABP_BIT7: 7 bit bit field (Only 40-series)</p> <p>ABP_PAD0: 0 pad bit field (Only 40-series)</p> <p>ABP_PAD1: 1 pad bit field (Only 40-series)</p> <p>: :</p> <p>ABP_PAD16: 16 pad bit field (Only 40-series)</p>
<code>bNumOfElements</code>	For arrays: number of elements of the data type specified in <code>bDataType</code> . For structured data types: number of elements in the structure.
<code>bDesc</code>	<p>Entry descriptor. Bit values according to the following configurations:</p> <p>ABP_APPD_DESCR_GET_ACCESS: Get service is allowed on value attribute.</p> <p>ABP_APPD_DESCR_SET_ACCESS: Set service is allowed on value attribute.</p> <p>ABP_APPD_DESCR_MAPPABLE_WRITE_PD: Remap service is allowed on value attribute.</p> <p>ABP_APPD_DESCR_MAPPABLE_READ_PD: Remap service is allowed on value attribute.</p> <p>The descriptors can be logically OR:ed together. In the example, ALL_ACCESS is all of the above logically OR:ed together. Note: Ignored for structured data types</p>
<code>pxValuePtr</code>	Pointer to local value variable. The type is dependent on <code>bDataType</code> . Note: Ignored for structured data types
<code>pxValuePropPtr</code>	Pointer to local value properties struct, if NULL, no properties are applied (max/min/default). The type is dependent on <code>bDataType</code> . Note: Ignored for structured data types
<code>psStruct</code>	Pointer to an <code>AD_StructDataType</code> . Set to NULL for non structured data types. This field is enabled by defining <code>ABCC_CFG_STRUCT_DATA_TYPE</code> . (Optional, Only 40-series)
<code>pnGetAdiValue</code>	Pointer to an <code>ABCC_GetAdiValueFuncType</code> called when getting an ADI value. (Optional)
<code>pnSetAdiValue</code>	Pointer to an <code>ABCC_SetAdiValueFuncType</code> called when setting an ADI value. (Optional)

See example of usage in `abcc_drv/inc/abcc_ad_if.h`.



- Write and Read Process Data Mapping - ADI:s that shall be mapped as process data are mapped with `AD_DefaultMapType`. There is one combined list for both read process data and write process data.

Data Mapping Item	Description
iInstance	ADI number of the ADI to map (see ADI Entry List above)
eDir	Direction of map. Set to <code>PD_END_MAP</code> to indicate end of default map list.
bNumElem	Number of elements to map. Can only be > 1 for arrays or structures. <code>AD_DEFAULT_MAP_ALL_ELEM</code> indicates that all elements shall be mapped. If instance == <code>AD_MAP_PAD_ADI</code> , bNumElem indicates number of bits to pad with.
bElemStartIndex	Element start index within an array or structure. If the ADI is not an array or structure, enter 0

The mappings are done in the order they will show up on the network.

**Note:** The mapping sequence is terminated by `AD_DEFAULT_MAP_END_ENTRY`, which MUST be present at the end of the list. During the setup sequence, the Anybus CompactCom driver will ask for this information by invoking `ABCC_CbfAdiMappingReq()`.

#### Example:

{ ADI instance no, direction, number of elements in ADI to be mapped, index of starting element in ADI to be mapped }

```
AD_DefaultMapType AD_asDefaultMap
{
    { 3, PD_WRITE, AD_DEFAULT_MAP_ALL_ELEM ,0 },
    { 5, PD_WRITE, AD_DEFAULT_MAP_ALL_ELEM ,0 },
    { 6, PD_WRITE, AD_DEFAULT_MAP_ALL_ELEM ,0 },
    { 1, PD_READ, AD_DEFAULT_MAP_ALL_ELEM ,0 },
    { 2, PD_READ, AD_DEFAULT_MAP_ALL_ELEM ,0 },
    { 500, PD_WRITE, AD_DEFAULT_MAP_ALL_ELEM ,0 },
    { 501, PD_WRITE, AD_DEFAULT_MAP_ALL_ELEM ,0 },
    { 502, PD_WRITE, AD_DEFAULT_MAP_ALL_ELEM ,0 },
    { 4, PD_READ, AD_DEFAULT_MAP_ALL_ELEM ,0 },
    { 503, PD_READ, AD_DEFAULT_MAP_ALL_ELEM ,0 },
    { AD_DEFAULT_MAP_END_ENTRY }
};
```

See example of usage in `abcc_drv/inc/abcc_ad_if.h`.

## Process Data Callbacks

There are two callback functions related to the update of the process data that must be implemented to inform the host that the read process data has been received from the network or that it is time to update the write process data. An example is available in `example_app/appl_abcc_handler.c`.

- `ABCC_CbfUpdateWriteProcessData()` - Updates the current write process data. The data must be copied into the buffer before returning from the function.
- `ABCC_CbfNewReadPd()` - Called when new process data has been received from the network. The process data needs to be copied to the application ADI:s before returning from the function.

As seen below, in the example code, they both call on a service in the Application Data object to update the information. These functions works, in general, for any process data map, but they are also slow because of all considerations needed for the general case. For better performance, please consider writing application specific update functions.

```
void ABCC_CbfNewReadPd( void* pxReadPd )
{
    /*
    ** AD_UpdatePdReadData is a general function that updates all ADI:s according
    ** to current map.
    ** If the ADI mapping is fixed there is potential for doing that in a more
    ** optimized way, for example by using memcpy.
    */

    AD_UpdatePdReadData( pxReadPd );
}
BOOL ABCC_CbfUpdateWriteProcessData( void* pxWritePd )
{
    /*
    ** AD_UpdatePdWriteData is a general function that updates all ADI:s according
    ** to current map.
    ** If the ADI mapping is fixed there is potential for doing that in a more
    ** optimized way, for example by using memcpy.
    */

    return( AD_UpdatePdWriteData( pxWritePd ) );
}
```

## Event Handling

### Only 40-series.

In event mode, all events can be configured to be forwarded to the user via the `ABCC_CbfEvent ()` interface using the configuration defines below, located in the file `abcc_drv_cfg.h`.

```
#define ABCC_CFG_INT_ENABLE_MASK_PAR (ABP_INTMASK_RDPDIEN | ABP_INTMASK_RDMSGIEN)
#define ABCC_CFG_HANDLE_INT_IN_ISR_MASK (ABP_INTMASK_RDPDIEN)
```

The configuration above will enable read message and read process data interrupts, but only the read process data callbacks will be executed in interrupt context directly by the driver. The read message event will be forwarded to the application by calling the function `ABCC_CbfEvent ()`.

This will reduce the amount of work done in the ISR which causes jitter in the process data handling. Other configurations will of course be possible to set by the user, to increase performance for any event. At this point the user can trigger the handling of the event from any chosen context.



**Note:** if the messaging is fully event driven and messages are sent in an interrupt context, please consider implementing the critical section porting in `abcc_adapt/abcc_sw_port.h`. The critical section functions are described in `abcc_drv/inc/abcc_port.h`.

### Example of how the callback event handler can trigger a task to handle an event

```
void ABCC_CbfEvent ( UINT16 iEvents )
{
    if ( iEvents & ABCC_EVENT_RDMSGI )
    {
        ABCC_fRdMsgEvent = TRUE;
    }
}
```

The code above illustrates how a task (below) can be triggered by the driver event callback.

```
volatile BOOL ABCC_fRdMsgEvent = FALSE;
```

```
void Task ( void )
{
    ABCC_fRdMsgEvent = FALSE;


    while ( 1 )
    {
        if ( ABCC_fRdMsgEvent )
        {
            ABCC_fRdMsgEvent = FALSE;
            ABCC_TriggerReceiveMessage ();
        }
    }
}
```

This code depicts a task that handles receive message events.

## Handling Events in Interrupt Context

Only 40-series.


```
#define ABCC_CFG_INT_ENABLED ( TRUE )
#define ABCC_CFG_INT_ENABLE_MASK_PAR ( ABP_INTMASK_RDMSGIEN )
#define ABCC_CFG_HANDLE_INT_IN_ISR_MASK ( ABP_INTMASK_RDMSGIEN )
```

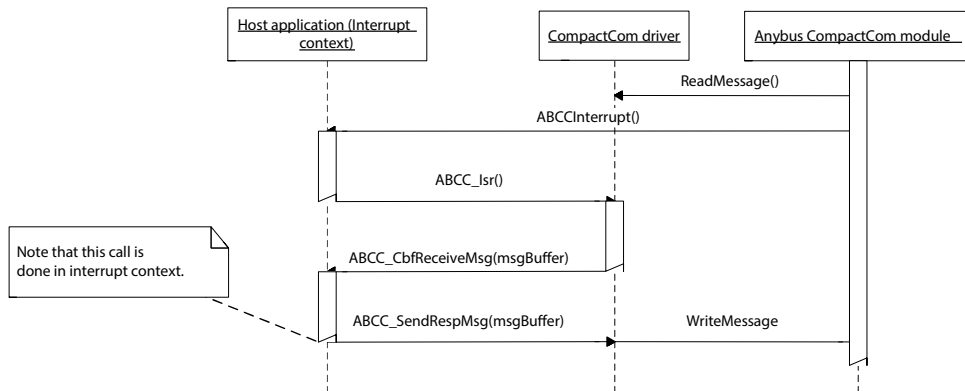

## Handling Events Using ABCC\_CbfEvent() Callback Function

Only 40-series.

```
#define ABCC_CFG_INT_ENABLED ( TRUE )
#define ABCC_CFG_INT_ENABLE_MASK_PAR ( ABP_INTMASK_RDMSGIEN )
#define ABCC_CFG_HANDLE_INT_IN_ISR_MASK ( 0 )
```

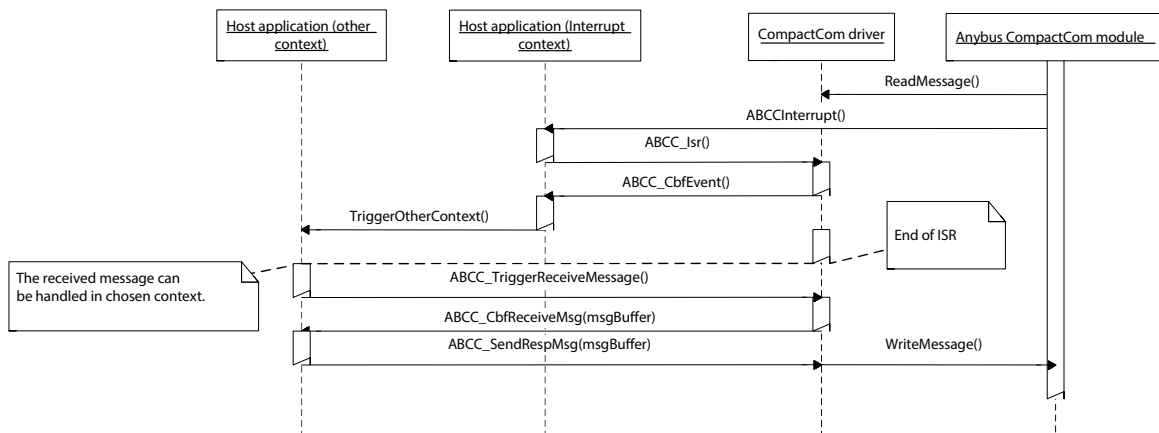

## Message Handling


The message handling interface functions are found and described in `abcc.h`.

To send a command message, the user must use the function `ABCC_GetCmdMsgBuffer()` to retrieve a message memory buffer. When receiving a response, the user must handle or copy needed data from the response buffer within the context of the response handler function.

The function `ABCC_GetCmdMsgBuffer()` can return a `NULL` pointer, if no more memory buffers are available. It is the responsibility of the user to resend the message later or treat it as a fatal error.

**Note:** the buffer resources are configured in the file `abcc_drv_cfg.h`.

**Note:** The CompactCom 40-series modules handle up to 1524 bytes of messaging data, whereas the 30-series only handle 255 bytes. The message header supporting 1524 byte messages differs from the 30-series format since the size field need to be 16 bits instead of 8 bits. The driver supports communication with 30-series modules as well as 40-series modules, but only supports the new message format in the driver API. If a 30-series module is used, the driver will internally convert to the legacy message format. The figure below shows the two message formats.

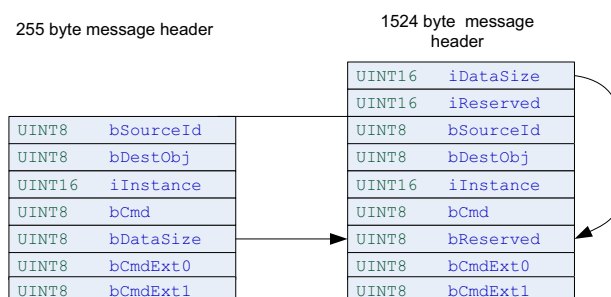

### Example 1: Sending a command and receiving a response


When sending the command the driver will connect the source id to the response function, in this case `appl_HandleResp()`.

The function `appl_HandleResp()` is called by the driver when a response with the matching source ID is received.

Note that the received message buffer does not need be freed, this is done internally in the driver after return from `appl_HandleResp()`.

```
void appl_HandleResp( ABP_MsgType* psMsg )
{
    HandleResponse(psMsg);
}
```

Sending a command to the CompactCom

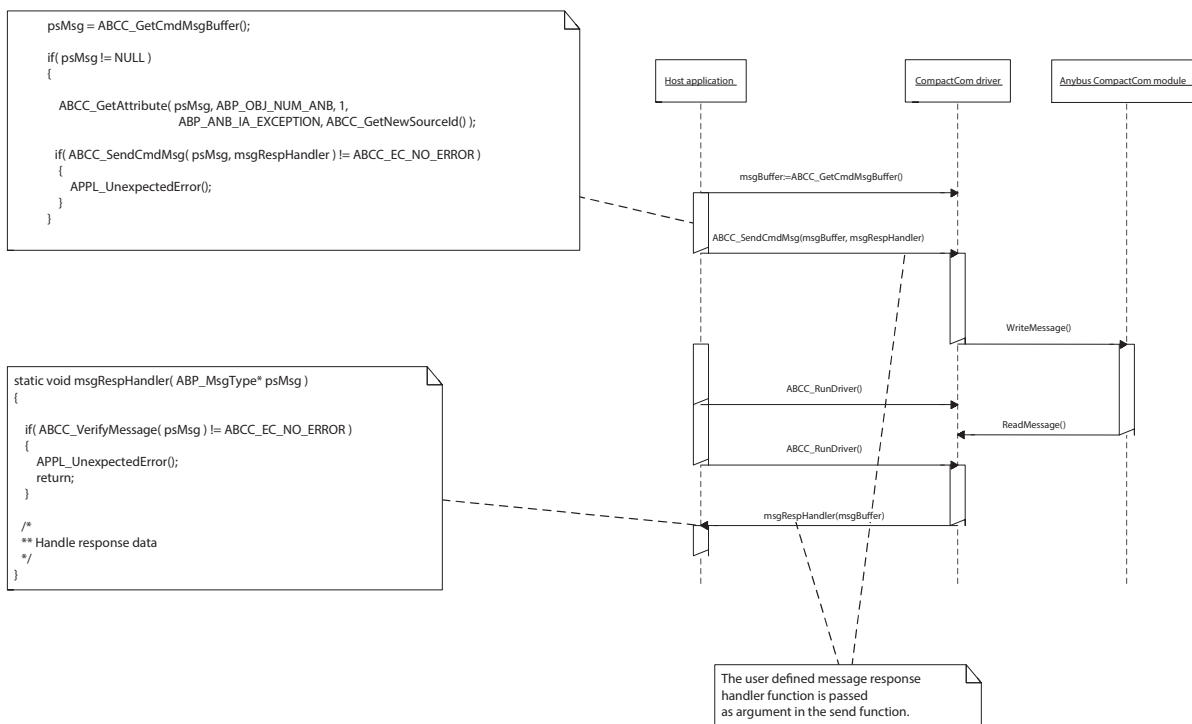


**Example 2: Receiving a command and sending a response**

**Note:** the received command buffer is reused for the response.

```
void appl_ProcessCmdMsg( ABP_MsgType* psNewMessage )
{
    /* Reuse command buffer for response */
    ABP_SetMsgResponse( psNewMessage, ABP_UINT8_SIZEOF );
    eErr = ABCC_SendRespMsg( psNewMessage );
}

```

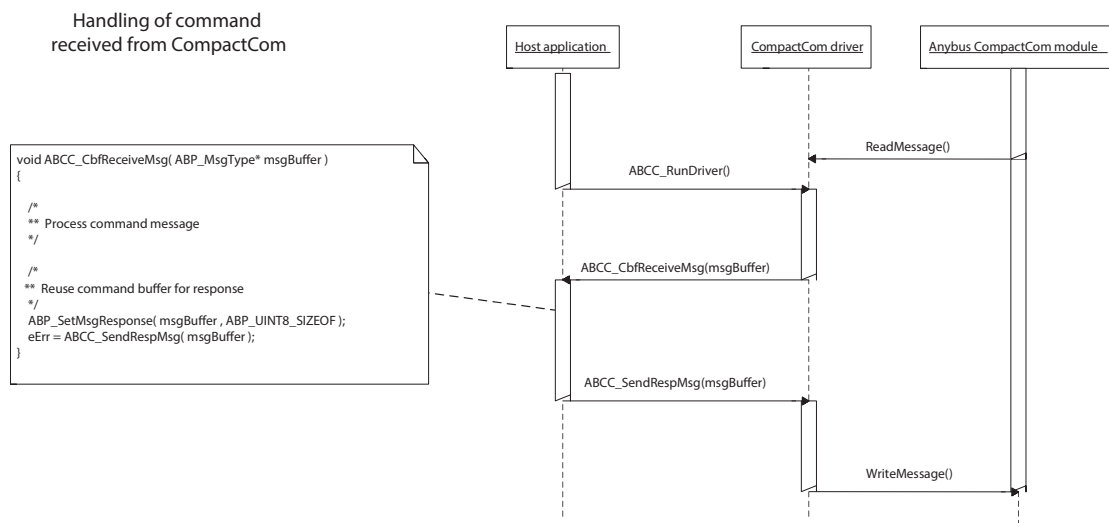

The driver uses non-blocking Anybus CompactCom message handling. This means that a state machine must be used to keep track of commands and responses.

In `example_app/appl_abcc_handler.c`, there are two examples of state machines that can be used as templates.

Example 1: When `ABCC_CbfUserInitReq()` is called, the IP address or node address is set before `ABCC_UserInitComplete()` is called.

Example 2: When the Anybus CompactCom device indicates exception state, the exception codes are read.

*Appendix A*

## A. Software Overview

### A.1 Files and Folders

Folders	Description
\$(ROOT)\abcc_abp	This folder includes all Anybus protocol files. It may be updated when new Anybus CompactCom software releases are available, but is otherwise read only. The included files are considered read only.
\$(ROOT)\abcc_drv\inc	.h files published to the application. The folder contains driver configuration files for the application as well as for the system dependent part of the driver. The included files are considered read only.
\$(ROOT)\abcc_drv\src	Anybus CompactCom driver implementation. The included files are considered read only.
\$(ROOT)\abcc_adapt	This folder includes all adaptation and configuration files for the driver and the objects. The files must be modified by the user to configure and adapt the driver and the example code.
\$(ROOT)\abcc_obj	This folder includes all Anybus host object implementations. The files may be modified by the user.
\$(ROOT)\example_app	Example application. The files may be modified by the user.

### A.2 Root Files

Folders	Description
\$(ROOT)\main.c	Main file for the example application.
\$(ROOT)\abcc_versions.h	Contains version defines for example code, driver and abp.

### A.3 CompactCom Driver Interface (Read Only)

File Name	Description
\abcc_drv\inclabcc.h	The public interface for the Anybus CompactCom Driver.
\abcc_drv\inclabcc_ad_if.h	Type definitions for ADI mapping.
\abcc_drv\inclabcc_cfg.h	Configuration parameters of the driver.
\abcc_drv\inclabcc_port.h	Definitions for porting the Anybus CompactCom to different platforms.
\abcc_drv\inclabcc_sys_adapt.h	Interface for target dependent functions common to all operating modes.
\abcc_drv\inclabcc_sys_adapt_spi.h	Interface for target dependent functions needed by abcc_spi_drv.c.
\abcc_drv\inclabcc_sys_adapt_par.h	Interface for target dependent functions needed by abcc_par_drv.c.
\abcc_drv\inclabcc_sys_adapt_ser.h	Interface for target dependent functions needed by abcc_ser_drv.c.



## A.4 Internal Driver Files (Read Only)

The contents of the files in the `/abcc_drv/src` folder should not be changed.

File Name	Description
<code>\abcc_drv\src\abcc_drv_if.h</code>	Interface for low level driver implementing the specific operating mode.
<code>\abcc_drv\src\abcc_debug_err.h</code> <code>\abcc_drv\src\abcc_debug_err.c</code>	Help macros for debugging and error reporting.
<code>\abcc_drv\src\abcc_link.c</code> <code>\abcc_drv\src\abcc_link.h</code>	Message buffer handling and message queue handling.
<code>\abcc_drv\src\abcc_mem.c</code> <code>\abcc_drv\src\abcc_mem.h</code>	Message resource memory support used by <code>abcc_link.c</code> .
<code>\abcc_drv\src\abcc_handler.h</code> <code>\abcc_drv\src\abcc_handler.c</code>	Anybus CompactCom handler implementation including handler parts that are independent of operating mode.
<code>\abcc_drv\src\abcc_setup.h</code> <code>\abcc_drv\src\abcc_setup.c</code>	Anybus CompactCom handler implementation including setup state machine.
<code>\abcc_drv\src\abcc_remap.c</code>	Anybus CompactCom handler implementation for remapping process data at runtime.
<code>\abcc_drv\src\abcc_timer.h</code> <code>\abcc_drv\src\abcc_timer.c</code>	Support for Anybus CompactCom driver timeout functionality.

### 8/16 Bit Parallel Event Specific Files

File Name	Description
<code>\abcc_drv\src\par\abcc_handler_par.c</code>	Implements <code>ABCC_RunDriver()</code> and <code>ABCC_ISR()</code> .
<code>\abcc_drv\src\par\abcc_par_drv.c</code>	Implements the driver for parallel operating mode.
<code>\abcc_drv\src\par\abcc_drv_par_if.h</code>	Implements the parallel driver interface.

### SPI Specific Files

File Name	Description
<code>\abcc_drv\src\par\abcc_handler_spi.c</code>	Implements <code>ABCC_RunDriver()</code> and <code>ABCC_ISR()</code> .
<code>\abcc_drv\src\spi\abcc_spi_drv.c</code>	Implements the driver for SPI operating mode.
<code>\abcc_drv\src\spi\abcc_drv_spi_if.h</code>	Implements the SPI driver interface.
<code>\abcc_drv\src\spi\abcc_crc32.c</code> <code>\abcc_drv\src\spi\abcc_crc32.h</code>	Crc32 implementation used by SPI.

### 8 Bit Parallel Ping/Pong Specific Files

File Name	Description
<code>\abcc_drv\src\par30\abcc_handler_par30.c</code>	Implements <code>ABCC_RunDriver()</code> and <code>ABCC_ISR()</code> .
<code>\abcc_drv\src\par30\abcc_par30_drv.c</code>	Implements the driver for parallel 30 ping/pong operating mode.
<code>\abcc_drv\src\par30\abcc_drv_par30_if.h</code>	Implements the parallel 30 ping/pong driver interface.

### Serial Specific Files

File Name	Description
<code>\abcc_drv\src\serial\abcc_handler_ser.c</code>	Implements <code>ABCC_RunDriver()</code> and <code>ABCC_ISR()</code> .
<code>\abcc_drv\src\serial\abcc_serial_drv.c</code>	Implements the driver for serial operating mode.
<code>\abcc_drv\src\serial\abcc_drv_ser_if.h</code>	Implements the serial driver interface.
<code>\abcc_drv\src\serial\abcc_crc16.c</code> <code>\abcc_drv\src\serial\abcc_crc16.h</code>	Crc16 implementation used by Serial.

## A.5 System Adaptation Files

File Name	Description
\abcc_adapt\abcc_drv_cfg.h	User configuration of the CompactCom driver. The configuration parameters are documented in the driver's public interface abcc_cfg.h.
\abcc_adapt\abcc_identification.h	User configuration to set the identification parameters of an CompactCom module.
\abcc_adapt\abcc_obj_cfg.h	User configuration of the Anybus object implementation.
\abcc_adapt\abcc_sw_port.c	Platform dependent macros and functions required by the CompactCom driver and Anybus object implementation.
\abcc_adapt\abcc_sw_port.h	Platform dependent macros and functions required by the CompactCom driver and Anybus object implementation. The description of the macros are found in abcc_port.h. The file abcc_port.h is found in the public CompactCom driver interface.
\abcc_adapt\abcc_sys_adapt.c	-
\abcc_adapt\abcc_td.h	Definition of CompactCom types.
\abcc_adapt\abcc_platform_cfg.h	Platform specific defines overriding defines in abcc_adapt\abcc_obj_cfg.h and abcc_adapt\abcc_identification.h.

## B. API

### B.1 API Documentation

The Anybus CompactCom API layer defines a common interface for all network applications to the Anybus CompactCom driver. The interface is found in `abcc.h`.

#### API Functions

Function	Description
<code>ABCC_StartDriver()</code>	Initiates the driver, enables interrupt, and sets the operating mode. When this function has been called the timer system can be started. Note! This function will NOT release the reset of the module.
<code>ABCC_IsReadyforCommunication()</code>	This function must be polled after the <code>ABCC_StartDriver()</code> until it returns the value TRUE. This indicates that the module is ready for communication and the CompactCom setup sequence is started.
<code>ABCC_ShutdownDriver()</code>	Stops the driver and puts it into SHUTDOWN state.
<code>ABCC_HWRReset()</code>	Module hardware reset. <code>ABCC_ShutdownDriver()</code> is called from this function. Note! This function will only set reset pin to low. It is the responsibility of the caller to make sure that the reset time (the time between the <code>ABCC_HWRReset()</code> and <code>ABCC_HWRReleaseReset()</code> calls) is long enough.
<code>ABCC_HWRReleaseReset()</code>	Releases the module reset.
<code>ABCC_RunTimerSystem()</code>	Handles all timers for the CompactCom driver. It is recommended to call this function on a regular basis from a timer interrupt. Without this function no timeout and watchdog functionality will work.
<code>ABCC_RunDriver()</code>	Drives the CompactCom driver sending and receiving mechanism. This main routine should be called cyclically during polling. TRUE: Driver is started and ready for communication. FALSE: Driver is stopped or is not started.
<code>ABCC_UserInitComplete()</code>	This function should be called by the application when the last response from the user specific setup has been received. This will end the CompactCom setup sequence and <code>ABCC_SETUP_COMPLETE</code> will be sent.
<code>ABCC_SendCmdMsg()</code>	Sends a command message to the module.
<code>ABCC_SendRespMsg()</code>	Sends a response message to the module.
<code>ABCC_SendRemapRespMsg()</code>	Sends a remap response to the module.
<code>ABCC_SetAppStatus()</code>	Sets the current application status, according to <code>ABP_AppStatusType</code> in <code>abp.h</code> .
<code>ABCC_GetCmdMsgBuffer()</code>	Allocates the command message buffer.
<code>ABCC_ReturnMsgBuffer()</code>	Frees the message buffer.
<code>ABCC_TakeMsgBufferOwnership()</code>	Takes the ownership of the message buffer
<code>ABCC_ModCap()</code>	Reads the module capability. This function is only supported by the CompactCom parallel operating mode.
<code>ABCC_LedStatus()</code>	Reads the LED status. Only supported in SPI and CompactCom parallel operating mode.
<code>ABCC_AnState()</code>	Reads the current Anybus state.

## API Event Related Functions

Function	Description
ABCC_ISR()	This function should be called from inside the CompactCom interrupt routine to acknowledge and handle received CompactCom events (triggered by the IRQ pin on the CompactCom application interface)
ABCC_TriggerRdPdUpdate()	Triggers a RdPd read.
ABCC_TriggerReceiveMessage()	Triggers a message receive read.
ABCC_TriggerWrPdUpdate()	Indicates that new process data from the application is available and will be sent to the CompactCom.
ABCC_TriggerAnbStatusUpdate()	Checks for Anybus status change.
ABCC_TriggerTransmitMessage()	Checks sending queue.

## API Callbacks

All these functions need to be implemented by the application.

Function	Description
ABCC_CbfAdiMappingReq()	The function is called when the driver is about to start the automatic process data mapping.  It returns mapping information for read and write PD.
ABCC_CbfUserInitReq()	The function is called to trigger a user specific setup during the module setup state.
ABCC_CbfUpdateWriteProcessData()	Updates the current write process data. The data must be copied into the buffer before returning from the function.
ABCC_CbfNewReadPd()	Called when new process data has been received. The process data needs to be copied to the application ADI:s before returning from the function.
ABCC_CbfReceiveMsg()	A message has been received from the module. This is the receive function for all received commands from the module.
ABCC_CbfWdTimeout()	The function is called when communication with the module has been lost.
ABCC_CbfWdTimeoutRecovered()	Indicates a recent CompactCom watchdog timeout but now the communication is working again.
ABCC_CbfRemapDone()	This callback is invoked when REMAP response is successfully sent to the module.
ABCC_CbfAnbStatusChanged()	This callback is invoked if the module changes status i.e. if Anybus state or supervision state is changed.
ABCC_CbfEvent()	Called for unhandled events.  Unhandled events are events enabled in ABCC_USER_INT_ENABLE_MASK but not present in ABCC_USER_HANDLE_IN_ABCC_ISR_MASK.
ABCC_CbfSync_Isr()	If sync is supported this function will be invoked at the sync event.

## Support Functions


Function	Description
ABCC_NetworkType()	Retrieves the network type.
ABCC_ModuleType()	Retrieves the module type.
ABCC_DataFormatType()	Retrieves the network endianness.
ABCC_ParameterSupport()	Retrieves the parameter support.
ABCC_GetOpmode()	Calls ABCC_SYS_GetOpmode() to read the operating mode from HW.
ABCC_GetAttribute()	Fills an CompactCom message with parameters to get an attribute.
ABCC_SetByteAttribute()	Fills an CompactCom message with parameters in order to set an attribute.
ABCC_VerifyMessage()	Verifies an CompactCom response message.
ABCC_GetDataTypeSize()	Returns the size of an ABP data type.

## C. Host Application State Machine

The application flow in the example code is maintained using the state machine described in the flow-chart below.

The function `APPL_HandleAbcc()`, called cyclically from the main loop, implements the state machine and is responsible for the execution of various tasks during each state.

The first time `APPL_HandleAbcc()` is called, state `APPL_INIT` is entered.

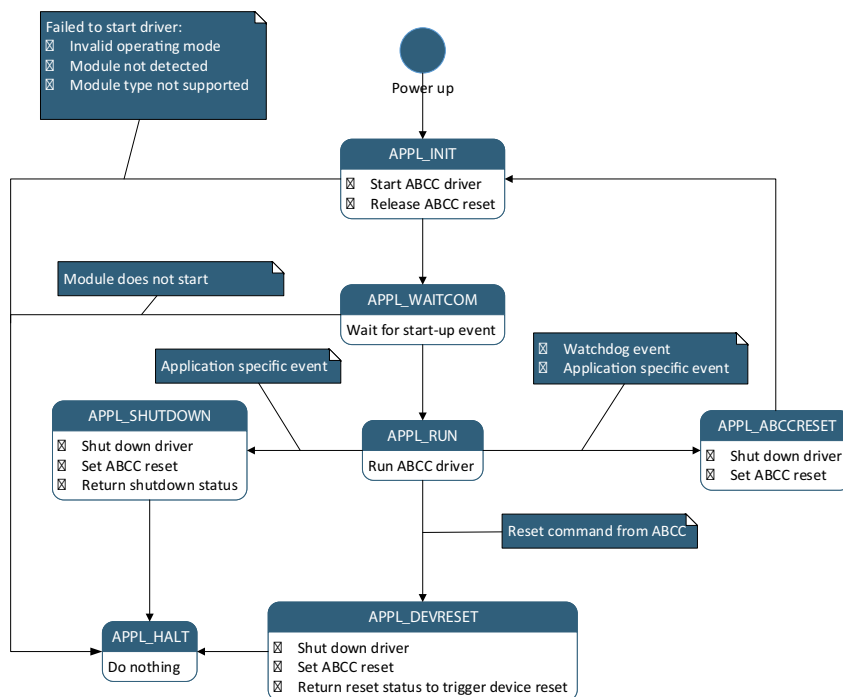

### APPL\_INIT

- Checks that an Anybus CompactCom device is detected.
- The Application Data object is initiated, using the desired ADI mapping. In this example, it is one of the three ADI mapping examples described in “Example Application” on page 30.
- `ABCC_StartDriver()` is called to initiate the driver.
- `ABCC_HwReleaseReset()` is called to release the Anybus CompactCom device reset.
- Sets state to `APPL_WAITCOM`.

### APPL\_WAITCOM

- Waits for the Anybus CompactCom device to signal that it is ready to communicate.
- Sets state to `APPL_RUN`.

## APPL\_RUN

- `ABCC_RunDriver()` is called to run the driver. Callbacks will be invoked for specific events. All callbacks used by the driver are named `ABCC_Cbf<x>()`. The required callbacks are all implemented in `appl_abcc_handler.c`.
- During startup the following events will be triggered by the driver (in the described order):
  - `ABCC_CbfStateChanged()` will be called when the Anybus CompactCom device has entered `ABP_ANB_STATE_SETUP`. If desired, set a breakpoint or use a debug function to indicate state changes.
  - `ABCC_CbfAdiMappingReq()` will be called when the CompactCom device is ready to send the default mapping command. The generic example code will ask the Application Data object for the configured default map.
  - `ABCC_CbfUserInitReq()` will be called when it is possible for the application to send commands to configure or read information to/from the CompactCom device. In the example code, the function triggers the user init state machine to start sending a command sequence to the CompactCom device. When the last message response is received, the function `ABCC_UserInitComplete()` is called to notify the driver that the user init sequence has ended. This will internally trigger the driver to send a `SETUP_COMPLETE` command to the CompactCom device. If no user init is needed, `ABCC_UserInitComplete()` can be called directly from `ABCC_CbfUserInitReq()`.
  - When setup is complete, the CompactCom device will enter state `ABP_ANB_STATE_NW_INIT`. This means that `ABCC_CbfStateChanged()` will be called. In this state a number of commands will be sent from the CompactCom device to the host application objects. All received commands will be handled in `ABCC_CbfReceiveMsg()`. The responses to the commands depend on which host objects that are implemented, and the configuration made in `abcc_identification.h` and `abcc_obj_cfg.h`. If desired, set a breakpoint in `ABCC_CfgReceiveMsg()` to indicate the commands that are sent and how they are handled.
  - When network initiation is done, the CompactCom device will enter state `ABP_ANB_STATE_WAIT_PROCESS`. Again, `ABCC_CbfStateChanged()` will be called by the driver. At this point, it is possible to set up an IO connection from the network.
  - When an IO connection is set up, the CompactCom will enter state `ABP_ANB_STATE_PROCESS_ACTIVE` (or, on some networks, `ABP_ANB_STATE_IDLE`). When process data is received from the CompactCom device, the `ABCC_CbfNewReadPd()` function is called. The example code then forwards the data to the Application Data object by calling `AD_UpdatePdReadData()`, to update the ADIs. The example code only loops data, so at the end of the function body, `ABCC_TriggerWrPdUpdate()` is called to update the write process data. The `ABCC_TriggerWrPdUpdate()` function triggers `ABCC_CbfUpdateWriteProcessData()`, which is called whenever the driver is ready to send new process data. `ABCC_TriggerWrPdUpdate()` should always be called when updated process data is available.
  - If state `ABP_ANB_STATE_EXCEPTION` is entered, the cause of the exception can be read from the CompactCom device by activating the exception read state machine. `RunExceptionSM()` will be called from state `APPL_RUN` when the CompactCom device is in state `ABP_ANB_STATE_EXCEPTION`.

- APPL\_Reset() is called to initiate a restart of the device. This will happen if the application host object receives a reset request from the CompactCom device. The CompactCom handler state machine will then enter state APPL\_ABCCRESET.
- APPL\_RestartAbcc() is, like APPL\_Reset(), used to initiate a restart of the device. If called, the CompactCom handler state machine will then enter state APPL\_ABCCRESET. (Currently this function is not used in the example code. It could be used instead of APPL\_Reset(), since it avoids power cycling.
- APPL\_Shutdown() is called to initiate a shutdown of the driver.

### **APPL\_SHUTDOWN**

- ABCC\_HWRReset() is called to reset the Anybus CompactCom device.
- Sets state to APPL\_HALT.

### **APPL\_ABCCRESET**

- ABCC\_HWRReset() is called to reset the Anybus CompactCom device.
- Sets state to APPL\_INIT.

### **APPL\_DEVRESET**

- ABCC\_HWRReset() is called to reset the Anybus CompactCom device.
- Sets state to APPL\_HALT.

The return value to the main loop (via the function call from APPL\_AbccHandler()) will indicate that the device should be reset.

### **APPL\_HALT**

No action.